



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET SL910. You'll find the answers to all your questions on the SIEMENS GIGASET SL910 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SIEMENS GIGASET SL910
User guide SIEMENS GIGASET SL910
Operating instructions SIEMENS GIGASET SL910
Instructions for use SIEMENS GIGASET SL910
Instruction manual SIEMENS GIGASET SL910



[You're reading an excerpt. Click here to read official SIEMENS GIGASET SL910 user guide](http://yourpdfguides.com/dref/4570164)
<http://yourpdfguides.com/dref/4570164>

Manual abstract:

.....
.....
.....
.....

.....
.....
.....
.....

.....
2 Getting started

.....
.....

.....
.....
.....
.....

.....
.....
.....

. 3 Option slider icons

.....
.....
.....
.....

.....
.....
.....
.....

. 14 Setting options

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

15 Using the telephone

.....
.....
.....
.....

.....
.....
.....

. 20 Operating the touchscreen .

.....
.....
.....
.....

.....
.....
.....
.....

.. 21 Making calls

.....
.....
.....

.....
.....
.....

.....
.....

.... 24 Directory .

.....

.....
.....
.....

.....
.....
.....

..... 27 SMS (text messages) .

.....
.....
.....

.....
.....
.....

.....
.....

... 29 Room monitor . .

.....

.....
.....
.....

.....
.....
.....

... 30 Calendar

.....
.....
.....

.....
.....
.....

.....
.....

.....
..... 31 Alarm

.....
.....
.....

.....
.....
.....

.....
.....

... 31 Bluetooth devices ...

.....
.....
.....

.....
.....
.....

32 Customer Service & Assistance

.....
.....

.....
.....

..... 33 Index

.....
.....
.....

.....
.....
.....

.....
.....

... @@@@Batteries that are visibly damaged must be replaced. Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your specific location e.g., doctor's surgery. If you use a medical device (e.g.

, a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for information on your Gigaset product, see "Technical specifications"). Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing. @@However, perfect function with all hearing aids cannot be guaranteed. @@If you require assistance, please contact the hearing aid supplier. The base and charger are not splashproof. @@@@It is also not possible to make emergency calls. Even emergency numbers cannot be dialled if the key/display lock is activated. Version 4.

1, 21.11.2007 2 el en Gigaset SL910 KURZ-BA System / GRC eng / A31008-M2300-T101-1-8U43 / starting.fm / 4/17/12 Getting started Getting started Checking the package contents u u u u u u u One Gigaset SL910 base One power adapter for the base One phone cable (flattened) One Gigaset SL910H handset One battery cover (rear cover for the handset) One battery One charger One power adapter for the charger One poster, one user guide and one CD.

Installing the base and charger The base and charging cradle are designed for use in dry rooms in a temperature range of +5°C to +45°C.

⚠ Set up the base on a level, non-slip surface at a central point in the building or mount the base on the wall (see page 4). Please note Pay attention to the range of the base. This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. The range is reduced when Eco Mode is activated. The phone's feet do not usually leave any marks on surfaces.

However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely

ruled out. Please note: u Never expose the telephone to the effects of heat sources, direct sunlight or other electrical devices. u Protect your Gigaset from moisture, dust, corrosive liquids and fumes. Version 4.1, 21.11.2007 el en 3 Gigaset SL910 KURZ-BA System / GRC eng / A31008-M2300-T101-1-8U43 / starting.fm / 4/17/12 Getting started Connecting the base with the phone network and the mains power supply 2 4 5 1 3 3 u Insert the phone cable (cable slightly flattened) into the lower connection socket u u u 1 at the rear of the base. Insert the power cable for the power adapter into the upper connection socket 2 at the rear of the base. Insert both cables into the appropriate cable channels 3 .

Connect the power adapter 4 and finally the telephone jack 5 . Please note: u The power adapter must always be connected, as the phone will not operate without a power supply. u Only use the power adapter and phone cord supplied. Pin connections on telephone cables can vary. Wall mounting the base (optional) Version 4.1, 21.11.2007 4 el en Gigaset SL910 KURZ-BA System / GRC eng / A31008-M2300-T101-1-8U43 / starting.fm / 4/17/12 Getting started Connecting the handset charger 2 4 1 3 u Connect the flat plug to the power adapter 1 . u Plug the power adapter into the plug socket 2 .

If you have to remove the plug from the charger again: u Disconnect the power adapter from the mains power supply. u Press the release button 3 and disconnect the plug 4 . Setting up the handset for use The handset's display and keys are covered with a protective film. Please remove the protective film!

Caution Please do not use any touchscreen styli to operate the handset! Do not use protective cover/film from other manufacturers. This can restrict operability of your handset.

Inserting the battery and closing the battery cover Caution Use only rechargeable batteries recommended by Gigaset Communications GmbH, as doing otherwise could result in significant health risks and personal injury. For example, the outer casing of the battery could be destroyed or the battery could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type. Version 4.1, 21.

11.2007 el en 5 Gigaset SL910 KURZ-BA System / GRC eng / A31008-M2300-T101-1-8U43 / starting.fm / 4/17/12 Getting started u First insert battery with the contact surface fac u Then press the battery downwards clicks into place. ing down 1 . 2 until it 2 1 u First, align the protrusions on the side of the bat u tery cover with the notches on the inside of the casing. Then press the cover until it clicks into place. To reopen the battery cover to replace the battery: u Insert your fingernail into the notch on the bottom of the battery cover and pull the battery cover upwards. u To remove the battery, insert your fingernail into the notch on the casing and pull the battery upwards. Charging the battery The battery is supplied with a partial charge. Please charge it completely before use.

u Charge the handset in the charger for 5 hours. 5h Please note The handset must only be placed in the designated charger. u The battery is also charged if the handset is connected via a USB connection to a PC with Please note a power supply of 500 mA. u The battery may heat up during charging. This is not dangerous. u After a time, the charge capacity of the battery will decrease for technical reasons.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET SL910 user guide](http://yourpdfguides.com/dref/4570164)
<http://yourpdfguides.com/dref/4570164>

Version 4.1, 21.11.2007 6 el en Gigaset SL910 KURZ-BA System / GRC eng / A31008-M2300-T101-1-8U43 / starting.

fm / 4/17/12 Getting started Registering the handset Handsets contained in the package have already been registered to the base. If, however, a handset has not been registered (display "Handset not registered to any base"), please register it manually. You must initiate registration on the base and on the handset:
1) On the base: ☒ Press and hold (for approx. 3 seconds) the registration/paging key. 2) On the handset (within 60 seconds): ☒ Press Register and if necessary, enter the system PIN of the base (default setting: 0000) and confirm with è.

Setting up the base and handset — installation wizard Once the battery has been inserted, the time and date symbols flash. The installation wizard starts automatically as soon as you touch one of the flashing symbols. It helps you to configure the following key settings on the handset and base. These keys are required for operation: u Time and date u Display language u Country in which the phone will be used u Your own area (dial code) L Time Welcome 00:00 Date M M M M M 01.07.

2011 Display Language If you do not want to configure the settings at this point: ☒ Touch the [ò Skip Settings] option at the bottom of the display. The handset then switches to idle status. You can configure the settings at a later stage using the Settings menu on your handset. If you want to configure the settings: ☒ Touch the ' icon next to the time to set the time. Deutsch Country Germany Area (Dial Code) (Not configured) ò Skip Settings è Save Setting
Version 4.1, 21.11.2007 el en 7 Gigaset SL910 KURZ-BA System / GRC eng / A31008-M2300-T101-1-8U43 / starting.fm / 4/17/12 Getting started L Time 22 23 58 59 Time ☒ Use the left-hand number wheel to select the cur☒☒☒ 12 hrs 00 01 02 Time Format : 00 01 01 24 hrs rent hour by touching the number wheel with a finger and moving it upwards or downwards. The number wheel will follow your movements.

Operate the right-hand number wheel in the same way to select the minutes. Specify whether you wish the time to be displayed in 12 hrs or 24 hrs mode. To do this, touch the corresponding area under Time Format. The current setting is highlighted. Touch the ' icon (at the top left of the display) to save the settings and return to the Welcome page. Comment: If you set the 12 hrs mode, am/pm is shown next to the number wheels. 2 Date 01.07.2011 Display Language M M

M Date ☒ Touch the ' icon next to Date to set the date. Deutsch Country L Date 24 25 Feb Mar ☒ Use the three number wheels to set the current date. The procedure is the same as for setting the time. 2014 2013 . 26. Apr 27 28 May Jun 2012 2011 2010 The current mode for displaying the date is displayed under Date Order (here: Day Month Year). If you want è Save Setting Version 4.

1, 21.11.2007 el en 11 Gigaset SL910 KURZ-BA System / GRC eng / A31008-M2300-T101-1-8U43 / starting.fm / 4/17/12 Getting started Once you have configured all the necessary settings, your handset switches to idle status. © , 06:00 £ Å Å Å < > Apr 26 Thursday Å Contacts ~ Call List Your phone is now ready for use.

Version 4.1, 21.11.2007 12 el en Gigaset SL910 KURZ-BA System / GRC eng / A31008-M2300-T101-1-8U43 / starting.fm / 4/17/12 Getting started What would you like to do next? After successfully setting up the phone, you can make calls straight away, customise your Gigaset according to your requirements or firstly familiarise yourself with the touch display (£ Using the telephone, page 20). Creating your own idle display page Use your configurable idle display page to collate important functions and phone numbers that you want to start or dial via the one touch display (£ attached poster). Setting ringtones and silent alert Assign specific tunes to internal and extereypad with R/P Keypad w. Letters ° Language + Location Display Language Country Area (Dial Code) É Handsets + Base This Handset Register De-register Rename Registered Handsets (List of registered handsets) Connected to Base Base 1 : Base 4 Best Base
Version 4.1, 21.11.

2007 16 el en Gigaset SL910 KURZ-BA System / GRC eng / A31008-M2300-T101-1-8U43 / menutree.fm / 4/17/12 Setting options Main menu Settings Ê System Submenu Current setting Eco Mode Additional setting options Eco Mode Eco Mode+ Repeater Mode Security Check System PIN Resets Handset Reset Base Reset Clean-up List Appointments All Past Appointments Calls Missed Calls Accepted Calls Outgoing Calls Messages Text Messages Answer Machine Contacts Local Network IP Address Type Static Dynamic IP Address Subnet Mask Default Gateway Preferred DNS server Firmware Update Automatic Check Update Firmware Version 4.1, 21.11.2007 el en 17 Gigaset SL910 KURZ-BA System / GRC eng / A31008-M2300-T101-1-8U43 / menutree.fm / 4/17/12 Setting options Main menu Settings Submenu Current setting Automatic Recall Withhold Number Call Waiting Call Divert When Busy All Calls No Answer Divert to Call Protection Unknown Call Rejection Ringback Additional setting options ä Select Services Cancel « Telephony Auto Answer Listening In Access Code Use Calls from Call Lists All Calls Never Dialling Mode Tone Pulse Recall 80 ms/.../800 ms µ SMS Service Centres Active Send Centre Service Centr. 1 : Service Centr.

4 Own Device Known Devices ³ Bluetooth Activation Devices found (only if Activation = on) Device Name Announcement Version 4.1, 21.11.2007 Advisory Message Time Control 18 el en Gigaset SL910 KURZ-BA System / GRC eng / A31008-M2300-T101-1-8U43 / menutree.fm / 4/17/12 Setting options Main menu Settings Submenu Current setting Announcement from: Advisory Message from: On/Off Access Number Additional setting options Only if Time Control is switched on ¶ Network Mailbox Please note This quick user guide only describes a small proportion of your telephone's functions.

You will find an extensive description of all functions contained in the menu overview in the detailed user guide for your Gigaset SL910 both on the enclosed CD and on the Internet at www.gigaset.com. Version 4.1, 21.

11.2007 el en 19 Gigaset SL910 KURZ-BA System / GRC eng / A31008-M2300-T101-1-8U43 / telephony.fm / 4/17/12 Using the telephone Using the telephone Activating/deactivating the handset ☒ Press and hold the end call key a to deactivate the handset. You will hear a melody. ☒ Press and hold the end call key a again to reactivate the handset. Returning to idle status ☒ Briefly press the end call key a. ☒ If you do not press any key and do not touch the display, the display automatically reverts to idle status after approximately three minutes. Activating/deactivating key and display lock The key and display lock prevents the phone being operated unintentionally.



[You're reading an excerpt. Click here to read official SIEMENS](#)

[GIGASET SL910 user guide](#)

<http://yourpdfguides.com/dref/4570164>

☒ Press and hold the v menu key to activate or deactivate the lock. When you activate the key and display lock, the message Keys and display locked is displayed briefly.

The display backlight switches itself off. You can accept the incoming call, despite the lock. The key and display locks activate again once the call has finished. u When the keypad lock is active, you cannot call emergency numbers. u The display is automatically locked with the aid of proximity sensor if you hold the hand- Please note set to your ear (display backlight disappears). This lock is deactivated again when you remove the handset from your ear. The sensor is located on the right next to the earpiece. If you cover it accidentally with your finger during a call, the display will also be locked. Version 4.1, 21.11.2007 20 el en Gigaset SL910 KURZ-BA System / GRC eng / A31008-M2300-T101-1-8U43 / telefony.fm / 4/17/12 Operating the touchscreen Operating the touchscreen You operate the Gigaset SL910H handset mainly via the display. Icons, list entries, buttons and selection areas shown on the display are sensitive areas. You can set up and activate functions, enter or dial phone numbers and navigate between the various display screens (pages) by touching these areas and dragging them across the display.

Selecting functions/list entries Touch a list entry or the corresponding icon to select the list item (directory, submenu, call lists) or to start a function.

Scrolling within lists (vertical scrolling) ☒ Drag the display in a vertical direction. If there are more list entries than can be displayed all at once, a drop shadow at the bottom or top edge of the display indicates the direction in which you have to scroll to view more of the list. As soon as you scroll in a list, a scroll bar appears on the right side of the display. This shows the size and position of the visible section of the list.

Options, option slider Many displays have an option slider at the bottom. This displays all the actions that you can apply in the current context (£ page 14).

There are single-row (e.g., in the directory) and double-row option sliders (e.g., during an external call). ☒ Touch an option to execute the corresponding action. If there are more options available than can be displayed in an option slider at the same time, these additional options are provided as follows: u With a one-line option slider, the arrow on the right and/or left next to the options (see image) indicates that further options are available. ☒ Touch the option slider and drag it in the direction of the arrow in order to move the additional options into the display (scroll horizontally).

< Version 4.1, 21.11.2007 el en l New Entry Y First Name : Copy List > < Y First Name > : Copy List X Memory > 21 Gigaset SL910 KURZ-BA System / GRC eng / A31008-M2300-T101-1-8U43 / telefony.fm / 4/17/12 Operating the touchscreen u With a two-row option slider, the icon below the option slider indicates that further options are available. ☒ Touch to display a further option slider that conceals the original option slider. @@@@The current setting appears in orange. ☒ To change it, briefly touch the selection field you require. The ' icon indicates that another sub-menu is available.

@@@Briefly touch \$: The last character you entered is deleted.

@@@☒ More...: Enter further special characters. ☒ \$abc\$: Return to text entry.

@@@Touch the required character. @@The options are: - Latin (default) character set with QWERTZ keyboard layout (central Europe), QUERTY (American default) and AZERTY (French-speaking area) - Greek character set - Cyrillic character set Making calls Making an external call ☒ Call up the dial page, enter the number and briefly press c. Or: You can cancel dialling by pressing a. ☒ Press and hold c; enter number. Dialling with the redial list ☒ Briefly press c to open the redial list.

☒ Briefly touch a list entry. Dialling from a message list ☒ Call-up messages page. ☒ Open the desired list. ☒ Briefly touch a list entry. ☒ Open the directory: On the dial page, touch [α Contacts]. You have the following options: ☒ Press c. The default number of the entry marked with the green dot is dialled. Or: ☒ Touch the name in the entry. The default number of the entry is dialled. Or: ☒ Touch ' next to the entry and then touch the required number in the detail view.

Dialling with the directory Version 4.1, 21.11.2007 24 el en Gigaset SL910 KURZ-BA System / GRC eng / A31008-M2300-T101-1-8U43 / telefony.fm / 4/17/12 Making calls Making internal calls Internal calls to other handsets registered to the same base are free of charge. ☒ Open the dial page. ☒ Touch [† Internal]. ☒ If necessary, select the handset from the list or touch All Handsets (group call). Accepting a call ☒ Press c. Or: ☒ If Auto Answer is activated, remove the handset from the charger.

Speaker If you are going to let someone listen in, you should tell the other party that this is happening. Activating while dialling ☒ Enter the number, press c twice. Switching between earpiece and speaker mode During a call, when establishing the connection: ☒ Press c or touch [† Speaker]. Placing the handset in the charger during a call: ☒ Press and hold c while placing the handset in the charger and hold for a further 2 seconds. Activating/deactivating the microphone (muting) If you turn the microphone off during a call, your caller can no longer hear you.

☒ To activate/deactivate the microphone, touch [- Mute]. Version 4.1, 21.11.2007 el en 25 Gigaset SL910 KURZ-BA System / GRC eng / A31008-M2300-T101-1-8U43 / telefony.

fm / 4/17/12 Making calls Using provider-specific functions (network services) You have to request these services from your network provider (there may be additional charges). @@@@Add caller picture: ☒ Touch l. @@@☒ Touch [è Save]. @@@☒ If necessary, touch the corresponding field. ☒ Enter/edit name/number. ☒ Confirm with è. @@@☒ Touch [÷ No Ringtone]/[† No Birthday]. @@@☒ Touch [^ No Picture]. @@@@You have the following options: - Create new entry (£ page 27): ☒ Touch [d New Entry]. The number is copied as the first number of the entry with number type Home.

- Add a number to an existing entry: ☒ Open the detail view for the entry. ☒ Touch Add . Number is entered with number type Home. Or: ☒ Select the number you want to overwrite. ☒ Touch Yes. Configuring QuickDial/QuickDial shortcuts You have two options: u Create, for each number, a symbol on the configurable (own) page. u Transfer a number to the QuickDial shortcuts. Creating a QuickDial icon on the configurable page ☒ Open the configurable page and start the configuration (press and hold the display).



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/4570164)

[GIGASET SL910 user guide](http://yourpdfguides.com/dref/4570164)

<http://yourpdfguides.com/dref/4570164>

☞ Drag icon 3 from the selection bar onto the page. ☞ Select a directory entry.

☞ Where an entry has several numbers, the detail view will open: select telephone number. An icon for QuickDial is created on the configurable page. The number is not entered into the QuickDial shortcuts. Dial number: ☞ Touch the QuickDial shortcut icon on the configurable page. Delete QuickDial: ☞ In configuration mode, drag the QuickDial icon to be deleted into the selection bar.

The directory entry does not change. Transferring the telephone number to the QuickDial shortcuts The QuickDial shortcuts can contain a maximum of 7 entries.

☞ Switch to the dial page and touch [☞ QuickDial]. ☞ Touch [d New Entry]. ☞ Select a directory entry.

☞ Where an entry has several numbers: open the detail view and select telephone number. Dial number: ☞ Open the dial page and touch [☞ QuickDial].

☞ Select an entry. ☞ Press c. 28 el en Version 4.1, 21.11.2007 Gigaset SL910 KURZ-BA System / GRC eng / A31008-M2300-T101-1-8U43 / applications.fm / 4/17/12 SMS (text messages) Delete entries: ☞ Touch [☞ Delete]. ☞ Touch all the entries to be deleted in sequence and then [☞ Delete].

Please note If you edit/delete the number in the directory, the QuickDial shortcut number will also be edited/deleted on the configurable page or from the QuickDial shortcuts. SMS (text messages) Your device is supplied ready for you to send text messages immediately. Prerequisites: u Your network provider supports SMS within the fixed line network. u Calling Line Identification is enabled. u To receive SMS messages, you must be registered with your network provider. This usually occurs automatically when you send your first text message. Writing and sending text messages Your system can send a linked SMS (made up of up to four individual SMS messages) as one message. Write SMS: ☞ Menu key v. ☞ [. Write Text Message]. ☞ Touch the To field.

☞ Enter the recipient's number with area code. ☞ Confirm with è. ☞ Touch the Message field. ☞ Enter the SMS text. ☞ Confirm with è.

Send SMS: ☞ Touch [. ☞ Send]. u If the SMS text cannot be displayed in full, you can scroll up and down within the text. @@@@☞ Touch the . symbol.

☞ Touch ' next to the text message entry. @@- [N Edit]: Edit the SMS text and return it to the sender.

- [☞ Delete]: Delete the SMS. - Press c: Call sender of the SMS. @@@@☞ Menu key v. ☞ Menu page Settings. @@☞ Enter the phone number of the SMS service centre. ☞ Confirm with è. @@4). @@If, in this case, you enter a 0900 number for the SMS service centre, you will not be able to send text messages from your phone. Room monitor When the room monitor is switched on, the stored (internal or external) destination number is called as soon as a defined noise level is exceeded in the vicinity of the handset. Incoming calls are signalled only via the display, the lighting is reduced to 50%.

Vibration alarm, ringtones, advisory tones and paging are switched off. u Always check the function when switching on (noise sensitivity, connection to an external number). Please note that the room monitor is only activated 20 seconds after being switched on. u Place the handset in the charger so that the front with the microphone is facing the baby and the distance between the handset and the baby is no more than 1 to 2 metres. u No answering machine may be activated at the destination number. Version 4.1, 21.11.2007 Switch on room monitor: ☞ Menu key v. ☞ [☞ Room Monitor]☞ Touch the key on the right. Accept alarm call: ☞ On the destination phone/handset of the alarm call, press the pick-up key c or pick up the receiver. Cancel alarm call: ☞ Press a. Switch off room monitor: ☞ On the handset on which the room monitor is activated, touch the key on the left. and the destination for the room monitor call (External or Internal). Touch ' next to Number.

☞ Enter the destination number or select the internal number. ☞ Confirm with è. ☞ Touch [è Save]. ☞ Menu key v. ☞ In [☞ Room Monitor] touch [N Edit].

☞ Select the sensitivity (High or Low) Changing the settings: 30 el en Gigaset SL910 KURZ-BA System / GRC eng / A31008-M2300-T101-1-8U43 / applications.fm / 4/17/12 Calendar Calendar You can remind yourself of up to 100 appointments. Birthdays saved in the directory are transferred to the calendar. The current day is highlighted in the calendar. Days with appointments are marked with a coloured bar. Saving appointments to the calendar Prerequisite: the date and time have already been set. ☞ Menu key v. ☞ [] Calendar]. ☞ Touch è / è to set the month. ☞ Touch a day and then [â New].

☞ Enter the name, the time of the appointment and the reminder. ☞ Touch q / " next to Sound to switch the audible signal off and on. ☞ Touch [è Save]. Setting the tones and volumes of the reminder signal Signal. ☞ Menu key v. ☞ Menu page Settings. ☞ [ì Audio Settings]☞ Touch ' next to Reminder ☞ Set the volume and melody. ☞ Save and go back with '. Alarm Prerequisite: the date and time have already been set. ☞ Open the status page.

☞ Touch Û Alarm. ☞ Touch [N Edit] to change the settings for the alarm. ☞ Set the hour and minute for the wake-up time. ☞ Touch the days of the week on which the alarm should ring (orange = selected). ☞ Touch ' next to Ringtone.

☞ Select a ringtone for the alarm call. ☞ Save and go back with '. ☞ Touch the key to switch the alarm on and off. ☞ Touch [è Save]. Deactivating the wake-up call/repeating after a pause (snooze mode) Prerequisite: A wake-up call sounds on the handset.

☞ Deactivate: Touch Off. ☞ Snooze mode: Touch Snooze. The wake-up call is repeated after 5 minutes. After the second repetition, the wake-up call is deactivated completely. Version 4.1, 21.11.2007 el en 31 Gigaset SL910 KURZ-BA System / GRC eng / A31008-M2300-T101-1-8U43 / applications.fm / 4/17/12

Bluetooth devices ECO DECT – Reducing transmission power (radiation) On delivery, the device is set to maximum range. This guarantees optimised wireless management.

You can reduce the transmission power further as follows: Shorten range (Eco Mode) – Reduces the transmission power by up to 80% Completely switch off the base wireless signals in idle status (Eco Mode+) wireless transmission switched off). ☞ Open the status page. ☞ Use the key next to Eco Mode to switch the function on/off. ☞ Open the status page. ☞ Use the key next to Eco Mode+ to switch the function on/off (on = Bluetooth devices Up to 5 data devices (PC, PDA, mobile phone) and one Bluetooth headset can be registered on the handset.



[You're reading an excerpt. Click here to read official SIEMENS](#)

[GIGASET SL910 user guide](#)

<http://yourpdfguides.com/dref/4570164>

The distance to the Bluetooth device should not exceed 10 m. Touch Open the status page. Touch Bluetooth. The Bluetooth page (with image) is displayed. Finding and trusting Bluetooth devices The search starts as soon as the Bluetooth page is opened and Bluetooth has been activated.

Touch Touch ' next to Devices found. Select device. Touch Touch [y Trust Device]. If necessary, enter the PIN of the device. Confirm with è.

L Own Device Bluetooth Anna's SL910H Known Devices M M on Headset 1 Activation Managing known (trusted) devices Touch ' next to Known Devices. Only displayed if Bluetooth is active You can: De-register (delete) devices: Touch [ü Delete]. Touch ' for each device to be de-registered. Touch [ü Delete]. Confirm with Yes.

Change the name of a device: Select device. Enter/change name. Confirm with è. Devices found Headset 2 Mobile 1 M Rejecting/accepting an unregistered Bluetooth device An unregistered Bluetooth device is trying to establish a connection (bonding). Reject: Touch ' or press a. Accept: Enter the PIN of the device. Confirm with è. - Add device to the Known Devices list: Touch Yes. - Temporarily use device: Touch No. Changing the Bluetooth name of the handset Version 4.

1, 21.11.2007 Touch ' next to Own Device. Change name and confirm with è. 32 el en Gigaset SL910 KURZ-BA System / GRC eng / A31008-M2300-T101-1-8U43 / appendix.fn / 4/17/12 Customer Service & Assistance Customer Service & Assistance You have questions? As a Gigaset customer, you can take advantage of our comprehensive service offerings. You can find help quickly in this User Manual and in the service pages of our Gigaset online portal. Please register your phone right after purchase on www.gigaset.com/gr/service thus enabling us to provide you even with better service in case of questions or in case of a warranty claim.

Your personal user account enables you to directly contact our customer service by email. @@@@ For calls from mobile phone networks, other prices may apply.) Please note that if the Gigaset product is not sold by authorised dealers in the national territory the product may not be fully compatible with the national telephone network. It is clearly specified on the box near the CE mark for which country/countries the equipment has been developed. If the equipment is used in a manner inconsistent with this advice or with the instructions of the manual and on the product itself, this may have implications on the conditions for warranty or guarantee claims (repair or exchange of product).

In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased. Version 4.1, 21.11.2007 el en 33 Gigaset SL910 KURZ-BA System / GRC eng / A31008-M2300-T101-1-8U43 / appendix.

fn / 4/17/12 Customer Service & Assistance Authorisation This device is intended for analogue phone lines in the Greek telephone net. Country-specific requirements have been taken into consideration. @@@@ This Guarantee shall not extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee. The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident. Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications. This Guarantee shall apply to new devices purchased in the European Union.

The Guarantee is issued by Gigaset Communications Austria GmbH, Businesspark Marximum Objekt 2 / 3.Stock, Modecenterstraße 17, 1110 Vienna, Austria. Any claims that differ from or extend beyond these mentioned in this manufacturer's warranty shall be excluded, except from cases expressly specified in the applicable law. (In no event shall Gigaset Communications be liable for any loss of business, profits or data, additional software loaded by the customer or other information. The customer shall also bear the responsibility for the creation of backup copies of their files. The limitation of liability shall not apply if and to the extent liability is mandatory under the applicable law, e.g. 34 el en Version 4.1, 21.11.

2007 Gigaset SL910 KURZ-BA System / GRC eng / A31008-M2300-T101-1-8U43 / appendix.fn / 4/17/12 Customer Service & Assistance according to product liability law or in the event of intentional misconduct, severe negligence, personal injury, damage to parts of the human body or to personal health, or in case of violations of conventional obligations. However, the claims for damages related to violation of conventional obligations shall be limited to predictable damages, representative of such conventions, as long as there is no intention or severe negligence, personal injury, damage to parts of the human body or to personal health, according to the product liability law.) The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee. Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.

The above provisions do not imply a change in the burden of proof to the detriment of the customer. To invoke this Guarantee, please contact the Gigaset Communications telephone service. The relevant number is to be found in the accompanying user guide. Version 4.1, 21.

11.2007 el en 35 Gigaset SL910 KURZ-BA System / GRC eng / A31008-M2300-T101-1-8U43 / SL910-QUG-Step2SIX.fn / 4/17/12 Index Index A
Activating/deactivating Bluetooth

.
.
... 32 function . .
.
.
.
.
... 22 room monitor. . . .
.
.
.
... 30 Alarm .
.
.
.
.
.
... 31 Alarm call
.
.

.....	31 Area code - prefix
.....
.....
.....	11 Arrow in option slider
.....
.....	21 Authorisation ..
.....
.....
.....	34 Auto answer ..
.....
.....
.....	18, 25 B Back function
.....
.....
.....
.....	22 Base connecting to power/fixed line network
.....
.....
.....	4 setting
.....
.....
.....
.....	7 setting up
.....
.....
.....	3 wall mounting
.....
.....
.....	4 Battery charging
.....
.....
.....	6 inserting ..
.....
.....
.....	5 Birthday
.....
.....
.....	27 saving to directory
.....
.....
.....	27 Bluetooth activating
.....
.....
.....	32 changing device name
.....
.....
.....	32 known devices
.....
.....
.....	32 registering device ..



[You're reading an excerpt. Click here to read official SIEMENS
GIGASET SL910 user guide
http://yourpdfguides.com/dref/4570164](http://yourpdfguides.com/dref/4570164)

.....	
.....	
.....	
. 32 rejecting device	
.....	
.. 32 trusted devices ...	
.....	
.....	
... 32 Button	
.....	
.....	
.....	
.... 22 Changing device name (Bluetooth)	32 Changing the settings .
.....	
.....	
..... 22 Character set changing	
.....	
.....	
.....	
... 24 Cyrillic	
.....	
.....	
.....	
.. 23 Greek	
.....	
.....	
.....	
.. 23 keypad layout	
.....	
.....	
.... 24 Charger (handset) connecting .	
.....	
.....	
.....	
5 setting up	
.....	
.....	
..... 3 Conference ...	
.....	
.....	
.....	
.... 26 Configurable page	
.....	
.....	
.... 28 Configuring QuickDial	
.....	
. 28 Connecting the phone cable	
.....	
... 4 Connecting the power cable	
.....	
..... 4 Consultation call	
.....	
.....	
..... 26 Correcting incorrect entries ...	
..... 23 Correction of incorrect entries .	
.....	

.	23	Customer Care
.
.	33	Customer Service & Assistance
.
.	33	D Default number
.
.	24, 27	Deleting directory entry
.
.	27	QuickDial
.
.
.	28	Deleting (text message)
.
.	29	Destination number (room monitor)
.	30	Device changing name (Bluetooth)
.
.	32	registering (Bluetooth)
.
.	32	rejecting (Bluetooth)
.
.	32	trusting (Bluetooth)
.
.	32	Dial page (idle display)
.
.	24	Dialling using the messages list
.
.	24	using the redial list
.
.	24	with directory
.
.	24	with selection field
.
.
.	24	Directory
.
.
.	27	copying number
.
.	28	creating entry
.
.
.	27	deleting entry
.
.
.	27	managing entries
.
.	27	opening
.
.

.... 24, 27 saving birthdays

.....

.....

.... 27 saving entry

.....

.....

... 27 sending entry/list to handset .

..... 28 sending to handset ...

.....

.....

28 C Calendar

.....

.....

.... 31 Call accepting .

.....

.....

.....

25 anonymous

.....

.....

..... 26 diverting

.....

.....

.....

.. 26 external

.....

.....

.....

24 internal

.....

.....

..... 25 Call swapping ..

.....

.....

.....

... 26 Calling external

.....

.....

.....

. 24 internal

.....

.....

.... 25 Calling Line Identification .

.....

... 26 36 Version 4.1, 21.11.2007 el en Gigaset SL910 KURZ-BA System / GRC eng / A31008-M2300-T101-1-8U43 / SL910-QUG-Step2SIX.fm / 4/17/12

Index Display lock automatic ...

.....

.....

.....

... 20 switching on/off

.....

.....

... 20 Drag horizontal

.....	
.....	
.... 21 vertical .	
.....	
.....	
.....	
... 21 K Key lock activating/deactivating ..	
.....	
.. 20 automatic	
.....	
.....	
..... 20 Keypad layout ..	
.....	
.....	
.....	
.. 24 Keys end call/end key	
.....	
..... s. Poster menu key ..	
.....	
.....	
.....	
s. Poster talk key	
.....	
.....	
..... s. Poster E Earpiece mode	
.....	
.....	
.....	
25 ECO DECT	
.....	
.....	
... 32 Eco mode (reduce range) ..	
.....	
.. 32 Eco mode + (switching off wireless module)	
.....	
.....	
..... 32 End call/end key ..	
.....	
.....	
s. Poster Entering diacritical characters ...	
..... 23 Entering special characters ...	
.....	
23 Entering special letters	
.....	
..... 23 Entering text	
.....	
.....	
.. 23 Entering umlauts	
.....	
.....	
.... 23 Entry in the directory .	
.....	
.....	
.. 27 L List known devices (Bluetooth)	
... 32 scrolling in ..	

.....
.....
..... 21 select entry ..
.....
.....
.....
... 21 SMS incoming list
.....
.....
.. 29 Lock automatic
.....
.....
... 20 switching on/off ..
.....
..... 20 Lower/upper case ..
.....
.....
..... 23 F Function activating/deactivating .
.....
..... 22 selecting ..
.....
.....
.....
21 M Main menu settings
.....
..... 15 Making calls accepting a call .
.....
.....
.....
25 external
.....
.....
... 24 internal ..
.....
.....
.. 25 Making internal calls
.....
..... 25 Medical equipment
.....
.....
..... 2 Menu key
.....
.....
... s. Poster Menu settings .
.....
.....
... 15 Messages list. .
.....
.....
..... 24 Mounting the base on the wall .
.....
..... 4 Muting the handset .
.....

..... 25 G Getting started .
.....
.....
.....
... 3 Guarantee Certificate
.....
.....
. 34 H Handset activating/deactivating
..... 20 connecting charger
.....
.....
... 5 idle status
.....
.....
. 12, 20 muting
.....
.....
.....
25 registering.
.....
.....
.. 7 setting ...
.....
.....
.....
.. 7 setting up ...
.....
.....
..... 5 using room monitor .
.....
.....
..... 30 Hearing aids
.....
.....
.....
... 2 N Network services, provider-specific 26 Number as destination for room monitor ..
..... 30 copying to directory
.....
.....
. 28 saving in the directory
..... 27 Numbers entering
.....
.....
..... 23 I Icons option slider
.....
.....
..... 14 Idle status handset ..
.....
.....
.....
.....
..s. Poster returning to
.....
..... s.

	Poster, 20 Incoming message list (SMS)

	. 29 Installation wizard

	... 7 Internal call . .

	25 el en O Opening the submenu.

 23 Opening/closing the battery cover . . .

	... 5 Operating the touchscreen.

. 21	Version 4.1, 21.11.2007 37 Gigaset SL910 KURZ-BA System / GRC eng / A31008-M2300-T101-1-8U43 / SL910-QUG-Step2SIX. fm / 4/17/12 Index Option slider

	. 21 icons

	.. 14 showing/hiding . . .

 22 Options . .

 21 Overview setting options . .

 15 telephone and operation .

.....s.	Poster Setting the display language . . .

	... 7 Setting the time .

	... 7 Setting up base . .

	3 handset

	... 5 Settings menu .

 15 SMS . .

	... 29 active send . . .

.....	
.....	30 incoming list . . .
.....
.....
.....
.....	29 receiving
.....
.....
.....	29 sending
.....
.....
.....	29 writing
.....
.....
.....	29 SMS centre changing number
.....
.....	30 setting
.....
.....
.....	30 Snooze mode (alarm)
.....
.....
.....	31 Speaker
.....
.....
.....	25 Switching microphone (handset) on/off
.....
.....
.....	25 Switching off wireless module
.....
.....	32 Switching on/off alarm
.....
.....
.....
.....	31 function
.....
.....
.....
.....	22 P Package contents
.....
.....
.....	3 Parameter
.....
.....
.....	22 Power adapter
.....
.....
.....
.....	2 Prefix for area code

.....
.. 11 Proximity sensor ...
.....
..... s. Poster, 20 Q QuickDial icon ...
.....
.....
.....
. 28 QuickDial shortcut
.....
. 28 R Radiation ...
.....
.....
.....
32 Range
.....
.....
.....
... 3 reducing ...
.....
.....



[You're reading an excerpt. Click here to read official SIEMENS GIGASET SL910 user guide](http://yourpdfguides.com/dref/4570164)
<http://yourpdfguides.com/dref/4570164>

.....	
.....	
.....	32 Registering handset
.....	
.....	
.....	7 Reminder signal .
.....	
.....	
..	31 Ring delay automatic
.....	
.....	
.....	18, 25 Room monitor
.....	
.....	
.....	30 T Talk key .
.....	
.....	
.....	
s. Poster Text message, see SMS Transferring a call to another number	
.....	
.....	
.....	26 S Safety precautions
.....	
.....	
.....	2 Scroll horizontal
.....	
.....	
.....	21 Scrolling in lists
.....	
.....	
.....	21 vertical
.....	
.....	
.....	21 Scrolling horizontally
.....	
.....	21 Scrolling in lists . .
.....	
.....	
.....	
.....	21 Searching for Bluetooth devices 32 Selection fields .
.....	
.....	
.....	
.....	
.....	
.....	23 Sending complete directory to handset
.....	28 directory entry to handset
.....	
.....	28 SMS
.....	
.....	
.....	
.....	
.....	29 Setting an appointment

..... 31 Setting options overview ..
.....
.....
.....
..... 15 Setting the area code
.....
.....
..... 7 Setting the country
.....
.....
7 Setting the date
.....
.....
..... 7 38 U Upper/lower case .
.....
.....
.....
23 Using the redial list
.....
.....
24 Using the telephone
.....
..... 20 V Vertical scrolling .
.....
.....
.....
. 21 VIP ringtone
.....
.....
..... 27 W Withholding number ...
.....
.....
.....
26 Writing (SMS)
.....
.....
.....

29 Version 4.1, 21.11.2007 All rights reserved. Rights of modification reserved.
el en Gigaset SL910 KURZ-BA System / GRC eng / A31008-M2300-T101-1-8U43 / Cover_back.fm / 4/17/12 Version 4.1, 21.11.2007 .



[You're reading an excerpt. Click here to read official SIEMENS
GIGASET SL910 user guide
http://yourpdfguides.com/dref/4570164](http://yourpdfguides.com/dref/4570164)