




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS SN26T890EU. You'll find the answers to all your questions on the SIEMENS SN26T890EU in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SIEMENS SN26T890EU
User guide SIEMENS SN26T890EU
Operating instructions SIEMENS SN26T890EU
Instructions for use SIEMENS SN26T890EU
Instruction manual SIEMENS SN26T890EU

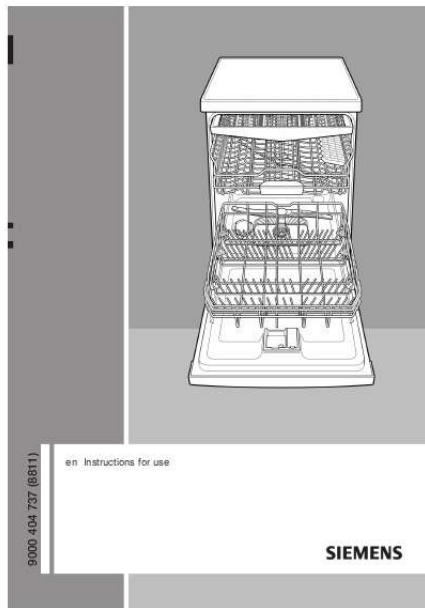

[You're reading an excerpt. Click here to read official SIEMENS SN26T890EU user guide](http://yourpdfguides.com/dref/3548114)
<http://yourpdfguides.com/dref/3548114>

Manual abstract:

-
- .. Extra drying ...
-
- Washing the dishes ..
- Programme data
-
- .. Aqua sensor ...
-
- ... Switching on the appliance ... Remaining running time display Display window ...
-
- Timer programming .
- End of programme .
-
- Switching off the appliance ... Interrupting the programme ..
- . Terminating the programme (Reset) Changing the programme
- Intensive drying
- ... Interior light
-
-
- Maintenance and care Overall condition of the machine Filters
-
-
- Spray arms
-
- .. Waste water pump
- .. Troubleshooting ...
-
- ... when the appliance is switched on ... on the appliance ..
-
- . changing settings
-
- ... during the wash cycle
- .. on the utensils
- Customer service .
-
- ... Installation
- Safety instructions ..
-
- Delivery .
-
- Installation .
-
-
- Waste-water connection
- .. Fresh-water connection
- Electrical connection ..
-
- .. Removing the appliance ...
- ... Transportation
- Protection against frost ...
- Waste disposal .
-
- Packaging

.....
... *Old appliances* ..

.....
..... @ @

... *Delivery*

.....
.....

... *Installation*

.....
In daily use

.....
..... *Children in the household* ...

. *Childproof lock (door lock)* ... *Damage*

.....
.....

... *Disposal*

.....
... *Getting to know your appliance Control panel* ..

.....
..... *Appliance interior* ..

.....
Selecting language

.....
Water softening system ... *Set*

.....
.....

.. *Salt* ...

.....

..... *Using salt* ..

.....
.....

..... *Switching off salt refill indicator/ water softening system*

... *Rinse aid*

.....
.....

... *Setting amount of rinse-aid* .

.. *Switching off rinse-aid refill indicator Utensils*

..... *Not suitable* .

.....
.....

..... *Glass and utensil damage* ... *Loading the dishwasher* .

..... *Unloading the dishwasher* ... *Cups and glasses* .

.....
.....

Pans

.....
.. *Folding spikes* ...

.....
.....

..... *Cutlery drawer* ...

.....
Small accessories holder

Adjusting the height of the basket Detergent

.....

. *Adding detergent*

... *Overview of programmes* ..

Programme selection
... Information about comparability tests Additional options

. Saving time (VarioSpeed) Half load

.
.
. Hygiene

. @@Do not switch on a damaged appliance, but contact your supplier.

@@Do not let children play with packaging and its parts. There is a risk of suffocation from collapsible boxes and film. Warning Knives and other utensils with sharp points must be placed horizontally in the cutlery drawer. Children in the household If fitted, use the childproof lock. An exact description can be found in the back of the envelope.

Do not allow children to play with or operate the appliance. Keep children away from detergents and rinse aid. These may cause chemical burns in the mouth, throat and eyes or asphyxiation. Keep children away from open dishwasher. The water in the rinsing compartment is not drinking water and could contain detergent residue. Ensure that children do not place fingers in the tablet collecting tray 24 . Small fingers could become caught in the slots. If the appliance is installed at eye-level, ensure when opening and closing the door that children are not caught or crushed between the appliance door and the cupboard door situated below. Installation Read the "Installation" chapter to learn how to install and connect the appliance correctly. In daily use Use the dishwasher only in the household and only for its designed purpose, i.

e. for washing domestic dishes. Do not lean or sit on the open door. The appliance could tip. Please note that free-standing appliances may tip over if the baskets are overloaded. Do not add any solvents to the washing chamber. Danger of explosion! Open the door carefully when the programme is still running. There is a risk of hot water spraying out of the appliance. To prevent injuries, e.g.

caused by stumbling, open the dishwasher only briefly in order to load and unload the dishwasher. Read and observe the safety information and instructions for use on the packaging for cleaning and rinsing agents. Childproof lock (door lock) The description of the childproof lock is at the back in the envelope.

Damage The appliance may be repaired and opened up by a technician only. To do this, disconnect the appliance from the power supply. Pull out the mains plug or switch off the fuse. Turn off the tap. 4 en Disposal Make redundant appliances unusable to prevent subsequent accidents. Dispose of the appliance in an environmentally friendly manner. Warning Children could become locked in the appliance (risk of suffocation) or find themselves in other dangerous situations.

Therefore: Pull out the mains plug, sever and dispose of the power cord. Destroy the door lock so that the door can no longer be closed. Getting to know your appliance Diagrams of the control panel and the interior of the appliance can be found in the envelope at the front. Individual positions are referred to in the text. Control panel 1 2 3 4 5 6 7 8 9 10 11 12 ON/OFF switch Programme buttons ** Digital display Display "Check water supply" Salt refill indicator Rinse-aid refill indicator Timer programming display Time delay Additional options ** START button Door Opener Display window ** Number depending on model Appliance interior 20 21 22 23 24 25 26 27 28 29 30 31 32 Interior light * Cutlery drawer Top basket Top spray arm Tablet collecting tray Bottom spray arm Dispenser for salt Filters Bottom basket Dispenser for rinse aid Detergent dispenser Lock for detergent dispenser Rating plate * depending on model 5 en Selecting language The language in the display window 12 can be set from to . "Deutsch" is the factory setting. Language Setting Deutsch L:01 English L:02 Français L:03 Nederlands L:04 Italiano L:05 ĀĒĒĴĒĒĀ L:06 Español L:07 Português L:08 Svenska L:09 Norsk L:10 Suomi L:11 Dansk L:12 Türkçe L:13 PYCCĀ L:14 Polski L:15 Ēe. L:16 Magyar L:17 Croatian L:18 Slovenian L:19 To change the language: Open the door. Switch on ON/OFF switch 1 . Hold down programme button A and press START button 10 until the is indicated.

digital display 3 Release both buttons. Press programme button A until the factory set value is indicated on the digital display 3 . "Deutsch" is indicated in the display window 12 . Press programme button C . Each time the button is pressed, the set value increases by 1; after , the setting goes back to . Press START button 10 . The set value is saved. Close the door. Water softening system To ensure good washing results, the dishwasher requires soft water, i.e. containing low amounts of lime, otherwise white limescale will be deposited on the utensils and inner container. Tap water above 7_dH (from set value) must be softened.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3548114)

[SN26T890EU user guide](http://yourpdfguides.com/dref/3548114)

<http://yourpdfguides.com/dref/3548114>

The water is softened with salt (regeneration salt) in the water softening system of the dishwasher. The setting and therefore the required amount of salt depends on the degree of hardness of your tap water (see table). Set The amount of salt dispensed can be set to . from Sal is not required at the set value . Find out about the hardness value of your tap water. Your water supply company will assist you. Set value can be found in the water hardness table. Open the door.

Switch on ON/OFF switch 1 . Hold down programme button A and press START button 10 until on . the digital display is indicated Release both buttons.

@@setting To change the setting, press programme button C . Each time the button is pressed, the set value increases by one level; when the has been reached, value of (off). the display jumps back to Press START button 10 . The chosen setting has now been stored. Close the door. 6 en Water hardness table Salt Using salt Always refill with salt immediately before switching on the appliance. This ensures that overrun salt solution is immediately washed out and does not corrode the rinsing tank.

Open the screw-type cap of the compartment 26 . Fill the tank with water (only required when switching on the appliance for the first time). Then add dishwasher salt (not table salt or tablets). The water is displaced and runs out. As soon as the salt refill indicator 5 on the fascia is lit, top up the salt. * depending on model Using detergents with salt component If combined detergents with a salt component are used, salt can usually be omitted up to a water hardness of 21° dH (37° fH, 26° Clarke, 3.7 mmol/l). If the water hardness is over 21° dH, salt must be used. 7 en Switching off salt refill indicator/water softening system If the salt refill indicator 5 is impaired (e.g.

when using combined detergents containing salt component), it can be switched off. Proceed as described under "Setting water softening system" and set the value to The water softening system and salt refill indicator are now switched off. Warnings Never fill the salt dispenser with detergent. You will destroy the water softening system.

To prevent corrosion, always refill with salt immediately before switching on the appliance. Rinse aid As soon as the rinse-aid refill indicator 6 lights up on the control panel, refill with rinse aid. The rinse aid is required for stain-free utensils and clear glasses. Use only rinse aid for domestic dishwashers.

Combined detergents with rinse-aid component may be used up to a water hardness of 21 _dH (37 _fH, 26 _Clarke, 3,7 mmol/l) only. If the water hardness is over 21 _dH, rinse-aid must be used. Open the dispenser 29 by pressing and lifting the plate on the cover. Carefully pour rinse aid up to the max. mark in the filler opening. Close cover until it clicks shut. To prevent excessive foam formation during the next rinse cycle, remove any rinse aid which has run over with a cloth. 8 en Setting amount of rinse-aid The amount of rinse-aid dispensed can be set from to . The factory setting . is Do not change the amount of rinse-aid unless streaks (select lower setting) or water stains (select higher setting) are left on the utensils. Open the door.

Switch on ON/OFF switch 1 . Hold down programme button A and press START button 10 until on . the digital display is indicated Release both buttons. The LED for button A flashes and the digital display displays the factory setting . Press programme button A until the factory set value is indicated on the digital display 3 . To change the setting, press programme button C . @@display jumps back to Press START button 10 . The set value is saved. Close the door.

Utensils Not suitable Cutlery and utensils made of wood.

Delicate decorative glasses, craft and antique utensils. These decors are not dishwasher-proof. Plastic parts not resistant to heat. Copper and tin utensils. Utensils which are soiled with ash, wax, lubricating grease or ink.

Aluminium and silver parts have a tendency to discolour and fade during the wash cycle. Even some types of glass (e.g. crystal glass objects) may turn cloudy after many wash cycles. Glass and utensil damage Causes: Glass type and glass production process.

Chemical composition of the detergent. Water temperacorrect amount of powder or liquid detergent: lower line: 15 ml middle line: 25 ml full: 50 ml 12 en Adding detergent Pour detergent into the dispenser 30 (insert tablet flat, not on its edge). Dosage: see manufacturer's instructions on the packaging. Close the cover on the detergent dispenser by sliding it up until the lock engages without difficulty. Note You will obtain optimum rinsing and drying results by using solo detergents and applying salt and rinse-aid separately. f programmes are short, tablets may not have full cleaning effect due to different dissolving properties and there may even be undissolved detergent residue. It is recommended to use washing powder for these programmes. The Intensive programme (on some models) requires one tab only. When using washing powder, you can apply some of this cleaning agent to the inside of the appliance's door. Even if the rinse-aid and/or salt refill indicator is lit, the rinse programme will run correctly if combined detergents are used (when using combined detergents, add rinse-aid at a water hardness above 21 _dH see chapter entitled "Rinse-aid").

If you switch from combined detergents to solo detergents, ensure that the water softening system and amount of rinse-aid have been set to the correct value.

If using detergents in a water-soluble protective cover: Take hold of the cover with dry hands only and put the detergent into an absolutely dry detergent dispenser only, otherwise the detergent may stick. The detergent dispenser opens automatically at the optimum time depending on the programme. The powder or liquid detergent is distributed in the appliance and is dissolved, the tablet falls into the tablet collecting tray where it dissolves in doses. Tip If the utensils are only lightly soiled, slightly less than the indicated amount of detergent is usually adequate. Warnings Do not place small parts for washing in the tablet collecting tray 24 ; this prevents the tablet from dissolving evenly. If you want to add more utensils after the programme has started, do not use the tablet collecting tray 24 as a handle for the upper basket. The tablet could already be there and you will touch the partially dissolved tablet. 13 en Overview of programmes The max. possible number of programmes is illustrated in this overview.

The corresponding programmes for your appliance can be found on the fascia. Programme Auto 65°75° Type of utensils and soiling Pots, utensils and cutlery Highly soiled Programme sequence Is optimised according to the soiling with the aid of sensors. Possible additional options all Auto 45°65° Utensils and cutlery Is optimised according Normally soiled to the soiling with the aid of sensors.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3548114)

[SN26T890EU user guide](http://yourpdfguides.com/dref/3548114)

<http://yourpdfguides.com/dref/3548114>

Utensils and cutlery Prerinse Normally soiled Clean 50° Intermediate rinse Final rinse 65° Dry Utensils and cutlery Is optimised according Lightly soiled to the soiling with the aid of sensors. Utensils and cutlery Clean 45° Lightly soiled Intermediate rinse Final rinse 55° Lightly soiled Prerinse all Eco 50° all Auto 35°45° IntensiveZone Reduce Time Half load Extra drying Extra drying Quick 45° Prerinse none Programme selection You can select a suitable programme according to the type of utensils and degree of soiling.

Information about comparability tests The conditions for running comparability tests can be found on the supplementary sheet "Information for comparability tests". 14 en Additional options * depending on model Additional options 9 can be set with the buttons. Washing the dishes Programme data The programme data (consumption values) can be found in the summary of instructions. They refer to normal conditions and the water hardness set value . Different influencing factors such as water temperature or line pressure may result in deviations.

Saving time (VarioSpeed) * The >>Save time<< function can reduce the running time by approx. 20% to 50% depending on the selected rinse programme.

The change in the running time is indicated on the digital display 3 . To obtain optimum cleaning results at a reduced running time, water and energy consumption are increased. Aqua sensor * * depending on model The Aqua sensor is an optical measuring device (light barrier) which measures the turbidity of the rinsing water. The Aqua sensor is used according to the programme. If the Aqua sensor is active, "clean" rinsing water can be transferred to the next rinse bath and water consumption can be reduced by 36 litres. If the turbidity is greater, the water is drained and is replaced with fresh water. In the automatic programmes the temperature and running time can also be adjusted to the degree of soiling. Half load * If you have only a few items to wash (e.

g. glasses, cups, plates), you can switch to "half load". This will save water, energy and time. It is recommended to put a little less detergent in the detergent dispenser than for a full load. Hygiene * The temperature is increased during the rinsing process. This increases the hygiene status. This additional option is ideal for cleaning e.g. chopping boards and baby bottles. Switching on the appliance Turn on the tap fully.

Open the door. Switch on ON/OFF switch 1 . The display of the last selected programme flashes. This programme remains selected if no other programme button 2 is pressed. The expected programme duration flashes on the digital display 3 .

Press the START button 10 . Close the door. The programme starts running. IntensiveZone * Perfect for a mixed load. You can wash very soiled pots and pans in the lower basket together with normally soiled utensils in the upper basket.

The spray pressure in the lower basket is intensified, the rinsing temperature is increased slightly. Extra drying * An increased temperature during the final rinse and an extended drying phase mean that even plastic parts dry well. There is a slight increase in the energy consumption. 15 en Remaining running time display When the programme is selected, the remaining running time of the programme is indicated on the digital display 3 . The running time is determined during the programme by the water temperature, the number of utensils as well as the degree of soiling and may vary (depending on the selected programme).

Timer programming You can delay the start of the programme in 1-hour steps up to 24 hours. Open the door. Switch on ON/OFF switch 1 . Press 8 + button until the timer programming display 7 jumps to . Press 8 + or button until the displayed time corresponds with your requirements.

Press START button 10 , timer programming is activated. To delete timer programming, press the 8 + or button until is indicated on the digital display 7 . You can change your programme selection at any time until the programme starts. Close the door. Display window Apart from information on the programme sequence, the display window 12 also indicates additional information on e.g. glass protection system is active. If you would no longer like to have this additional information displayed, proceed as follows. Open the door. Switch on ON/OFF switch 1 .

@@the digital display Release both buttons. The LED for button A flashes and the digital display displays the factory setting . Press programme button A until the factory set value is indicated on the digital display 3 . To change the setting, By pressing the C button, you can switch the onboard computer (additional programme information) off or on . Press START button 10 .

The set value is saved. Close the door. End of programme The programme has ended when the value is indicated on the numerical display 3 . The end of the programme is also indicated by an acoustic signal. This function can be changed as follows: Open the door.

Switch on ON/OFF switch 1 . Hold down programme button A and press START button 10 until on the digital display is indicated. Release both buttons. @@@@display jumps back to Press START button 10 , the set value is saved. Close the door. Terminating the programme (Reset) Open the door. Press START button 10 for approx 3 sec. is indicated on the digital display 3 . Close the door. The programme sequence lasts approx.

1 min. is indicated on the digital display 3 (buzzer sounds). Open the door. Switch off ON/OFF switch 1 . @@Switch off ON/OFF switch 1 . Turn off the tap (not applicable if Aqua-Stop fitted). Remove the utensils when they have cooled down. @@@@The running time may increase slightly. (Caution if utensils are delicate!) Open the door. Switch on ON/OFF switch 1 .

@@the digital display Release both buttons. @@@@To change the setting, Press the button C to switch or off . intensive drying on Press START button 10 . The set value is saved. Close the door.

Interrupting the programme Open the door. Switch off ON/OFF switch 1 . The LEDs go out. The programme is saved. @@@@To continue the programme, switch on the ON/OFF switch 1 again.

@@@@When the door is closed or ajar, the light is off. Open the door. Switch on ON/OFF switch 1 . @@Release both buttons. @@@@Press START button 10 . The set value is saved. Close the door. @@If you find such deposits: Fill detergent dispenser with detergent. @@@@Regularly clean door seal with a damp cloth. Never use a steam cleaner to clean your dishwasher.

The manufacturer is not liable for any consequential damage. @@Do not use sponges with a rough surface or abrasive detergents, as these could scratch the surfaces. Stainless steel appliances: To prevent corrosion, avoid using sponge cloths or wash them out thoroughly several times before using for the first time.

Warning Never use other chlorinated household detergents! Health hazard! Salt and rinse-aid Check the refill indicators 5 and 6 .



[You're reading an excerpt. Click here to read official SIEMENS SN26T890EU user guide](http://yourpdfguides.com/dref/3548114)
<http://yourpdfguides.com/dref/3548114>

If required, refill salt and/or rinse-aid. 18 en Filters The filters 27 keep large foreign objects in the rinsing water away from the pump. These foreign objects may occasionally block the filters. The filter system consists of a coarse filter, a flat fine filter and a microfilter. After each washing cycle check the filters for residue. Unscrew filter cylinder as illustrated and take out filter system.

Spray arms Limescale and contaminants in the rinsing water may block nozzles and bearings on the spray arms 23 and 25 . Check outlet nozzles on the spray arms for blockages. Unscrew the upper spray arm 23 . Remove the lower spray arm 25 upwards. Clean spray arms under running water.

Re-engage or screw on spray arms. Remove any residue and clean filters under running water. Re-install filter system in reverse sequence and ensure that the arrow marks are opposite each other after closing the filter system. 19 en Waste water pump Large food remnants in the rinsing water not retained by the filters may block the waste water pump. The rinsing water is then not pumped out and covers the filter.

In this case: First disconnect the appliance from the power supply. Remove the filters 27 . Scoop out water, use a sponge if required. Using a spoon, prise off pump cover (as illustrated) until it clicks, then grip the cover by the lug and first pull it upwards until it resists and then pull it out forwards. Troubleshooting Experience has shown that you can rectify most faults which occur in daily operation without calling customer service. Obviously this will save on costs and ensure that the machine is quickly available again. The following overview should help you locate the causes of faults which may occur. Warning If an error code (E:01 to E:30) is indicated on the digital display 3 , always disconnect the appliance from the power supply and then turn off the tap. You can rectify certain faults yourself (see following fault description), for all other faults please contact customer service and state the indicated fault E:XX. Warning Remember: Repairs may be carried out by technicians only.

If a component has to be replaced, ensure that only original spare parts are used. Improper repairs or use of non-original spare parts may cause considerable damage and put the user at considerable risk. Check inner compartment and remove any foreign objects. Place cover in the original position, press down and engage. ... when the appliance is switched on The appliance does not start. The mains fuse has tripped. The appliance plug has not been inserted. The appliance door has not been shut properly. ... on the appliance Install filters.

Lower spray arm rotates sluggishly. Spray arm blocked. The door is difficult to open. * Child-proof lock is activated. The deactivation instructions are at the back in the envelope.

* depending on model 20 en Door cannot be closed. Door lock has been activated. To reset, close the door with greater force. Water is left in the appliance at the end of the programme. (E24) Waste water hose is blocked or kinked. (E25) Waste water pump blocked, cover on the waste water pump is not locked in position (see Maintenance and Care). Filters blocked. The programme has not yet ended. Wait until programme ends (digital display indicates 0:00) or implement the "Reset" function. Refill indicator for salt 5 and/or rinse-aid 6 is not lit.

Refill indicator/s switched off. Adequate salt/rinse-aid available. Refill indicator for special salt 5 is lit. No salt. Refill with salt. Sensor does not detect salt tablets. Use different special salt. ...

changing settings A setting cannot be changed, a programme starts. Wrong programme button pressed. Terminate the programme (see chapter entitled "Terminating the programme (Reset)") and start all over again. You did not wait until programme ended. Cover on the detergent dispenser cannot be closed. Detergent dispenser overfilled or mechanism blocked by sticky detergent residue. Detergent residue in the detergent dispenser. Dispenser was damp when filled. "check water supply" 4 display lights up. Tap turned off.

Water supply interrupted. Supply hose kinked. Filter in the water supply blocked. Switch off the appliance and pull out the mains plug. Turn off the tap. Clean filter in the supply hose. ... during the wash cycle Unusual foam formation Handwash liquid in the rinse aid dispenser.

Spilled rinse-aid causes excessive frothing, therefore please remove with a cloth. Appliance stops during the wash cycle. Power supply interrupted. Water supply interrupted. Knocking/rattling noise during rinsing Spray arm is striking utensils. Utensils not arranged correctly. Reconnect power supply. Turn on the tap. Switch on the appliance. 21 en Filling valves making striking noises Caused by the installation of the water line and has no effect on the function of the machine.

Remedial action is not possible. Dull, discoloured glasses, film cannot be washed off. Unsuitable detergent. Glasses not dishwasher-proof. Streaks on glasses and cutlery, glasses have metallic appearance.

Too much rinse-aid. Plastic parts discoloured. Too little/unsuitable detergent. Too weak programme selected. Rust spots on the cutlery.

Cutlery not rust-resistant. Salt content in the rinsing water too high, as salt dispenser lock not fastened firmly or salt was spilled while being refilled. Utensils not dry. Appliance door opened too early and utensils taken out too early. Programme selected without drying. Too little rinse-aid. ... on the utensils Food residue on the utensils.

Utensils placed too closely together, utensils basket overfilled. Too little detergent. Rinse programme too weak. Spray arm rotation obstructed. Spray arm nozzles blocked. Filters blocked. Filters incorrectly inserted. Waste water pump blocked. Top basket on right and left not set to same height. Tea or lipstick residue is not completely removed.

Detergent has inadequate bleaching effect. Too low rinsing temperature. Too little/unsuitable detergent White stains on the utensils/glasses remain milky. If phosphate-free detergents are used with hard tap water, white deposits may be deposited more easily on utensils and the container walls. Too little/unsuitable detergent.

Too weak programme selected. No/too little rinse-aid. No/too little salt. Water softening system set to the wrong value. Salt dispenser lock not fastened.

Contact the detergent manufacturer, in particular if: the utensils are very wet at the end of the programme. limescale forms. 22 en Customer service If you are unable to rectify the fault, please contact your customer service. Your nearest customer service centre can be found in the customer service list. When calling customer service, please quote the appliance number (1) and the FD number (2) which can be found on the rating plate 32 on the appliance door. Installation

The dishwasher must be connected correctly, otherwise it will not function properly. The specifications for the inlet and outlet as well as the electrical connected loads must correspond with the required criteria as specified in the following paragraphs or in the installation instructions.



[You're reading an excerpt. Click here to read official SIEMENS SN26T890EU user guide](http://yourpdfguides.com/dref/3548114)
<http://yourpdfguides.com/dref/3548114>

Install the appliance in the correct sequence: Checking appliance on delivery Installing the appliance Waste-water connection Fresh-water connection Electrical connection 1 FD 2 Safety instructions Warning Please note that a visit by a customer service technician to repair a malfunction or one of the described faults will not be free of charge even during the warranty period. Install and connect the appliance according to the installation and assembly instructions. Prior to installation, disconnect the dishwasher from the power supply.

Ensure that the protective conductor system of the domestic supply has been correctly installed. The electrical connection conditions must correspond with the specifications on the dishwasher rating plate. If the power cord of this appliance is damaged, it must be replaced with a particular power cord. To prevent injury, the power cord may be replaced by customer service only. If the dishwasher is installed in a high-sided unit, the unit must be secured properly. Install built-under or integratable appliances only under continuous worktops which have been screwed to adjacent cupboards to ensure stability. 23 en Do not install the appliance near heat sources (radiators, heat storage tanks, cookers or other appliances which generate heat) and do not install under a hob. After installing the appliance, ensure that the plug is easily accessible. Some models: The plastic housing on the water connection contains an electric valve, the connecting cables are in the supply hose. Do not cut through this hose, do not immerse the plastic housing in water.

Warning If the appliance is not in a cavity and a side panel is accessible, the door hinge area must be covered at the side for reasons of safety (risk of injury). The covers are available as optional accessories from customer service or specialist outlets. The appliance can easily be installed in a fitted kitchen between wooden and plastic walls. If the plug is not freely accessible following installation, an all-pole disconnecter with a contact opening of at least 3 mm must be fitted on the installation side to satisfy the relevant safety regulations. Waste-water connection The required work sequence can be found in the installation instructions.

If required, fit a siphon with an drainage connection. Connect the waste-water hose to the drainage connection of the siphon with the enclosed parts. Ensure that the drainage hose is not kinked, crushed or twisted and that there is no cover plate in the drainage to prevent the waste water from flowing out! Fresh-water connection Connect the fresh-water connection to the tap according to the installation instructions with the enclosed parts. Ensure that the fresh-water connection is not kinked, crushed or twisted. When replacing the appliance, always use a new water supply hose.

Water pressure: at least 0.05 MPa (0.5 bar), maximum 1 MPa (10 bar). At a higher water pressure: connect pressure-reducing valve ahead. Inlet rate: minimum 10 litres/minute Water temperature: cold water preferred; hot water max. temp. 60 °C. Delivery Your dishwasher has been checked thoroughly in the factory to ensure that it is in working order. This may cause small water stains. These will disappear after the first wash cycle.

Installation The required installation dimensions can be found in the installation instructions. Level the appliance with the aid of the height-adjustable feet. Ensure that the appliance is situated securely on the floor. A built-under or integrated appliance which is installed subsequently as a free-standing appliance must be secured to prevent it from overturning, e.g. by screwing it to the wall or by installing it under a continuous worktop which is screwed to adjacent cupboards. 24 en Electrical connection Connect the appliance to an alternating current only, ranging from 220 V to 240 V and 50 Hz or 60 Hz via a correctly installed socket with protective earth conductor. See rating plate for required fusing 32 . The socket must be near the appliance and freely accessible following installation. The connection may be modified by technicians only.

A power cord extension may be purchased from customer service only. Use only a residual-current-operated circuit-breaker which features the symbol. Only this extension guarantees compliance with the currently valid regulations. The appliance features a water damage protection system. Please note the system will function only when the power supply is connected.

Transportation Empty the dishwasher and secure loose parts. Drain the appliance according to the following steps: Turn on the tap. Open the door. Switch on ON/OFF switch 1 . The displays of the last selected programme light up.

Select programme with the highest temperature. @@Press START button 10 . Close the door. The programme starts running. Open door after approx. 4 minutes. Press the START button 10 until on the digital display is indicated . Close the door. Open door after approx. 1 minutes.

The numerical display indicates . Switch off appliance 1 and turn off the tap. Transport appliance upright only. @@Disconnect the appliance from the power supply. Turn off the water supply. Disconnect the waste water and fresh water connections. Loosen the fastening screws under the worktop. If fitted, remove the base panel. @@holiday home), empty the appliance completely (see Transportation). @@Please dispose of the individual parts separated according to type.

Please ask your dealer or inquire at your local authority about current means of disposal. Packaging All plastic parts of the appliance are identified with internationally standardised abbreviations (e.g. >PS< polystyrene). Therefore, plastic waste can be sorted out when the appliance is being disposed of.

*Please follow the safety instructions under "Delivery of your appliance". Old appliances Please follow the safety instructions under "Disposal of your appliance". This appliance is identified according to the European guideline 2002/96/EC on waste electrical and electronic equipment WEEE. The guideline specifies the framework for an EU-wide valid return and re-use of old appliances. 26 en en Subjekt to modification 27 Child-proof lock * 40 41 42 Switch on the child-proof lock Open the door with child-proof lock switched on Switch off the child-proof lock Always close the appliance door completely before leaving the appliance.*

*Only in this way can you protect your children from potential hazards. Baking sheet spray head * Large sheets or grilles and plates which have a diameter greater than 30 cm (gourmet plates, pasta plates, dinner plates) can be cleaned with the aid of the spray head. To do this, remove the top basket and insert the spray head as illustrated in the diagram. To ensure that the spray jet can reach all parts, arrange the baking sheets as illustrated (max. 4 baking sheets and 2 grilles). Never operate the dishwasher without the top basket or baking sheet spray head! * some models AQUA-STOP guarantee (does not apply to appliances without Aqua-Stop) In addition to warranty claims against the seller based on the purchase contract and in addition to our appliance warranty we will pay damages under the following conditions: 1.*



[You're reading an excerpt. Click here to read official SIEMENS SN26T890EU user guide](http://yourpdfguides.com/dref/3548114)
<http://yourpdfguides.com/dref/3548114>

If our Aqua-Stop system is defective and causes water damage, we will make good the damage for private users. To ensure water damage protection, the appliance must be connected to the power supply. 2. This liability guarantee is valid for the service life of the appliance.

3. A prerequisite for the warranty claim is that the appliance has been correctly installed and connected with Aqua-Stop according to our instructions. This also includes the correct installation of the Aqua-Stop extension (original accessory). Our warranty does not extend to defective feed lines or fittings up to the Aqua-Stop connection on the tap. 4. If your appliance is fitted with Aqua-Stop, you can leave your appliance unattended during operation and leave the tap turned on afterwards. The tap should only be turned off if you are absent from home for a prolonged period, e.g. several weeks holiday. Siemens-Electrogeräte GmbH Carl-Wery-Straße 34, 81739 München To contact us directly, use the tel. no or fax no. in the enclosed customer service list. www.siemens-homeappliances.com 9000 404 737 en (8811) 640TV 3bel .



[You're reading an excerpt. Click here to read official SIEMENS SN26T890EU user guide](http://yourpdfguides.com/dref/3548114)
<http://yourpdfguides.com/dref/3548114>