




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS SN65M009EU. You'll find the answers to all your questions on the SIEMENS SN65M009EU in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SIEMENS SN65M009EU
User guide SIEMENS SN65M009EU
Operating instructions SIEMENS SN65M009EU
Instructions for use SIEMENS SN65M009EU
Instruction manual SIEMENS SN65M009EU

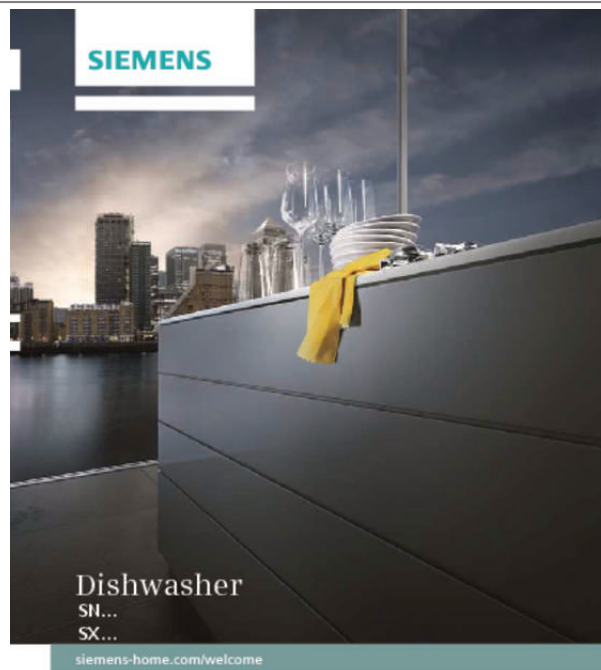

en Dishwasher
Instruction manual

Register
your
product
online



[You're reading an excerpt. Click here to read official SIEMENS SN65M009EU user guide](http://yourpdfguides.com/dref/5735362)
<http://yourpdfguides.com/dref/5735362>

.....	20 Additional options
	
20 Express Wash/ Speed Perfect (VarioSpeed)	
.....	Half load	
.....		
.....		
.....	Hygiene
.....		
.....	Intensive zone
.....		
..	Extra drying
.....		
.....		
.....		
... 20 . 20 . 20 . 20 . 20	Protection of the environment	...
.....		
... 8	Packaging	..
.....		
.....		
..... 8	Old appliances
.....		
.....		
... 8	Getting to know your appliance
.....		
.. 9	Control panel
.....		
.....		
9	Appliance interior
.....		
.. 9	Overview of menu
.....		
.. 9	Water softening system/ Special salt
.....		
.. 10	Setting
.....		
.....	Water hardness table	...
.....		
..	Using special salt
.....	Detergents with salt component . Switching off water softening system	
.....		
.....		
.....	10 . 10	
11 . 11	Operating the appliance 21 Programme data
.....		
.....		
..	Aqua sensor
.....		
.....	Switching on the appliance	
.....		
..	Optical display while the programme is running
.....	Remaining running time display	... Timer programming
.....		
.....		
..	End of programme

.....
..... Automatic switch off / interior light . Switching off the appliance

.. Interrupting the programme 21 .
21 . 21 . 22 . 22 . 22 .
23 . 23 . 24 . 24 . .
. 11 Rinse aid

..... 11 Setting amount of rinse aid .

.....
. 12 Switching off rinse aid refill indicator
.....

..... 12 Utensils ..

.....
..... 13 Not suitable

.....
.....
13 Glass and utensil damage

... 13 3 en Intended use Terminating the programme

24 Changing the programme. 24 Intensive drying.

..... 25 Cleaning and maintenance ... 25 Overall condition of the machine Special salt and rinse aid .

..... Filters

.....
.....
..... Spray arms

.....
.....
.....
.. 25 . 25 . 26 . 26 Intended use dn et nI e s u Fault, what to do?

..... 27 Waste water pump

.....
..... 27 Fault table .
.....

.....
.....
.....
28 Customer service

36 Installation and connection . . 36 Product package

..... Safety instructions.
..... Delivery.

.....
.....
.....
. Technical specifications . . Installation.

..... Waste-water connection . . Drinking water connection Warm water connection . .

..... Electrical connection.

..... Removing the appliance . . Transportation. . .

..... Protection against frost (Emptying the appliance) . . .

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....
. 36 . 36 . 37 . 37 .

37 . 37 . 38 . 38 . 39 . 39 . @@@@ Retain all documents for subsequent use or for the next owner . . .

. 40 4 Safety instructions en Delivery 1. Check the packaging and dishwasher immediately for damage caused in transit. Do not switch on a damaged appliance, but contact your supplier. 2. Please dispose of the packaging material in an environmentally friendly manner.

3. Do not let children play with packaging and its parts. There is a risk of suffocation from collapsible boxes and film. Installation Following installation, ensure that the back of the dishwasher is not freely accessible (protection against contact due to hot surface). Install and connect the appliance according to the installation and assembly instructions.

Prior to installation, disconnect the dishwasher from the power supply. Ensure that the protective conductor system of the domestic supply has been correctly installed. The electrical connection conditions must correspond with the specifications on the dishwasher rating plate 9:. If the power cord of this appliance is damaged, it must be replaced with a particular power cord. To prevent injury, the power cord may be purchased from customer service only.

If the dishwasher is installed in a high-sided unit, the unit must be secured properly. If the dishwasher is installed below or above other domestic appliances, follow the information for installation in combination with a dishwasher in the installation instructions for the particular appliances. Also follow the installation instructions for the dishwasher to ensure that all appliances are operated safely. If there is no information or if the installation instructions do not include the appropriate information, contact the manufacturer of these appliances to ensure that the dishwasher can be installed above or below these appliances. 5 en Safety instructions If you cannot obtain any information from the manufacturer, you must not install the dishwasher above or below these appliances. If you install a microwave oven above the dishwasher, the microwave oven may be damaged. Install built-under or integratable appliances only under continuous worktops which have been screwed to adjacent cupboards to ensure stability. Do not install the appliance near heat sources (radiators, heat storage tanks, cookers or other appliances which generate heat) and do not install under a hob. After installing the appliance, ensure that the plug is easily accessible. (See Electrical connection) Some models: The plastic housing on the water connection contains an electric valve, the connecting cables are in the supply hose.

Do not cut through this hose, do not immerse the plastic housing in water. In daily use Read and observe the safety information and instructions for use on the packaging for cleaning and rinsing agents. Childproof lock (door lock) * Do rlock The description of the childproof lock is at the back in the envelope. * depending on model Damage The appliance may be repaired and opened up by a technician only. To do this, disconnect the appliance from the power supply.

Pull out the mains plug or switch off the fuse. Turn off the tap. If the appliance is damaged, especially the fascia (cracks, holes, broken buttons), or the door function is impaired, stop operating the appliance. Pull out mains plug or switch off fuse. Turn off tap, call customer service.

Disposal 1. Make redundant appliances unusable to prevent subsequent accidents. 2. Dispose of the appliance in a n environmentally friendly manner. 6

Safety instructions en m Warning Risk of injury! m Warning To prevent injuries, e.

g. caused by stumbling, open the dishwasher only briefly in order to load and unload the dishwasher. Knives and other utensils with sharp points must be placed in the cutlery basket with the points downwards or horizontally on the knife shelf*.



[You're reading an excerpt. Click here to read official SIEMENS
SN65M009EU user guide
http://yourpdfguides.com/dref/5735362](http://yourpdfguides.com/dref/5735362)

Do not lean or sit on the open door. In the case of free-standing appliances, ensure that the baskets are not overloaded.

If the appliance is not in a cavity and a side panel is accessible, the door hinge area must be covered at the side for reasons of safety (risk of injury). The covers are available as optional accessories from customer service or specialist outlets. * depending on model Risk of scalding! Open the door carefully when the programme is still running. There is a risk of hot water spraying out of the appliance. m Warning Risks to children! If fitted, use the childproof lock. An exact description can be found in the back of the envelope. Do not allow children to play with or operate the appliance. Keep children away from detergents and rinse aid. These may cause chemical burns in the mouth, throat and eyes or asphyxiation. Keep children away from open dishwasher.

The water in the rinsing compartment is not drinking water and could contain detergent residue. Ensure that children do not place fingers in the tablet collecting tray 1: Small fingers could become caught in the slots. m Warning Risk of explosion! Do not add any solvents to the washing chamber. Danger of explosion! 7 en Protection of the environment When opening and closing the door on an eye-level appliance, ensure that children do not become jammed or crushed between the appliance door and the cupboard door below. Children could become locked in the appliance (danger of suffocation) or get into another dangerous situation. Redundant appliances: Pull out the mains plug, sever and dispose of the power cord. Destroy the door lock so that the door can no longer be closed. Protection of the environment nco oteP i tr ef ho t m nv on ri te n e Both the packaging of new appliances and the old appliances themselves contain valuable raw materials and recyclable materials. Please dispose of the individual parts separated according to type.

Please ask your dealer or inquire at your local authority about current means of disposal. Packaging All plastic parts of the appliance are identified with internationally standardised abbreviations (e.g. >PS< polystyrene). Therefore, plastic waste can be sorted out when the appliance is being disposed of.

Please follow the safety instructions under "Delivery". Old appliances Please follow the safety instructions under "Disposal of your appliance". This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU 8 Getting to know your appliance en Getting to know your appliance gG ntt ie w o n kt o r u o y eip ca nl a Appliance interior 1" Interior light * 1* Top basket 12 Knife shelf * 1: Tablet collecting tray 1B Top spray arm 1J Bottom spray arm 1R Dispenser for special salt 1Z Filters 1b Cutlery basket 1j Bottom basket 9" Dispenser for rinse aid 9* Detergent dispenser 92 Lock for detergent dispenser 9: Rating plate * depending on model Diagrams of the control panel and the interior of the appliance can be found in the envelope at the front. Individual positions are referred to in the text.

Control panel (ON/OFF switch 0 Programme buttons ** 8 Display "Check water supply" @ Salt refill indicator H Rinse aid refill indicator P Timer programming * X Additional options ** `START button h Digital display)" Door opener * depending on model ** Number depending on model Overview of menu The settings can be found in the individual chapters. Water Hardness : - : Intensive drying : - : Rinse aid : - : Hot water : - : End of programme buzzing sound : - : Automatic disconnection : - : Optical display while the programme is running : - : 9 en Water softening system/Specialiller opening. Switching off rinse aid refill indicator 3. Close cover until it clicks shut. 4. To prevent excessive foam formation during the next rinse cycle, remove any rinse aid which has run over with a cloth. If the rinse-aid refill indicator H is impaired (e.g. when using combined detergents containing rinse aid component), it can be switched off. Proceed as described under "Setting amount of rinse aid" and set the value to : .

The rinse aid refill indicator H is now switched off. Setting amount of rinse aid The amount of rinse aid can be set from : to : . Please set rinse aid on : to obtain very good drying results (: is already set in factory). Change this setting, only if streaks (select lower setting) or water stains (select higher setting) are left on the utensils. 1. Open the door. 2. Switch on ON/OFF switch (. 12 Utensils en Utensils slin st e U Loading the dishwasher 1. Remove large food remnants.

It is not necessary to prerinse utensils under running water. 2. Place the utensils so that – they are secure and cannot tip over. – all utensils with their openings face down. – parts with curves or indentations are at an angle, thereby allowing water to drain. – does not obstruct rotation of the two spray arms 1B and 1J. Very small utensils should not be washed in the machine, as they may fall out of the baskets. Not suitable Cutlery and utensils made of wood. Delicate decorative glasses, craft and antique utensils. These decors are not dishwasher-proof. Plastic parts not resistant to heat. Copper and tin utensils. Utensils which are soiled with ash, wax, lubricating grease or ink. Aluminium and silver parts have a tendency to discolour and fade during the wash cycle. Even some types of glass (e.g. crystal glass objects) may turn cloudy after many wash cycles. Glass and utensil damage Causes: Glass type and glass production process. Chemical composition of the detergent. Water temperature of the wash programme.

Recommendation: Use only glasses and porcelain which the manufacturer designates as dishwasher-proof. Use a detergent which protects utensils. Take glass and cutlery out of the dishwasher as soon as possible after the programme ends. Unloading the dishwasher To prevent water from dripping off the upper basket onto the utensils in the lower basket, it is recommended to empty the appliance from the bottom up. Hot utensils are sensitive to shock! Therefore, when the programme ends, leave the utensils to cool down in the dishwasher until they can be handled. Note When the programme ends, water droplets can still be seen inside the appliance. This does not affect the drying of the utensils. 13 en Utensils Tip Other examples, such as the best way of loading your dishwasher, can be found on our homepage as a free download. The corresponding Internet address can be found on the back page of these instructions for use. Cups and glasses Top basket 1* Cutlery basket You should always place cutlery unsorted with the points downwards.

To prevent injuries, place long, pointed implements and knives on the knife shelf. Pans Bottom basket 1j Etager Etagere * The etagere and the space underneath can be used for small cups and glasses or for larger items of cutlery, such as wooden spoons or serving cutlery.



[You're reading an excerpt. Click here to read official SIEMENS SN65M009EU user guide](http://yourpdfguides.com/dref/5735362)
<http://yourpdfguides.com/dref/5735362>

The etagere can be folded up if not required. Tip Heavily soiled utensils (pans) should be placed in the bottom basket. The more powerful spray jet provides a better dishwashing result.

14 Utensils * Depending on the model, a 3-fold height adjustment is possible. To do this, first place the etagere vertically and pull up, then place at a slight angle, push down to the required height (1, 2, or 3) and snap into place. en Knife shelf * Knifeshelf * depending on model Long knives and other utensils can be arranged horizontally. Foldingspikes Folding spikes ** depending on model The spikes can be folded down to improve arrangement of pans, bowls and glasses. Adjusting the height of the basket * Adjustingtheheightofthebasket Small accessories holder ** depending on model If required, the height of the upper utensils basket 1* can be adjusted to provide more space for tall utensils either in the upper or lower basket.

Small accessories holder Appliance height 81.5 cm Top basket Setting 1 max. ϕ Setting 2 max. ϕ Setting 3 max. ϕ 22 cm 24.5 cm 27 cm Bottom basket 30 cm 27.5 cm 25 cm * depending on model Light-weight plastic accessories, e.g. cups, lids, etc. can be held securely in the small accessories holder.

Appliance height 86.5 cm Top basket Setting 1 max. ϕ Setting 2 max. ϕ Setting 3 max. ϕ 24 cm 26.5 cm 29 cm Bottom basket 33 cm 30.5 cm 28 cm Select one of the two following procedures according to the design of the top basket for your appliance model: 15 en Detergent Top basket with side levers 1. Pull out the top basket 1* out. 2. To lower the basket, press in the left and then the right lever on the outside of the basket.

In doing so, hold the sides of the basket along the upper edge to prevent it from suddenly dropping. trt nD e ge e Detergent You can use tablets as well as powder or liquid detergents for dishwashers, but never use washing up liquid. The dosage can be individually adjusted with powder or a liquid detergent according to the degree of soiling. Tablets contain an adequately large amount of active ingredients for all cleaning tasks. Modern, powerful detergents predominantly use a lowalkaline formulation with phosphate and enzymes.

Phosphates bond the lime in the water. Enzymes break down starch and remove protein. Phosphate-free detergents are less frequent. These have a slightly weaker lime bonding capacity and require a higher dosage. To remove coloured stains (e.g. tea, tomato sauce), oxygenbased bleaching agents are usually used. Note To ensure a good washing result, always follow the instructions on the detergent packaging! If you have further questions, we recommend that you contact the detergent manufacturers' helpline. 3. To raise the basket, hold the basket on the sides of the upper edge and lift it up. 4. Before re-inserting the basket again, ensure that it is at the same height on both sides. Otherwise, the appliance door cannot be closed and the upper spray arm will not be connected to the water circuit. Top basket with upper and lower roller pairs 1. Pull out the top basket 1* out.

2. Remove the upper basket and reattach it to the upper (stage 3) or lower (stage 1) rollers. m Warning – Read and observe the safety information and instructions for use on the packaging for cleaning and rinsing agents. 16 Detergent en Adding detergent 1. If the detergent dispenser 9* is still closed, press the lock 92 to open the detergent dispenser. Pour detergent into the dry detergent dispenser 9* only (insert tablet flat, not on its edge). Dosage: see manufacturer's instructions on the packaging. The graduated detergent dispenser 9* helps you add the correct amount of powder or liquid detergent. Usually 20 ml–25 ml are adequate for normal soiling. If using tablets, one tablet is adequate.

Tip If the utensils are only lightly soiled, slightly less than the indicated amount of detergent is usually adequate. Suitable detergents and care products can be purchased online via our website or via customer service (see back page). Combination detergent Apart from conventional detergents (Solo), a number of products are offered with additional functions. These products contain not only the detergent but also rinse-aid and salt replacement substances (3in1) and, depending on the combination (4in1, 5in1, etc.), additional components such as glass protection or stainless steel cleaner.

Combination detergents function only up to a specific degree of hardness (usually 21°dH). Over this limit salt and rinse-aid must be added. As soon as combined detergents are used, the rinse programme is adjusted automatically to ensure the best possible rinsing and drying result. 2. Close the cover on the detergent dispenser by sliding it up until the lock engages without difficulty.

m Warning – Do not place small parts for washing in the tablet collecting tray 1:; this prevents the tablet from dissolving evenly. m Warning – If you want to add more utensils after the programme has started, do not use the tablet collecting tray 1: as a handle for the upper basket. The tablet could already be there and you will touch the partially dissolved tablet. The detergent dispenser opens automatically at the optimum time depending on the programme. The powder or liquid detergent is distributed in the appliance and is dissolved, the tablet falls into the tablet collecting tray where it dissolves in doses. 17 en Detergent Notes You will obtain optimum rinsing and drying results by using solo detergents and applying salt and rinse aid separately. If programmes are short, tablets may not have full cleaning effect due to different dissolving properties and there may even be undissolved detergent residue. It is recommended to use washing powder for these programmes. The Intensive programme (on some models) requires one tab only. When using washing powder, you can apply some of this cleaning agent to the inside of the appliance's door.

Even if the rinse-aid and/or salt refill indicator is lit, the rinse programme will run correctly with combined detergents. If using detergents in a water-soluble protective cover: Take hold of the cover with dry hands only and put the detergent into an absolutely dry detergent dispenser only, otherwise the detergent may stick. If you switch from combined detergents to solo detergents, ensure that the water softening system and amount of rinse aid have been set to the correct value. 18 Overview of programmes en Overview of programmes m ov apfir rr O g ev oew me s The max. possible number of programmes is illustrated in this overview. The corresponding programmes and their arrangement can be found on the fascia. Type of utensils Type of soiling Programme Possible additional options Programme sequence pots and pans, non-sensitive utensils and cutlery very adhesive burnedIntensive 70° in or dried-on food remnants containing starch or protein \pm ° Á Á Auto 45° - 65° all Prerinse Clean 70° Intermediate rinse Final rinse 65° Drying Is optimised according to the soiling with the aid of sensors.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/5735362)

[SN65M009EU user guide](http://yourpdfguides.com/dref/5735362)

<http://yourpdfguides.com/dref/5735362>

Is optimised according to the soiling with the aid of sensors. Prerinse Clean 50° Intermediate rinse Final rinse 65° Drying Prerinse Clean 40° Intermediate rinse Final rinse 55° Drying Clean 45° Intermediate rinse Final rinse 55° Prerinse all Auto 45° - 65° all mixed utensils and cutlery part dried, common household food remnants à Eco 50° all sensitive utensils, cutlery, slightly adhesive, temperature fresh food remnants sensitive plastic and glasses é Gentle 40° IntensivZone Express Wash/ Speed Perfect (VarioSpeed) Half load Extra drying Extra drying ñ Quick 45° all types of utensils cold rinsing, intermediate cleaning Prerinse ù none 19 en Additional options Half load Programme selection You can select a suitable programme according to the type of utensils and degree of soiling. § Half load * Information for test institutes Test institutes receive the information for comparability tests (e.g. according to EN60436). These are the conditions for conducting the tests, however these are not the results or consumption values. Request by e-mail to: dishwasher@test-appliances.com The product number (E no.

) and the production number (FD) are required which you can find on the rating plate 9: on the appliance door. If you have only a few items to wash (e.g. glasses, cups, plates), you can switch to "half load". This will save water, energy and time.

It is recommended to put a little less detergent in the detergent dispenser than for a full load. · Hygiene * Hygien The temperature is increased during the cleaning process. This increases the hygiene status. This additional option is ideal for cleaning e.g. chopping boards and baby bottles. Ĩ Intensive zone * Intensivezone Additional options liA a ni otd sit np oo Perfect for a mixed load. You can wash very soiled pots and pans in the lower basket together with normally soiled utensils in the upper basket. The spray pressure in the lower basket is intensified, the rinsing temperature is increased slightly. * depending on model Additional options can be set with the buttons X.

¿ Extra drying * Extra drying Expres Wash/ Spe d Perfect (VarioSpe d) Ý Express Wash/ Speed Perfect/ (VarioSpeed) * An increased temperature during the final rinse and an extended drying phase ensure that even plastic parts dry better. There is a slight increase in the energy consumption. This function can reduce the running time by approx. 20% to 50% depending on the selected rinse programme. The change in the running time is indicated on the digital display h. To obtain optimum cleaning results at a reduced running time, water and energy consumption are increased. 20 Operating the appliance en Operating the appliance ga ntr iO e p eiph c at nl e a Switching on the appliance 1. Turn on the tap fully. 2. Open the door.

3. Switch on ON/OFF switch (. The Eco 50° programme display flashes. This programme remains selected if no other programme button 0 is pressed. The expected programme duration flashes on the digital display h.

4. Press the START button ` 5. Close the door. The programme starts running.

Note - for environmentally friendly operation of the dishwasher: For ecological reasons the Eco 50° programme is preset whenever the appliance starts. This conserves environmental resources and not least saves you money. The Eco 50° programme is a particularly environmentally friendly programme. According to EU regulation 1016/2010 it is the "Standard programme" which is the most efficient standard cleaning cycle for cleaning normally soiled utensils in terms of the combined energy and water consumption for cleaning these types of utensils. Programme data The programme data (consumption values) can be found in the summary of instructions. They refer to normal conditions and the water hardness set value : . Different influencing factors such as e.g. water temperature or line pressure may result in deviations. Aquasensor Aqua sensor * * depending on model The Aqua sensor is an optical measuring device (light barrier) which measures the turbidity of the rinsing water.

The Aqua sensor is used according to the programme. If the Aqua sensor is active, "clean" rinsing water can be transferred to the next rinse bath and water consumption can be reduced by 3–6 litres. If the turbidity is greater, the water is drained and is replaced with fresh water. In the automatic programmes the temperature and running time can also be adjusted to the degree of soiling. 21 en Optical display while the program eisrun ing Operating the appliance Optical display while the programme is running * Remaining running time display When the programme is selected, the remaining running time of the programme is indicated on the digital display h. The running time is determined during the programme by the water temperature, the number of utensils as well as the degree of soiling and may vary (depending on the selected programme). * depending on model While the programme is running, a light spot shines on the floor under the appliance door. Do not open the dishwasher door until the light point is no longer visible on the floor. If the door is not completely closed, the light spot flashes. * If the appliance is installed at eye-level, with flush furniture front, the light point is not visible.

This function can be changed as follows: 1. Open the door. 2. Switch on ON/OFF switch (. 3.

Hold down programme button # and press START button ` until : is indicated on the digital display.

4. Release both buttons. @@5. @@ To change the setting: 1. By pressing the button 3, you can switch the function off : or on : . 2. Press START button ` The set value is saved. 3. Close the door.

Timer program ing Timer programming * * depending on model You can delay the start of the programme in 1-hour steps up to 24 hours. 1. Open the door. 2. Switch on ON/OFF switch (. 3. Press button P + until the digital display h jumps to : . 4. Press P + or – button until the displayed time corresponds with your requirements. 5.

Press START button ` ; timer programming is activated. 6. To delete timer programming, press the P + or – button until h : is indicated on the digital display.

You can change your programme selection at any time until the programme starts. 7.

Close the door. 22 Operating the appliance en End of programme The programme has ended when the value : is indicated on the numerical display h. The end of the programme is also indicated by an acoustic signal. This function can be changed as follows: 1. Open the door.

2. Switch on ON/OFF switch (. 3. Hold down programme button # and press START button ` until : is indicated on the digital display. 4. Release both buttons.

@@5. @@ To change the setting, 1. Press programme button 3. @@2. Press START button ` ; the set value is saved. 3. @@ The setting can be selected from : to : . : Appliance does not switch off automatically. @@ When the door is closed the light is off.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/5735362)

[SN65M009EU user guide](http://yourpdfguides.com/dref/5735362)

<http://yourpdfguides.com/dref/5735362>

@@@: Appliance switches off after 1 min.

: Appliance switches off after 120 min. 1. Open the door. 2. Switch on ON/OFF switch (.

3. Hold down programme button # and press START button `until : ... is indicated on the digital display.

4. Release both buttons. @5. Keep pressing programme button # until the value : ... @2. Press START button `The set value is saved.

3. Close the door. Interrupting the programme 1. Open the door. 2. Switch off ON/OFF switch (. The LEDs go out. The programme is saved. @3. To continue the programme, switch on the ON/OFF switch (again.

4. @Open the door. 2. Switch off ON/OFF switch (. 3.

Turn off the tap (not applicable if Aqua-Stop fitted). 4. Remove the utensils when they have cooled down. @Open the door. 2.

Press START button `for approx. 3 sec. The numerical display h indicates : . 3. Close the door. The programme sequence lasts approx. 1 min. On the digital display h is indicated : . 4. Open the door.

5. Switch off ON/OFF switch (. 6. @The running time may increase slightly. (Caution if utensils are delicate!) 1. Open the door. 2. Switch on ON/OFF switch (. 3. Hold down programme button # and press START button `until : ... is indicated on the digital display. 4.

Release both buttons. @5. @To change the setting, 1. Press the button 3 to switch the Intensive drying on : or off : . 2.

Press START button `The set value is saved. 3. @@@@@@If the appliance is switched off for a prolonged period, leave the door ajar to prevent the formation of an unpleasant odour. Never use a steam cleaner to clean your dishwasher. The manufacturer is not liable for any consequential damage.

Regularly wipe the front of the appliance and fascia with a damp cloth; water and a little washing up liquid are adequate. Do not use sponges with a rough surface or abrasive detergents, as these could scratch the surfaces. Stainless steel appliances: To prevent corrosion, avoid using sponge cloths or wash them out thoroughly several times before using for the first time. m Warning – Health hazard Never use other domestic detergents, e.

g. containing chlorine! A regular inspection and maintenance of your machine will help to prevent faults. This saves time and prevents problems. Special salt and rinse aid Check the refill indicators @ and H. If required, refill salt and/or rinse aid. Overall condition of the machine Check spray arm for grease and limescale deposits. 25 en Cleaning and maintenance Filters The filters IZ keep large foreign objects in the rinsing water away from the pump. These foreign objects may occasionally block the filters. The filter system consists of a coarse filter, a flat fine filter and a microfilter. 1.

After each washing cycle check the filters for residue. 2. Unscrew filter cylinder as illustrated and take out filter system. Spray arms Limescale and contaminants in the rinsing water may block nozzles and bearings on the spray arms 1B and 1J. 1.

Check outlet nozzles on the spray arms for blockages. 2. Unscrew the upper spray arm 1B. 3. Remove the lower spray arm 1J upwards.

4. Clean spray arms under running water. 5. Re-engage or screw on spray arms. 3. Remove any residue and clean filters under running water. 4. Re-install filter system in reverse sequence and ensure that the arrow marks are opposite each other after closing the filter system. 26 Fault, what to do? en Fault, what to do? ,tF l u a w t a h o t d ? o Experience has shown that you can rectify most faults which occur in daily operation yourself. This ensures that the machine is quickly available to you again.

In the following overview you can find possible causes of malfunctions and helpful information for rectifying them. Note If the appliance stops during dishwashing or does not start for no obvious reason, first run the Abort programme function (Reset). (See chapter entitled “Operating the appliance”) In this case: 1. First always disconnect the appliance from the power supply. 2. Take out top basket 1* and bottom basket 1j. 3. Remove the filters IZ. 4. Scoop out water, use a sponge if required.

5. Prise out the white pump cover (as illustrated) using a spoon. Grip the cover on the crosspiece and lift diagonally inwards. Remove cover completely. m Warning – Don't forget: Repairs may be carried out by technicians only.

If a component has to be replaced, ensure that only original spare parts are used. Improper repairs or use of non-original spare parts may cause considerable damage and put the user at considerable risk. Waste water pump Large food remnants or foreign objects which were not captured by the filters may block the waste water pump. The rinsing water will then be above the filter. 6.

Check impeller wheel and remove any foreign objects. 7. Place cover in the original position and press down until it engages (click). m Warning – Risk of cuts! When cleaning the waste water pump, ensure that you do not injure yourself on pieces of broken glass or pointed implements. 8. Install filters. 9. Re-insert baskets. 27 en Fault, what to do? Fault table Fault “Check water supply” display 8 lights up. Cause Supply hose kinked.

Tap turned off. Tap jammed or calcified. Remedial action Install supply hose without kinks. Turn the tap on. Turn the tap on. Flow rate must be min. 10 l/min. when water supply is open. Filter in the water supply blocked. Switch off the appliance and pull out the mains plug.

Turn off the tap. Unscrew water connection. Error code : Error code : is lit. is lit. Error code : Error code : is lit.

is lit. Error code : is lit. Error code : is lit. Clean filter in the supply hose. Screw water connection on again.

Check for leaks. Reconnect power supply. Switch on the appliance. Intake opening (on right inside of Arrange utensils so that the intake opening appliance) covered by utensils. is not obstructed. Heating element calcified or Clean appliance with dishwasher cleaning soiled. agent or descaler. Operate the dishwasher with water softening system and check the setting (see chapter “Water softening system/Special salt”). Filters IZ are soiled or Clean filters. blocked.

(see “Cleaning and maintenance”). Waste-water hose kinked or Install hose without kinks, remove any blocked. residue. Siphon connection still sealed. Check connection to siphon and open if required. Cover on the waste water pump Lock cover correctly. loose. (See “Waste water pump”) Waste water pump blocked or Clean pump and lock cover correctly. (See cover on the waste water pump is “Waste water pump”) not locked in position. Mains voltage too low.

Not an appliance fault, have the mains voltage and electrical installation checked. 28 Fault, what to do? Fault A different error code is indicated on the digital display. (: to :) Cause A technical fault has probably occurred. en Display flashes. Door not closed properly.

Refill indicator for salt @ No rinse aid. and/or rinse-aid H is lit. No salt. Sensor does not detect salt tablets. Refill indicator for salt @ Refill indicator switched off.

and/or rinse-aid H is not lit.

[You're reading an excerpt. Click here to read official SIEMENS](#)



[SN65M009EU user guide](#)
<http://yourpdfguides.com/dref/5735362>

There is still enough special salt/ rinse aid available. Water is left in the Filter system or area under the appliance at the end of the filters 1Z is blocked. programme. Program has not ended yet. Remedial action Switch off appliances with the ON/OFF switch (. After a short time restart the appliance. If the problem recurs, turn off the tap and pull out the mains plug. Call customer service and mention the error code. Close the door.

Ensure that no objects (utensil, fragrance dispenser) are protruding over the basket and preventing the door from closing. Refill rinse aid. Refill with special salt. Use different special salt. Activation/deactivation (see chapter Water softening system/Special salt or Rinse aid). Check refill indicator, levels. Clean filters and area underneath (see "Waste water pump"). Wait until programme ends or reset (see "Terminating the programme"). 29 en Fault, what to do? Cause No or too little rinse aid in the dispenser. Programme selected without drying.

Water collecting in depressions on the utensils and cutlery. Remedial action Refill rinse aid. Select programme with drying (see "Overview of programmes", "Programme sequence"). Arrange utensils in a sloping position, arrange affected utensils as sloping as possible. Fault Utensils not dry.

Use different combination detergent with better drying performance. Use of rinse aid also increases the drying performance. Intensive drying to increase Activate intensive drying (see "Operating the drying not activated. appliance") Utensils were removed too early Wait until program ends or wait until 30 min or drying process had not ended after program ends before removing yet. utensils.

The eco rinse aid used has a poor Use a proprietary rinse aid. Eco products are drying performance. much less effective. Plastic utensils not dry. Special properties of plastic. Plastic has a lower heat storage capacity and therefore dries less well. Cutlery not dry. Cutlery not arranged properly in Separate cutlery if possible, prevent contact the cutlery basket. points. Cutlery not arranged properly in Arrange cutlery properly and separate if the cutlery drawer.

possible. Appliance interior wet after No appliance fault On account of the "Condensation drying" rinse cycle. principle, water droplets are physically induced and required in the container. The humidity in the air condenses on the inner walls of the dishwasher, drains and is pumped out. The combined detergent used has a poor drying performance 30 Fault, what to do? Fault Food remnants on the utensils. Cause Utensils placed too closely together, utensils basket overfilled. Spray arm rotation obstructed. Spray arm nozzles are blocked. Filters 1Z dirty. Filters 1Z inserted incorrectly and/or not engaged.

Rinse programme too weak. Utensils precleaned too intensely; sensors therefore decide on weak programme sequence. Stubborn soiling cannot be completely removed. Tall narrow receptacles in corner areas are not rinsed adequately. en Remedial action Arrange utensils with adequate clearance between them ensuring that the spray jets can reach the surface of the utensils.

Prevent contact points. Arrange utensils so that the spray arm can rotate without obstruction. Clean the spray arm nozzles, (see "Cleaning and maintenance"). Clean filters (see "Cleaning and maintenance"). Insert and engage filters correctly.

Select a more intensive rinse programme. Do not prerinse utensils. Remove only large food remnants. Recommended programme Eco 50° or Intensive. Detergent residue. Do not place hollow receptacles too obliquely and do not place in the corner area. Top basket 1 on right and left Set top basket to same height using side not set to same height. levers. Detergent dispenser cover Detergent dispenser cover must not be blocked by utensils and therefore obstructed by utensils. does not open fully.*

Do not place utensils or fragrance dispenser in the tablet collecting tray. Detergent dispenser cover Tablet must be inserted flat and not upright. blocked by the tablet. Tablets used in the quick or short Dissolving time of tablets too long for a programme. quick or short programme. Dissolving time of the detergent

Use a detergent powder or select a more is not reached in the selected intensive programme. short programme. Change detergent. Washing effect and dissolving performance are reduced after a prolonged storage time or detergent is very lumpy. 31 en Fault, what to do? Cause Droplet formation on plastic surface is physically unavoidable.

After drying, water stains are visible. Fault Water stains on plastic parts. Remedial action Use a more intensive programme (more water changes). Arrange utensils in a sloping position. Use rinse aid.

If required, increase softening setting. Washable or water-soluble Detergent substances are Change detergent brand. coatings in the container or deposited. These coatings cannot Clean appliance mechanically. on the door.

usually be removed with chemicals (appliance cleaner, ...). If there is a "white coating" on the Increase softening setting and change container floor, the water detergent if required. softening system has been set marginally. Salt dispenser cover 1R not Close salt dispenser cover correctly. closed. Only for glasses: Initial glass See "Glass and utensil damage". corrosion – can only apparently be wiped off.

White, stubborn coatings; Detergent substances are Change detergent brand. limescale on the utensils, deposited. These coatings cannot Clean appliance mechanically. container or door. usually be removed with chemicals (appliance cleaner, ...). Hardness range incorrectly set or Set water softening system according to water hardness greater than 8.9 instructions for use or top up salt.

mmol/l. Set water softening system according to 3 in 1 detergent or bio/eco detergent not effective enough. instructions for use or use separate detergents (proprietary detergent, salt, rinse aid). Underdosing of detergent. Increase detergent dosage or change detergent.

Too weak rinse programme Select a more intensive rinse programme. selected. Tea or lipstick residue on Too low rinsing temperature. Select programme with higher washing the utensils. temperature.

Too little or unsuitable detergent. Use suitable detergent at correct dosage. Utensils precleaned too intensely; Do not prerinse utensils. Remove only large sensors therefore decide on food remnants. weak programme sequence. Recommended programme Eco 50° Stubborn soiling cannot be completely removed.

32 Fault, what to do? Fault Coloured (blue, yellow, brown), difficult to remove to non-removable coatings in the appliance or on stainless steel utensils. Cause Film formation consisting of ingredients from vegetables (e.g. cabbage, celery, potatoes, noodles, .

..) or the tap water (e.g. manganese). Film formation caused by metallic components on silver or aluminium utensils. Film formation consisting of ingredients from food remnants and substances from the tap water (limescale), "soapy" en Remedial action Can be partly removed with machine cleaner or by mechanical cleaning.



[You're reading an excerpt. Click here to read official SIEMENS
SN65M009EU user guide
http://yourpdfguides.com/dref/5735362](http://yourpdfguides.com/dref/5735362)

Coatings are harmless. Can be partly removed with machine cleaner or by mechanical cleaning. Coloured (yellow, orange, brown), easily removable deposits inside the appliance (mainly in the floor area) Plastic parts discoloured.

Removable streaks on glasses, glasses with metallic appearance and cutlery. Initial or existing, irreversible clouding of glass. Check function of the water softening system (refill with salt) or, if using combined detergents (tablets), activate water softening system (see chapter "Water softening system/Special salt") Too low rinsing temperature. Select programme with higher washing temperature. Utensils precleaned too intensely; Do not prerinse utensils. Remove only large sensors therefore decide on food remnants. weak programme sequence. Recommended programme Eco 50° Stubborn soiling cannot be completely removed. Too much rinse aid. Set rinse aid amount to lower setting.

No rinse aid added or setting too Add rinse aid and check dosage low. (recommended setting 4–5). Detergent residue in the final Detergent dispenser cover must not be rinse programme section. obstructed by utensils. Detergent dispenser cover Do not place utensils or fragrance dispenser blocked by utensils (cover does in the tablet collecting tray. not open fully). Utensils precleaned too intensely; Do not prerinse utensils. Remove only large sensors therefore decide on food remnants. weak programme sequence. Recommended programme Eco 50° Stubborn soiling cannot be completely removed.

Glasses not dishwasher-proof. Use dishwasher-proof glasses. only suitable for dishwasher. Avoid long steam phase (standing time after wash cycle ends). Use wash cycle at lower temperature. Set water softening system according to the water hardness (if required one setting lower). Use detergent with glass protection component. 33 en Fault, what to do? Cause Cutlery not adequately rustresistant. Knife blades are frequently more severely affected. Cutlery will also rust if rusting parts are rinsed at the same time (pan handles, damaged utensil baskets, etc.).

Salt content in the rinsing water too high, as salt dispenser lock not fastened firmly or salt was spilled while being refilled. The mains fuse has tripped. Power cord not inserted. Remedial action Use corrosion-resistant cutlery. Fault Rust spots on the cutlery.

Do not wash rusting parts. Fasten salt dispenser lock firmly or remove spilled salt. Appliance does not start. Programme starts automatically. The door is difficult to open.

Door cannot be closed. Cover on the detergent dispenser cannot be closed. Detergent residue in the detergent dispenser or in the tablet collecting tray. Check mains fuse. Ensure that the power cord is plugged all the way into the back of the appliance and into the socket. Check that the socket functions. The appliance door has not been Close the door. shut properly. You did not wait until programme Perform reset. ended.

(See "Terminating the programme"). Child lock is activated. Deactivate child lock. (See instructions for use at the back) Door lock has been activated. Close door with increased force. Door cannot be closed due to Check appliance installation: Door installation. or attached parts must close without obstruction. Detergent dispenser or cover Remove detergent residue. guide blocked by sticky detergent residue. Spray arms blocked by utensils, Ensure that the spray arms can rotate freely.

therefore detergent is not rinsed out. The detergent dispenser was Pour detergent into the dry detergent damp when filled. dispenser only. 34 Fault, what to do? Fault Appliance stops in the programme or programme is interrupted. Cause Door not closed properly.

Do not place utensils or fragrance dispenser in the tablet collecting tray. Top basket presses against the door and prevents door from being closed securely. Power and/or water supply interrupted. Depends on domestic installation, as appliance is not defective. No effect on appliance function.

Spray arm strikes the utensils, utensils not positioned correctly. If there is a low load, the water jets strike the washing tank directly. Light utensils move during the wash cycle. Handwash liquid in the rinse aid dispenser. Rinse aid spilled. en Remedial action Close the door. Check whether rear panel is being pressed in, e.g. by socket or by hose holder which has not been removed. Restore power and/or water supply.

No remedial action possible. Filling valves making striking noises. Knocking or rattling noise. Position utensils so that the spray arms do not strike the utensils. Load the appliance with more utensils or distribute the utensils more evenly in the dishwasher. Arrange light utensils securely. Immediately refill rinse aid dispenser with rinse aid. Remove rinse aid with a cloth. Unusual foam formation. 35 en Customer service Customer service m ou C ts r e evs cr ie If you are unable to rectify the fault, please contact your customer service.

We always find a suitable solution, even to avoid unnecessary visits by technicians. Contact information for your nearest customer service can be found on the back of these instructions for use or on the enclosed customer service list. When calling, please state the appliance number (ENr. = 1) and the production number (FD = 2) which can be found on the rating plate 9: on the appliance door. Installation and connection na as otltn i d n a nc oto in e c The dishwasher must be connected correctly, otherwise it will not function properly.

The specifications for the inlet and outlet as well as the electrical connected loads must correspond with the required criteria as specified in the following paragraphs or in the installation instructions. Install the appliance in the correct sequence: 1. Checking appliance on delivery 2. Installing the appliance 3. Waste water connection 4.

Drinking water connection 5. Electrical connection Rely on the competence of the manufa cturer. Contact us. You can therefore be sure that the repair is carried out by trained service technicians who carry original spare parts for your domestic appliances. Product package If you have any complaints, contact the dealer where you purchased the appliance or our customer service. Dishwasher Instructions for use Installation instructions Warranty* Installation materials Steam guard plate* Rubber apron* Power cord * depending on model Safety instructions Please follow the safety instructions under "Installation". 36 Installation and connection en Delivery Your dishwasher has been checked thoroughly in the factory to ensure that it is in working order. This may cause small water stains. These will disappear after the first wash cycle. Installation The required installation dimensions can be found in the installation instructions.

Level the appliance with the aid of the height-adjustable feet. Ensure that the appliance is situated securely on the floor. A built-under or integrated appliance which is installed subsequently as a free-standing appliance must be secured to prevent it from overturning, e.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/5735362)

[SN65M009EU user guide](http://yourpdfguides.com/dref/5735362)

<http://yourpdfguides.com/dref/5735362>

g. by screwing it to the wall or by installing it under a continuous worktop which is screwed to adjacent cupboards. The appliance can easily be installed in a fitted kitchen between wooden and plastic walls. Technical specifications Weight: max. 60 kg Voltage: 220–240 V, 50 Hz or 60 Hz Connected load: 2.0–2.4 kW Fuse: 10/16 A (UK 13A) Power input: switched off 0.

1 W not switched off 0.1 W Water pressure: at least 0.05 MPa (0.5 bar), maximum 1 MPa (10 bar). At a higher water pressure: connect pressure-reducing valve ahead.

Inlet rate: minimum 10 litres/minute Water temperature: cold water; hot water max. temperature 60 °C. Capacity: 12–15 place settings (depending on model). Waste-water connection 1. @@If required, fit a siphon with an drainage connection.

2. @@@@Ensure that the drinking water connection is not kinked, crushed or twisted. 2. When replacing the appliance, always use a new water supply hose. Water pressure: At least 0.05 MPa (0.5 bar), maximum 1 MPa (10 bar). At a higher water pressure: connect pressure-reducing valve ahead. Inlet rate: Minimum 10 litres/minute Water temperature: Cold water; hot water max. temperature 60 °C.

Warm water connection * Warmwatercon ection * depending on model The dishwasher can be connected to cold or hot water up to max. 60 °C. Connection to hot water is recommended if the hot water can be supplied by energetically favourable means and from a suitable installation, e.g. solar heating system with circulation line. This will save energy and time. The hot water setting : allows you to adjust your appliance optimally to operation with hot water. It is recommended to have a water temperature (temperature of the incoming water) of at least 40 °C and no more than 60 °C. It is not recommended to connect the appliance to hot water if the water is supplied from an electric boiler. Setting hot water: 1.

Open the door. 2. Switch on ON/OFF switch (. 3. Hold down programme button # and press START button `until : .
.. is indicated on the digital display. 4. Release both buttons.

@@5. @@To change the setting: 1. By pressing the 3 button, you can switch the hot water setting off : or on : . 2. Press START button ` The set value is saved. 3. Close the door. 38 Installation and connection en Electrical connection Connect the appliance to an alternating current only, ranging from 220 V to 240 V and 50 Hz or 60 Hz via a correctly installed socket with protective earth conductor. See rating plate for required fusing 9:.

The socket must be near the appliance and freely accessible following installation. If the plug is not freely accessible, an allpole disconnector with a contact opening of at least 3 mm must be fitted on the installation side to satisfy the relevant safety instructions. The connection may be modified by technicians only. A power cord extension may be purchased from customer service only. Use only a residual current operated circuit-breaker which features the symbol . Only this extension guarantees compliance with the currently valid regulations. The appliance features a water damage protection system. Please note the system will not function unless the power supply is connected. Removing the appliance Also observe the sequence of worksteps here. 1.

Disconnect the appliance from the power supply. 2. Turn off the water supply. 3. Undo the waste water and drinking water connection.

4. Loosen fastening screws for the furniture parts. 5. If fitted, remove the base panel. 6.

Pull out the appliance, carefully pulling the hose behind. 39 en Installation and connection Transportation Empty the dishwasher and secure loose parts.

Drain the appliance according to the following steps: 1. Turn on the tap. 2. Open the door. 3. Switch on ON/OFF switch (. 4. Select programme with the highest temperature.

The expected programme duration is indicated on the numerical display h. 5. Press START button ` 6. Close the door. Programme sequence starts. 7. Open door after approx. 4 minutes. 8.

Press START button `until : is indicated on the digital display. 9. Close the door. 10. Open door after approx.

1 minute. The numerical display indicates : . 11. Switch off ON/OFF switch (. 12.

Turn off the tap, disconnect supply hose and drain water. Transport appliance upright only. (This prevents residual water from running into the machine control and damaging the programme sequence.) Protection against frost Protectionag instfrost(Emptyingtheap liance) If the appliance is in a room where there is a risk of frost (e.g. holiday home), empty the appliance completely (see Transportation). 40 *9000836663* 9000836663 en (9401) 640MV .



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/5735362)

[SN65M009EU user guide](http://yourpdfguides.com/dref/5735362)

<http://yourpdfguides.com/dref/5735362>