



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS TK52001. You'll find the answers to all your questions on the SIEMENS TK52001 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SIEMENS TK52001
User guide SIEMENS TK52001
Operating instructions SIEMENS TK52001
Instructions for use SIEMENS TK52001
Instruction manual SIEMENS TK52001

SIEMENS

Gebrauchsanleitung
Operating instructions
Notice d'utilisation
Gebruiksaanwijzing
Instrucciones de uso
Instruções de serviço
Инструкция по эксплуатации

de
en
fr
nl
es
pt
ru



TK 52...



[You're reading an excerpt. Click here to read official SIEMENS TK52001 user guide](http://yourpdfguides.com/dref/2815635)
<http://yourpdfguides.com/dref/2815635>

Manual abstract:

This appliance is designed for domestic and not commercial use. Figures AE 1 Power switch I/O Standby / on button a 3 Coffee dispensing button 5 (mild coffee) 4 Coffee dispensing button K (strong coffee) 5 Steam generation button h 6 Hot water / steam dial g/h 7 LED display a Add water H b Empty tray I c Run service programme S d Turn dial J 8 Nozzle (for hot water / steam) a Plastic mounting b Sleeve c Nozzle tip 9 Heightadjustable coffee outlet 10 Lid for water tank 11 Removable water tank 1 Bean container with aroma cover 13 Cleaning tablet duct 14 Cup shelf (warming function) 15 Sliding switch for adjusting grind 16 Grate 17 Coffee grounds tray 18 Residual water tray 19 Float 0 Cord storage compartment 1 Doors to brewing unit Brewing unit a Button (red) b Handle Do not use if either the the power cord or the appliance is damaged. Use indoors at room temperature only. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. in the event of malfunction , unplug the appliance immediately. To avoid potential hazards, repairs such as replacing a damaged cord should only be performed by our service personnel. Never immerse the appliance or power cord in water. Do not reach into the grinding unit. Hold the nozzle 8 by the plastic part only, not by the metal parts.

When steam or hot water is released, the nozzle 8 may initially sputter. Before using for the first time General Fill the water tank with fresh, uncarbonated water only, and if possible, use only beans for fully automatic coffee and espresso machines. Do not use coffee beans that have been glazed, caramelized or treated with other additives containing sugar, since they will block the grinding unit. En This appliance can be adjusted for use with different water hardness values (see "Setting the water hardness"). As soon as J lights up, turn the dial 6 back to O.

The appliance is ready for use when the standby LED a lights green. En 11 Warning Do not press the power switch while the appliance is operating. @@@@When the button is pressed, the coffee is ground, brewed and dispensed into the cup. 4 Coffee dispensing button K (strong coffee) This button is used to dispense strong coffee. When the button is pressed, the coffee is ground, brewed and dispensed into the cup.

5 Steam generation button h The steam button h generates steam for foaming or warming. 6 Steam dispensing dial Hot water or steam can be dispensed by turning the dial to gor h. I The appliance's factory settings are 1 Power switch The power switch 1 on the rear of the appliance switches the power supply on and off. When the power is switched on, the standby LED a lights red. 461732) is used, the water hardness should be set to 1. Note: If no button is pressed within 90 seconds, the appliance switches to stand by mode without saving the new settings. Warning Adjust the grinding unit only while it is running! Otherwise the appliance may be damaged. I he new setting will not become apparent T until the second or third cup is brewed. Tip: For dark roast coffee beans, choose a coarsergrind;forlightroastbeans,selecta finergrind. Float Thefloat19 in the water tray 18 shows when the tray needs emptying.

Ifthefloat19 is clearly visible, empty the water tray 18. Setting the water hardness It is important that the water hardness be set correctly, so that the appliance indicates accurately when the descaling programme should be run. the factory setting is a water hardness of 4. You can check the water hardness by asking your local water supplier. The number of LEDs 7a H, b I, c S, d J that light up indicates the selected water hardness. @@@@ deepfreeze or store in a cool place in sealed , airtight containers. Coffee beans can be ground while frozen. Important: Fill the water tank with fresh water every day. @@Do not allow it to become empty. @@The appliance must be ready for use.

The coffee is brewed and dispensed into the cup(s). @@ 30 220 ml). I The volume can be changed again at any time. @@The appliance must be ready for use. @@At any time by pressing the coffee dispensing button 5 or K.

It is possible to dispense the same amount of coffee a second time. @@Note: The second cup is brewed using the previously ground coffee. When the dial is set to g/h, the nozzle may sputter a little. The appliance must be ready for use. @@@@ assoonastheJLEDflashes ,turnthedial 6 to g/h.

When the dial 6 is set to g/h, the nozzle 8 may sputter. Escaping steam is very hot and may cause liquids to sputter. @@Note: When the nozzle 8 has cooled down, clean it immediately. The appliance must be ready for use. Immersthenozzle8 deep into the liquid you want to heat. assoonastheJLEDflashes ,turnthedial 6 to g/h. When the dial 6 is set to g/h, the nozzle 8 may sputter a little. Escaping steam is very hot and may cause liquid to sputter. @@@@Clean the tip of the nozzle 8/c with a blunt needle. thoroughlyrinseanddryallparts.

Brewing unit The brewing unit can be removed for cleaning (Fig. @@@@Vacuumtheinsideoftheappliance,or clean it with a damp cloth. reinsertthebrewingunit all the way into the appliance. @@The brewing unit is now secure. @@If the service programme is not run as instructed, the appliance may be damaged. 310575) can be obtained from our customer service department. Warning Each time you run the service programme, follow the instructions for using the cleaning and descaling agents. Never put descaling tablets or other descaling materials into the duct for cleaning tablets. Important: If there is a filter in the water tank, it must be removed before the service programme is run. Starting the service programme

Switchtheappliancestandbymode using the standby button a.

The SLEDstartstoflash and the appliance rinses the coffee dispenser through twice. Or pour prepared descaling mixture into the water tank (total liquid: 0. Liquidflowsintothecoffeegroundstray 17 inside the appliance, then out through the coffee outlet. The appliance heats up and is ready for use again when the standby LED a lights green. Due to a power cut, it is vital that the appliance be rinsed before it is used again.

The appliance rinses and is ready for use again. @@The appliance must be ready for use. AssoonasJ lights up on display, turn dial 6 to g/h. the appliance will release steam for a while. Whennozzle8 stops releasing steam, turn dial back to 'O'.

@@@@Please ask your specialist retailer about current disposal facilities. Sleeve b on nozzle 8 not in correct position. Fill water tank and make sure it is in the right posi tion. Grinding unit does not grind the beans. Grinding unit makes a loud noise. Beans are not falling into the grinding unit (beans too oily).

Foreign objects in the grinding unit (e. g. Grit, which can be found even in superior types of coffee).



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/2815635)

[TK52001 user guide](http://yourpdfguides.com/dref/2815635)

<http://yourpdfguides.com/dref/2815635>

Button a and button Sflash The brewing unit is missing, or is not properly alternately.

If problems cannot be eliminated, always call the hotline. The guarantee conditions for this appliance are defined by your representative in the country in which it is sold. Details regarding these conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee. .



[You're reading an excerpt. Click here to read official SIEMENS](#)

[TK52001 user guide](#)

<http://yourpdfguides.com/dref/2815635>