



Your PDF Guides


You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS WDI1441. You'll find the answers to all your questions on the SIEMENS WDI1441 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SIEMENS WDI1441
User guide SIEMENS WDI1441
Operating instructions SIEMENS WDI1441
Instructions for use SIEMENS WDI1441
Instruction manual SIEMENS WDI1441

SIEMENS

Instruction Manual and Installation Instructions

en

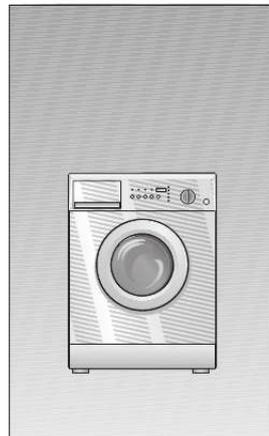

Wash & Dry



[You're reading an excerpt. Click here to read official SIEMENS WDI1441 user guide](http://yourpdfguides.com/dref/3656278)
<http://yourpdfguides.com/dref/3656278>

Manual abstract:

.....
.....
. Your New washer dryer
.....

..... Description of the washer dryer . . .
.....
.....

. Preparing and sorting the laundry

. . . . Detergents and cleaning products

.....
. First wash
.....

.....
.....
. . . Programmes and functions . . .
.....

..... Washing and drying

..... End of programme .

.....
.....
.....
. . . . Cleaning and servicing the washer dryer

. What to do if

.....
.....
.....
. . Customer service

..... Consumption data . .

.....
.....
.....
. . . @ @

.....
.....
.....
. . . . 38 Appendix Index .

..... @ @ @ @ Further information and a selection of our products can be found on our Internet page: <http://www.siemens-international.com> General safety instructions This washer dryer meets the relevant safety requirements. d Risk of choking! Do not let children play with packaging and associated parts. Risk of choking on plastic film and collapsible cardboard boxes. d Danger of death! Unplug mains plug on redundant appliances.

Cut off mains cable and discard with mains plug. Destroy the lock on the door. This will prevent children from locking themselves in the appliance and suffocating. Before starting operation - Install the washer dryer in accordance with the installation instructions, page 38. - Remove and keep the transport protection devices and cross pieces. - Do not connect the washer dryer if it has visible damage. If in doubt consult customer service or dealer. This washer dryer is intended for: - use in the household only - washing machine washable textiles in water and drying these textiles - operation with commercially available detergents and cleaning products which are suitable for use in washing machines. Using your washer dryer correctly 3 Do not use the washer dryer if: - the laundry has been treated with a solvent or has been colour treated (e.g. stain remover, petroleum ether). - the laundry contains dust, e.g. coal dust or flour - the laundry contains foam/rubber - the laundry contains traces of hairspray, nail varnish remover or similar substances. When washing and drying please note - Remove all objects from pockets, especially lighters.

- Do not leave children unsupervised with the appliance. - Keep pets away from the appliance. - Do not insert/pull out the mains plug with wet hands. - Do not pull out the mains plug by tugging the cable. - Caution when draining hot water.

- Do not climb onto the washer dryer. - Do not lean on the open washer dryer door. - Do not install the washer dryer in a room where there is a risk of freezing. - Transit bolts must be in position for transport. This appliance is labelled in accordance with European Directive 2002/96/EC concerning used electrical and electronic appliances (waste electrical and electronic equipment WEEE). Looking after your washer dryer WEEE ó The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU. 4 Your New washer dryer Control panel Display panel Indicates the settings which have been selected (e.g. spin speed, time delay) as well as programme progress and the programme state. Option lights W start, X end, B spin determine the display's content.

r dry selected for drying Z delicate selected for drying M Start button For starting and pausing the cycles. Door h button For opening the door. Buttons I quick (in addition to the programme if required): Shortened programme duration. W delay (in addition to the programme if required): Selects the start time (delays the start of the programme). r dry: Selects the drying mode and the drying time. B spin: Selects the spin speed or without final spin". Z delicate drying: Set low or normal heat. Programme selector For switching the washer dryer on and off and for selecting the programme. Can be rotated in either direction. The indicator lights of the buttons come on, if the options are active.

5 Description of the washer dryer Operation and special features Our washer dryer allows the following programmes to be set: - wash only - dry only - wash+dry The complete wash+dry programme shifts automatically from the wash cycle to the dry cycle without further intervention. Drying works on the principle of condensation. The condensation produced during the drying cycle runs via the drain hose to the catchment basin. The tap must be left open and the drain hose properly connected during drying cycles. The washer dryer is fitted with a safety device that prevents the door from opening while it is working.

Make sure there is no water in the tub and that the drum is not moving. Opening the door at the end of a programme q Wait until End appears on the display. q Press the door h button on the front panel. The acoustic signal indicates: - pressing a button - start of programme - end of programme - operating errors and faults. q Press the I quick and W delay button simultaneously to activate or deactivate the signal.

The display indicates j or i. i The volume of the signal cannot be changed. Programme state Press the B Spin button for approximately 5 seconds (if the j signal is shown, a double beep will sound) to display the programme status. The programme status will be shown in the display, depending on the spin speed selected. The door The signal 6 If the washer dryer is in the washing cycle, the ÊÊ symbol appears in the Q wash display. If the washer dryer is in the drying cycle, the ÊÊ symbol appears in the r drying display. Preparing and sorting the laundry Preparing the washing Warning Loose debris (e.g. coins, paper clips, needles, nails) can damage items of clothing as well as parts of the washer dryer (e.g.

drum). q Empty all pockets on items of clothing. q Brush sand out of pockets and cuffs/turn ups. q Close zips, fasten pillow cases/cushion covers. q Remove curtain runners or tie up in a net/bag. q Wash in a net/cushion cover: - delicates, e.g. tights, curtains, - small laundry items, e.g. socks or handkerchiefs, - underwired bras (underwire may become detached during washing and cause damage). q Trousers, knitwear and knitted textiles, e.g. jersey garments, T shirts or sweatshirts should be turned inside out. q Do not wash unhemmed or torn garments as they may fray. Only dry fabrics that have already been washed, rinsed and spun.

Preparing the laundry for drying - Spin delicate fabrics before drying. - Sort the items for washing according to material and desired level of dryness to ensure even drying. 7 Sorting the laundry for washing Sorting washing according to the instructions on the care labels Only wash laundry that is labelled with the following care symbols: ed Cottons 90 °C cba Coloureds 60 °C, 40 °C, 30 °C hgf Easy care 60 °C, 40 °C, 30 °C 6lgkf Hand washable and machine washable silk and wool, cold, 30 °C Do not wash laundry items which bear the following care label in the washer dryer: B = do not wash Sort the laundry with due consideration for maximum loads.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3656278)

[WDI1441 user guide](http://yourpdfguides.com/dref/3656278)

<http://yourpdfguides.com/dref/3656278>

For optimum washing results, do not exceed the following machine loads: Maximum laundry loads for washing Whites/coloureds Easy care Delicates Machine washable wool and silk 5.0 kg 2.

5 kg 2.0 kg 1.0 kg 8 Sorting the laundry for drying Warning Sort the laundry according to the care symbols on the labels. Use to machine dry only laundry that is labelled "dry er safe", or that is identified by the following care symbols: = Dry at normal temperature = Dry at low temperature (Gentle drying) Do not dry the following garments in this washer dryer: - Laundry that is identified with the following care symbol: = Do not dry in a tumble dryer. - Airtight fabrics (e.g. rubber coated fabrics). - Delicate materials (silk, curtains made from synthetic material) they may crease. - Dripping wet laundry high energy consumption. - Wool or fabrics containing wool.

- Observe the manufacturer's instructions. i Keep the maximum machine load in mind. Do not overload the washer dryer. Maximum laundry loads for drying Cottons / coloureds Easy care 2.5 kg 1.5 kg 9 Detergents and cleaning products Dosing detergent d Risk of poisoning! Keep detergents and cleaning products out of the reach of children. Dose detergent according to q the water hardness. You can find out the water hardness from your water utility company. q the specifications of the detergent manufacturer. q the amount of laundry.

q the degree of soiling. i The correct dosage reduces the impact on the environment and produces a good washing result. i For the wool programme, only use pH neutral detergents for woollens. Normal dirty washing q Choose a programme without prewash. q Pour the total quantity of detergent indicated on the packs into dispenser 2 of the detergent drawer.

Very dirty washing q Choose a programme with prewash. q Add ¼ of the recommended quantity of detergent into dispenser 1 of the detergent drawer and ¾ of the detergent into dispenser 2. Dosing liquid detergent i Use liquid detergents only for the main washing cycle, without prewash. q Pour the recommended dose into the batcher supplied with the liquid detergent and place it inside the drum or q Pour the liquid detergent into dispenser 2 of the detergent drawer after fitting the relative red insert A. i The scale on the red insert will help you to use the right quantity of liquid detergent.

i When dispenser 2 is used for powder detergent, the red insert A must be removed. Dosing powder detergent 10 Liquid detergents and start time delay Start time delay, page 19. With time delay selection use a dosage container for liquid detergents, e.g. a ball, otherwise the liquid detergent will run slowly out of the soap dispenser and congeal. Take dosage container out of the drum at the end of the programme. Dispenser 1 Detergent for prewash. Dispenser 2 Detergent for main wash. Machine accessories include a red insert A that can be placed inside dispenser 2 to allow liquid detergent to be used. Dispenser 2 (3) Pour liquid additives such as starch and fabric softener.

The additives are automatically introduced into the tub during final rinsing. i The level of the liquids must not exceed the maximum limit, otherwise the trays will be emptied too soon. i Before pouring thick additives into the tray, dilute them with a little water to prevent them from obstructing the trap. Dispenser 4 is used for bleach. i If there is a cover marked , this means that bleach cannot be used with this model of machine. q Pull out the detergent drawer. q Pour in detergent and/or cleaning product. q Close the detergent drawer. Scale removers Scale removers can be introduced into dispenser 1 and 2 according to the manufacturer's indications. First, add the detergent and then the scale remover.

Filling detergent/ cleaning product 11 First wash The washer dryer was tested before leaving the factory. To remove any residual test water, wash the first time without any laundry. q Check that the transport protection devices and cross pieces have been removed from the back of the washer dryer. q Do not load any laundry. q Close the door.

q Open the water tap. q Pull out the detergent drawer all the way. q Put half a measuring cup of normal detergent into dispenser 2. i Do not use any special detergents for woollens or delicates (foam formation). q Close the detergent drawer.

q Set the programme selector to the required programme, e.g. Æ cotton 60 °C. q Press the M Start button. q When the programme has ended, set the programme selector to the = off position. q Open the door. i Leave the door ajar in order to allow the inside of the washer dryer to dry. 12 Programmes and functions Programme selector The programmes are set using the programme selector. This can be turned in either direction. The programme selector must not be set to intermediate positions between the indicated programmes.

Æ cotton 30, 40, 60, 90 & dryer subsequent to the starching cycle, add approx. 30 to 50 % more starch, and select the b+B empty+spin programme with the maximum spin speed to attain the highest degree of water extraction. Fluff removal (after the drying programme) When drying particularly fluffy items such as new terry towels, the rinse+spin K+B programme should be carried out to ensure that any deposits left by the fabric are removed and are not deposited on the clothes in the next wash. Special programmes 16 Soaking Only put items of the same colour into the drum. Put detergent for soaking in chamber 2. Follow the manufacturer's instructions on the package. i If the soaking suds are to be retained for the main wash programme, a detergent suitable for drum type washers must be used. (Risk of excessive foam formation!) Set programme selector to A easy care 30 or 40. Press the M Start button. After approx. 15 minutes, set the programme selector to m off and allow laundry to soak in suds as long as desired. i After one minute the loading door is unlocked. Suds may exit when opening! To end the soaking programme: - Pump away softening agent. Select spin speed suitable for your fabric. To avoid heavy foaming choose a wash programme with prewash after the spin cycle but do not put any detergent into compartment 1.

- If the laundry is to be washed in the soaking water: Set the programme selector to the desired programme and start it without adding further detergent. Dyeing Your washer dryer offers only limited possibilities for dyeing. Please use only environmentally friendly dyeing agents. Follow the manufacturer's instructions on application and suitability for washing machines. Therefore, after each dyeing, run a 90 °C wash programme without laundry. Put 1 2 a measuring cup of normal detergent in chamber 2. d Laundry which is washed in the washer dryer after a dyeing programme may discolour as dye deposits may be left in the machine. 17 Bleaching Only use this washer dryer for bleaching, if there is no cover on dispenser 4 marked Pumping To pump out rinsing water after without final spin" (spin speed set to 000), page 21.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3656278)

[WDI1441 user guide](http://yourpdfguides.com/dref/3656278)

<http://yourpdfguides.com/dref/3656278>

q Turn the programme selector to b+B empty+spin. q Press M Start button. or to pump out and spin with the setting spin speed. q Turn the programme selector to b+B empty+spin. q Press B spin button to select the required spin speed, page 21. q Press M Start button. .

18 Start M button Pausing the programme Press this button to start the selected programme. The M Start LED is constantly on from the start of the programme until the end. Press the M Start button while the programme is running, and keep it pressed until STOP appears in the display (approx. 3 seconds). While the programme is paused the LED M Start flashes, with STOP and --- alternating in the display. To resume the programme, press the M Start button again. Stopping the programme Press the M Start button while the programme is running, and keep it pressed (approx. 8 seconds) until 0000 appears in the display. This button reduces the overall duration of the programme cycle (washing, rinsing, spinning). This function is suitable for washing smaller loads or lightly soiled items in a shorter time.

Not suitable for programmes with pre wash. Not possible with wool and delicates washing programmes. Quick I button Delay W button You can set a delay period, in hours, before the programme is to start. Press the delay W button repeatedly until the required number of hours is displayed. The default value is 0 hours, 0 minutes.

Each time the button is pressed the delay is increased by 1 hour, up to 12 hours, and by 2 hours for the subsequent 12 hours, up to 24 hours. Reset Delay time Press the delay W button for approx. 3 sec.. After setting the start time, press the M Start button.

The delayed start time countdown begins. The start W LED lights up while the start time is selected and remains on until the programme starts. The delay W LED monitor flashes. Once the set delay period has passed, the selected programme begins. 19 Changing the start time setting Cancelling the start time Press the delay W button repeatedly until the required time is displayed. Press the delay W button repeatedly until 0:00 appears in the display. The delay W LED goes out. When the button is pressed again, the upward time count begins again from 0:00. Opening the door The door can be opened during the delayed start time countdown, e.g.

to add additional items for washing. i Note the maximum load quantity. Do not overload the washer dryer. Dry r button Press the button repeatedly until the desired drying programme is selected. The auto indicator LED lights up. Automatic drying programme selected, humidity sensor determines drying time, page 15. The time indicator LED lights up. Time controlled drying programme selected, also necessary to select the drying time. The r dry LED lights up.

Intensive drying programme: for fabrics made of cotton and linen E.

The u delicate drying LED lights up. Delicate drying programme: for synthetics, delicate and sensitive textiles D. Changing the drying programme Setting the drying time Press the dry r button repeatedly until the desired drying programme is selected. After selection of the time-controlled drying programme, press the dry r button repeatedly until the desired drying time is shown in the display. After approximately 5 seconds, the setting mode for the drying time is exited. The set values are adopted. Press the dry r button repeatedly until 0:00 appears. No drying programme is selected. After approximately 5 seconds, the setting mode is exited. Exiting the setting mode 20 Guide values for Drying times Drying for too long causes the laundry to shrink or crinkle and unnecessary energy consumption.

Therefore, avoid drying times that are too long. i Warm items feel damper than cold ones. This could lead to incorrect assumptions. Washing load 1.5 kg 2.5 kg Hard wearing fabrics 40 minutes 80 minutes 80 minutes 100 minutes Easy care fabrics 80 minutes 100 minutes 120 minutes - Drying result Damp for ironing Dry Damp for ironing Dry Delicate drying u button Press the button to select a reduced or normal drying temperature. i After selection of a drying programme, also press the dry r button within approximately 5 seconds. Press this button to select the choice of the spin speed. q Press the button repeatedly to select the required spin speed. The following spin speeds are available: Spin B button 000 rpm: Spin disabled and stop with tub full.

The washer dryer does not perform the final spin and ends the washing programme with water in the tub. To drain the water, page 18. For cotton and coloured programmes, speed decreases by 100 rpm starting from max. 1400 down to 600 rpm For synthetics, delicates and woollens programmes, speed decreases by 100 rpm starting from 900 down to 600 rpm. The indicator LED lights up while the spin speed is being selected. from 600 to 1400 rpm: from 600 to 900 rpm: Resetting Press the spin B button for approx. 3 seconds. 21 i Drying times depend on the spin speed: the higher the speed the lower the drying time and, consequently, the lower the power consumption. Choose the highest spin speed compatible with the type of laundry. Unbalanced load detection system The automatic unbalanced load detection system turns round the laundry several times to ensure even distribution.

If the laundry is very unevenly distributed, the final speed is reduced or there is no spin cycle for reasons of safety. 22 Washing and drying This washer dryer allows - wash only - dry only - wash+dry programmes to be set. In the wash+dry programmes, the cycle shifts automatically from washing to drying without having to touch the controls to continue the cycle after washing. Opening the door Loading the washer dryer q Press the door h button to open the door. d

Risk of explosion! @@@@q Place the laundry loosely and unfolded in the drum.

Mix large and small items. @@@@q Close the door by pressing it shut until it engages audibly. q Measure and fill detergent for wash only or wash+dry programmes. @AE cotton 60 °C. @@q Select the required spin speed, page 21.

q Select additional functions for individual programmes, e.g. short wash or a delayed start time. q The drying time must be set to 0:00. q Press the Start M button. The LED monitor lights up. The remaining time appears in the display. @@q Press the Start M button for approx. 3 seconds. The display alternates between STOP and ---.

The Start M LED flashes. @@8 seconds). q Select a new programme The display alternates between STOP and ---. Starting a new programme: Press the Start M button. @@@@i The maximum permitted load for drying is 2.5 kg. @@@@q Press the Start/Stop M button. The LED monitor lights up. @@q Press the Start M button for approx. 3 sec.

The display alternates between STOP and ---. The Start M LED flashes. Continuing the programme: Press the Start M button again. Opening the door d Risk of burning! Depending on the drying programme, the washing can be very hot. q Press the door h button on the front panel.

i The door can be opened after approx.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3656278)

[WDI1441 user guide](http://yourpdfguides.com/dref/3656278)

<http://yourpdfguides.com/dref/3656278>

@@@3 seconds. The display alternates between STOP and ---. The X end LED flashes. @@@@i Note the maximum permitted load for drying. @@q Select the required spin speed, page 21. @@@The display alternates between the programme length and the selected spin speed. q Press the Start M button. One of the display LEDs (dry Y or delicate drying u) lights up. Pausing the programme i The washing+drying can be paused at any time during the cycle. q Press the Start M button for approx. 3 sec. The display alternates between STOP and ---. The Start M LED flashes. Continuing the programme: Press the Start M button again.

26 Cancelling the programme Press the Start M button during the programme cycle and keep pressed until 0000 appears in the display (approx. 8 seconds). Changing the washing programme q Turn the programme selector. Select the new programme. The display alternates between STOP and ---. The Start/Stop M LED flashes. @@q Press the delicate drying u button if desired, page 21. Starting the new programme: Press the Start M button. 27 End of programme The washing and drying programmes finish automatically. End appears in the display, and the X end LED lights up.

q Turn the programme selector to m off. q Remove the washing from the drum. q Leave the door open to allow the inside of the washer dryer to dry out. q Turn off the tap. Without final spin At the start of the wash cycle, the spin speed was set to 000. The washing is held in the last rinse water. At the end of the washing programme the display alternates between STOP and 0000 (spin speed 0). The B spin LED lights up. q Set the programme selector to empty+spin b+B. q Press the Start M button. The water is drained away. The washer dryer does not spin. The programme has ended when End appears in the display. q Remove the dripping wet washing. or q Set the programme selector to empty+spin b+B. q Press the spin B button repeatedly until the required spin speed is set, page 21. q Press the Start M button. The water is drained away. The washer dryer spins. The programme has ended when End appears in the display.

q Remove the laundry. q Leave the door open to allow the inside of the washer dryer to dry out. q Turn off the tap. 28 Cleaning and servicing the washer dryer d Risk of electric shock! First, always disconnect the appliance from the power supply. Never clean the washer dryer with a water jet. d Risk of explosion! Never clean the washer dryer with solvents. Warning Use only mild detergents to clean the washer dryer. Never use sharp objects they will damage the surface! Housing and fascia Drum If required: q Use a mild, non abrasive detergent. q Wipe dry with a soft cloth. Remove residual foreign bodies from the drum and rubber seals.

If metal items (e.g. coins, paper clips, needles, nails) left in the drum have caused rust spots: q Use chlorine free cleaning agents; comply with the manufacturer's instructions. Never use steel wool. Detergent drawer If there are detergent or cleaning product residues in the detergent drawer: q Pull out the detergent drawer to its stop (position). q Lift it slightly and then pull fairly vigorously. q Clean the inside of the detergent drawer housing. q Remove the trap B. q Clean the detergent drawer and insert B under running water and dry. q Put back the trap B. q Slide in the detergent drawer. 29 Detergent pump Detergent has not been completely pumped away. The pump may be blocked by foreign bodies or lint. d Risk of scalding! Allow hot detergent to cool. Keep children and pets away from the washer dryer. q Set the programme selector to m off. Opening the service flap q Using a coin, turn the plastic covers in an anti clockwise direction. Draining the water q Remove the drain hose from its holder and pull out of the housing. q Pull out cover cap B and allow water to flow into a container positioned beneath it. i Depending on the water quantity it may be necessary to empty the container several times.

q When there is no more water flowing out, replace cover cap B and push the hose back into place. q Unscrew pump cover D in an anti clockwise direction. More water will flow out. q Remove detergent residues, foreign bodies and lint from the inside, and clean the interior. The pump impeller must be able to turn freely. q Remove detergent residues, foreign bodies and lint from the pump cover thread and pump housing. q Replace the pump cover and screw firmly in place. Replace the service flap and close firmly q First replace the lower part of the service flap. Using a coin, turn plastic cover a 1/4 turn anti clockwise. i The slots in the covers must be horizontal.

30 Filter in the water inlet hose If no water or insufficient water is running into the washer dryer: First, reduce the water pressure in the inlet hose: q Turn off the tap. q Switch off the washer dryer. q Remove the plug from the socket. q Remove the hose from the tap. q Clean the filter with a small brush or paint brush. q Connect the hose. q Open the water tap. q Check whether water is leaking out of the end of the hose connected to the tap. If water is still discharged, check that the strainer is attached properly. Caution Descaling agents contain acids which may corrode the components of the washer dryer and discolour the washing.

Provided that you use the correct amount of detergent, it is not necessary to descale the washer dryer. If descaling is nevertheless required, please follow the instructions supplied by the manufacturer of the descaling agent. Descaling the washer dryer 31 What to do if ... d Risk of electric shock! Repairs must only be carried out by customer services or authorised technicians. If repairs are needed, or if you cannot repair a fault yourself with the help of the following table: q Set the programme selector to m off. q Disconnect the washer dryer from the power supply. q Turn off the tap. q Call customer services, page 36.

Error codes in the display Error code Possible cause Door not closed properly. You have added more washing. Safety device has not yet locked. Defective Aquasure hose. Viewing window red. No water for washing. Remedial action Close the door. Wait for the safety device to lock. Unplug from the mains; turn off the tap; replace the hose. Check that: the plug is inserted correctly in the socket the door is closed properly the tap is open the water supply hose filter is not blocked.

Cleaning the filter, page 31. Turn off the tap; wait for pumping to finish; unplug from the mains; call customer services Check that: the drain hose is not kinked or twisted the detergent pump is not blocked. Cleaning the pump, page 30. Water loss in the washer dryer. Detergent pump pumps constantly. Water does not drain away. Other error codes are only for use by our customer service staff. Note the error code and quote it to the customer service representative. 32 Fault Door cannot be opened. Possible cause Spin speed = 0 selected.

Remedial action Select programme empty+spin b+B and start. Programme is running and/or door is locked for safety reasons.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3656278)

[WDI1441 user guide](http://yourpdfguides.com/dref/3656278)

<http://yourpdfguides.com/dref/3656278>

display. Programme does not start. The Start M button has not been pressed. Delayed start time selected Power failure selected delayed start time deleted Door not closed properly. Plug not inserted properly into socket. Spin speed cannot be selected. Maximum spin speed cannot be set. Detergent residues in the detergent drawer.

Detergent container does not fill with water. Washer dryer fills with water and continuously drains it away. Spin already in progress; spin speed cannot be set or changed during spinning. Easy care or wool programme has been selected. Damp or lumpy detergent. Press the Start M button. None. Washer dryer starts on completion of the delay period. Reselect the delay period or start the programme immediately: Press the Start M button. Close the door.

Insert plug correctly. Always select the spin speed before the spin cycle starts. Change programme as required. Clean and dry the detergent drawer, page 29. Use the measure for liquid detergent.

Plug not inserted properly into socket. Drain hose fitted too low. Insert plug correctly. Fit drain hose correctly, page 42. No water can be seen in Not a fault. the drum. During certain programmes the water level is below the visible range. Supply hose screw fitting is leaking. Water leaks from the bottom of the appliance. Drain hose is leaking. Tighten screw fitting. Have the drain hose replaced by customer services. 33 Fault Water does not drain. Possible cause Drain hose is twisted. Detergent pump is blocked.

Remedial action Fit the drain hose correctly. Clean the detergent pump, page 30. Reduce amount of detergent. Only use detergent which is correct for the type of textile, and designated for use in automatic washing machines. Always wash large and small items together. Foam escapes from detergent drawer. Too much or incorrect detergent used. Several attempts to start Not a fault. spinning. Imbalance monitoring system attempts to even out poor washing distribution by spinning the washing several times.

Washing is not spun properly. Large items are not distributed evenly in the drum. Spin speed is automatically reduced for safety reasons. Soiling worse than expected. Insufficient detergent used.

Always wash large and small items together. Washing results not satisfactory. Select appropriate programme, e.g. programme with pre wash. Measure detergent quantity in accordance with manufacturer's specifications. Rinse washing again or change to liquid detergent. Brush washing after drying. Detergent residues on the washing. Some phosphate free detergents contain water insoluble residues which appear on washing as light specks. Drying results not satisfactory. Not a fault. Dig up the ring by hand. Laundry pressed against the sides of Start a drying programme, page 25 the drum, forming a ring. Water tap is closed.

Maximum or minimum load not considered, page 15 The drying time is unsuitable. Open the tap. After the end of the programme: adjust the load, select a suitable drying programme and restart Select the drying time in accordance to the type of load. Set a brief timed drying cycle. 34 Fault Grey residues on the washing. Programme terminated unexpectedly. The display shows ÊÊ Nothing appears in the display. Possible cause Soiling caused by ointment, grease or oil. Start M button pressed accidentally. Not a fault.

Programme status is displayed Power failure. Remedial action Use maximum permissible detergent amount and temperature for the next washing cycle; see the care label. Press the button again to restart programme. The washing or drying cycle is continued, page 6. Programme will continue when power supply is restored.

If washing is removed during a power failure, first drain off the water, page 30. Check whether: the plug is inserted properly into socket the fuse (protective device) has blown; call customer services 35 Customer service Before you call customer service, please check whether you can eliminate the fault yourself, from page 32 onwards. A technician who is called out to give advice will charge you, even if the appliance is still under guarantee. You can find your nearest customer service in the enclosed address list. Please provide customer service with the product number (E Nr.

) and the production number (FD) of the appliance. You can find these numbers in the box marked in bold outline on the identification plate on the door frame. E Nr. FD Product number Production number Please write the numbers of your appliance here. To prevent unnecessary call outs, please assist customer service by quoting the product and production numbers. This will save you additional costs. 36 Consumption data Washing Programme Coloureds 60 °C Washing and drying Cotton 60 °C (coloureds) and cupboard dry 5.0 kg 2 x 2.5 kg (for drying) Electricity: 4.25 kWh Water: 95 l Weight of washing 5.

0 kg Result Electricity: 1.1 kWh Water: 49 l Automatic washing/drying process Boil wash 90 °C + cotton cupboard dry Coloureds 60 °C + cotton cupboard dry Coloureds 40 °C + cotton cupboard dry Easy care 40 °C + easy care cupboard dry 1.5 kg 2.5 kg 2.5 kg 2.5 kg Electricity: 3.35 kWh Water: 81 l Electricity: 2.70 kWh Water: 72 l Electricity: 2.2 kWh Water: 72 l Electricity: 1.90 kWh Water: 91 l Drying Fabrics Weight of washing 1.

5 kg Resistant drying 2.5 kg 1.5 kg 2.5 kg Drying time 40 minutes 80 minutes 80 minutes 100 minutes 80 minutes 100 minutes 120 minutes Drying result Damp for ironing Dry Damp for ironing Dry Damp for ironing Dry Damp for ironing Energy consumption [kWh] 0.7 1. 2 0.9 1.4 0.8 0.9 1.

0 Delicate drying 37 Installing, connecting and transporting the washer dryer Please install and connect the washer dryer in accordance with the enclosed installation and assembly instructions. Be sure to read the information contained in this chapter! Safety information d Risk of injury! The washer dryer is very heavy. Lift with caution. Frozen hoses may tear/burst. Do not install the machine in an area where there is a risk of frost or outdoors. The washer dryer may be damaged. Do not turn the washer dryer upside down and do not place it on its side. Do not lift the washer dryer by its projecting parts (e.g. door).

Check the washer dryer for damage caused during transportation. Do not connect the washer dryer if it has visible signs of damage. If in doubt, contact your local dealer. Remove and keep transit bolts and cross pieces. In addition to the instructions listed here, particular regulations issued by the relevant water and power utility companies may apply. If in doubt, have the appliance connected by an electrician. Bag inside the drum contains: - Covers for holes left by removing the transport bolts. - Separator for liquid detergent - Wrench - 1 24-40 mm Ø hose clip (specialist outlet) for connection to a siphon. - a door template, - utilities for the built in installation. Standard accessories 38 On the back of the washer dryer: - Water drain hose.

- Water inlet hose - Mains cable with plug.



[You're reading an excerpt. Click here to read official SIEMENS](#)

[WDI1441 user guide](#)

<http://yourpdfguides.com/dref/3656278>

Moisture in the drum is due to the final inspection which every washer dryer undergoes before it leaves the factory. Useful tools Spirit level for levelling the washer dryer. Installation area Appliance stability is essential to ensure that the washer dryer does not creep" during spin cycles. The installation area must be firm, clean and level.

Soft floor coverings, such as carpets or foam backed floor coverings, and parquet flooring are unsuitable. When the washer dryer is being installed it is important to ensure that the floor is capable of taking the loading that the washer dryer will impose. In particular with Floating Floors, often installed in apartment buildings, this washer dryer needs to be sited where the floor has been sufficiently braced so that the loads and vibration do not damage both the washer dryer and the floor. q Fix the supplied slide elements to the floor using double sided adhesive tape. On porous surfaces (e.

g. screed) use an appropriate adhesive. q Position the washer dryer on the slide elements. @@@@q Fix the feet of the washer dryer in place using holding brackets**. @@@@q Fix the feet of the washer dryer in place using holding brackets**. If the washer dryer is to be positioned on a pedestal: q Fix the feet of the washer dryer in place using holding brackets**. * Hight adjustment frame is available from specialist dealers or customer service, order no. WZ20420.

** Holding brackets (kit) are available from specialist dealers or customer service, order no. WX9756.

40 Water connection To prevent leaks or water damage, it is essential to follow the instructions in this chapter! Caution Operate the washer dryer with cold drinking water only. Do not connect the appliance to the mixer tap of an unpressurized hot water boiler. If in any doubt, have the water connection carried out by an authorized technician. The water supply hose must not be: - Bent or squashed. - Modified or cut through (stability can no longer be guaranteed). Plastic threads must only be tightened by hand. Do not remove the strainers from the water supply hose. Observe the water pressure in the supply network: -

The water pressure should be between 100 1000 kPa (1 ...

10 bars) (when the tap is turned on, at least 8 litres of water is discharged per minute). - A pressure reducing valve must be installed if the maximum water pressure is exceeded. Connect the water supply hose. q Connect the water supply hose to the tap. i In the case of a defective Aquasure hose (water supply hose), the check eye 1 is red, for fault report, page 32.

After connecting the water inlet hose: q Turn on the tap fully. q Check the connection points for leaks. min. 10 mm Aquasure extension hose Available in kit form from specialist outlets: - Connecting kit plastic hose (approx. 2.

50 m), order no. WZ 10130. 41 Water drainage Caution Do not bend or pull the water drainage hose. Height difference between the placement area and drainage point: max. 90 cm, min. 50 cm. Drainage into a siphon: q Secure the connection point with a hose band clip of 24-40 mm diameter (from specialist stores). Drainage into a wash basin: Caution The plug must not block the drain of the wash basin. q Secure the water drainage hose so that it does not slide out. q When water is being drained, check that the water flow is fast enough.

i The water inlet and drain hoses can be turned to the right or left depending on installation requirements. Before you transport the washer dryer (e.g. when moving house) - Turn off the tap. - Reduce the water pressure in the water inlet hose, page 31. - Drain off any residual water, page 30. - Disconnect the machine from the power supply. - Remove the hoses. - Remove the covers. - Installing transportation protection devices.

Transporting the washer dryer 42 Electrical connection Caution: The washer dryer must be connected correctly to an A.C. contactor socket. The mains voltage must comply with the voltage information given on the identification plate. The connected load and the necessary fusing are shown on the identification plate.

Ensure that: - the plug and the socket are compatible. - the wire cross section is sufficient. - the earth system is installed in accordance with regulations. If the mains cable needs altering, this should only be done by the after sales service. Do not use multiple plugs/connectors and/or extension cables.

Only use current operated circuit breakers which are marked as follows: 7. Do not touch the plug with wet hands. Always pull the plug grip to remove the plug from the socket. 43 Index A Additional options delay, 5 quick, 5 Aquasure hose, 32 Auto, 20 Door, 6, 20 Open, 25 Door button, 5 Door template, 38 Dosing detergent, 10 Draining the water, 30 Dripping wet washing, 28 Dry, 14, 20, 21 Dry only, 25 Drying Automatic, 15 Time controlled, 16 Drying programmes, 14 Drying times, 20, 21 Dyeing, 17 L Laundry preparing, 7 remove, 7 sorting, 7, 8, 9 LED auto, 20 delicate, 20 dry, 20 time, 20 Liquid detergent, 10 B Bleaching, 18 Button delay, 5, 19 door, 5 dry, 5, 20, 21 quick, 5, 6, 19 spin, 5, 21 start, 5, 19 Buttons, 5 M Maximum laundry loads, 8, 9 Mixed Fabrics, 13 C Care labels, 8 Cleaning and care Descaling, 31 Detergent drawer, 29 Drum, 29 Filter in the water inlet hose, 31 Housing and fascia, 29 Cleaning and servicing, Pump, 30 Connecting kit, 41 Consumption data, 37 Control panel, 5 Cottons/Coloureds, 13 Customer service, 36 E Easy care, 13 Electrical connection, 43 end, 5, 26, 28 Error code, 32 N New selection, 24 No final spin, 28 Normal drying, 5, 20 O Option lights, 5 start, 5 delicate, 5 dry, 5 spin, 5 end, 5 F Fault, 32 Filling detergent, 11 Filter in the water inlet hose, 31 First wash, 12 Floating Floors, 39 Fluff removal, 16 Functions, 13 P Powder detergent, 10 Programme Cancel, 26 Change, 24, 26, 27 Pause, 19, 24, 26 Select, 13 Stop, 19, 24, 25 Programme end, 24 Without final spin, 28 Programme selector, 5 Programme state, 6 D Delay Start, 5, 6, 19 Delayed start time, 19 Delicate drying, 14, 20 Delicates, 14 Detergent, 10 Detergent drawer, 11, 29 Detergent pump, 30 Display panel, 5 Displays, 15 H Hight adjustment frame, 39 Holding brackets, 40 Humidity sensor, 15 I Identificationplate, 36 Installation area, 39 Intensive drying, 20 44 Programmes, 13 Dry only, 25 Wash only, 24 Washing+drying, 26 Pumping, 18 T Time, 20 Time to end, 5 Transporting the washer dryer, 42 Q quick, 5, 6, 19 U Unbalanced load detection system, 22 Use, 23, 28 R Remedial action, 32 Rinse+Spin, 16 V Viewing window, 32 S Scale removers, 11 Service flap, 30 Signal, 6 Silk, 14, 19 Short Wash, 6, 19 Soaking, 17 Special programmes, 16 Bleaching, 18 Dyeing, 17 Pumping, 18 Soaking, 17 Softening, 16 Starching, 16 Spin, 6 Spin button, 21 Spin Speed, 5 Standard accessories, 38 Starching, 16 Start, 5, 19 W Wash+dry, 26 Wash only, 24 Washer dryer, 6 Washing and drying programmes, 15 Washing programme, New selection, 24 Washing programmes, 13, 24 Select, 24 Water connection, 41 Water drainage, 42 Wool, 14, 19 45 46 47 WDI1441 0107 EN 9000 243 284 .



[You're reading an excerpt. Click here to read official SIEMENS](#)

[WDI1441 user guide](#)

<http://yourpdfguides.com/dref/3656278>