



Your PDF Guides


You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS WXD1260EU. You'll find the answers to all your questions on the SIEMENS WXD1260EU in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SIEMENS WXD1260EU
User guide SIEMENS WXD1260EU
Operating instructions SIEMENS WXD1260EU
Instructions for use SIEMENS WXD1260EU
Instruction manual SIEMENS WXD1260EU

SIEMENS

Operating and Installation Instructions

en

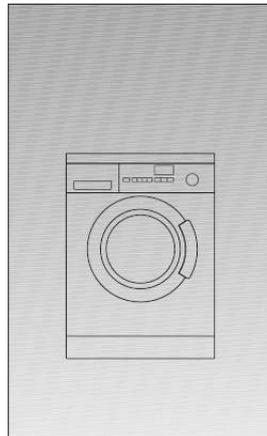

Wash&Dry1260



[You're reading an excerpt. Click here to read official SIEMENS WXD1260EU user guide](http://yourpdfguides.com/dref/3655417)
<http://yourpdfguides.com/dref/3655417>

Manual abstract:

..... Protection of the environment / hints and tips ... General safety instructions .

.....
.....

..... Introducing your washer dryer ...

.....

.. Before using your washer dryer for the first time . Preparing, sorting and loading the laundry . .

... Detergents and cleaning products . .

.....

Programmes and functions

.....

... Washing/drying with standard settings . .

..... Washing/drying with individual settings

... During washing/drying

.....
.....

..... After washing/drying

.....

.....

... Special applications .

.....

.....

... Demo programme . .

.....
.....

..... Cleaning and care . .

.....
.....

... Help with minor problems

.....
.....

.. Consumption values

.....
.....

Customer service

.....
.....

.. Installing, connecting and transporting

... @@@@If you have any questions especially with respect to installing and connecting your washer dryer please do not hesitate to contact our customer service department.

Further information and a selection of our products can be found on our internet page: <http://www.siemens.de/hausgeraete> Please read these operating and installation instructions and all other information enclosed with the washer dryer and act accordingly. These operating and installation instructions describe various models. Differences are indicated in the appropriate places. Retain all documentation for subsequent use or for the next owner of the appliance. 3

Information concerning waste disposal Disposing of the packaging The shipping package has protected your new appliance on its way to your home. All utilised materials are ecologically harmless and recyclable. Please contribute to a better environment by disposing of packaging materials in an environmentally conscious manner. Please ask your dealer or inquire at your local authority about current means of disposal.

d Risk of choking! Do not let children play with packaging and associated parts. Risk of choking on plastic film and collapsible boxes. Disposing of your old appliance Old appliances are not worthless rubbish! Environment conscious recycling can reclaim valuable raw materials. d Danger of death! Unplug mains plug on redundant appliances. Cut off mains cable and discard with mains plug. Destroy the lock on the door. To prevent playing children from becoming trapped and endangered, ensure that the door locking mechanism is disabled. Packaging and old appliances Unpack the appliance and dispose of the packaging in an environmentally responsible manner. This appliance is labelled in accordance with European Directive 2002/96/EC concerning used electrical and electronic appliances (waste electrical and electronic equipment WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

ó 4 Protection of the environment / hints and tips Your washer dryer uses water, energy and detergent efficiently, thereby protecting the environment and reducing your household costs. See page 52 for consumption values of your appliance. Hints and tips Using your washer dryer in an efficient and

environmentally friendly manner: q Take advantage of recommended load quantity. The recommended load quantity is indicated in the display field according to the selected programme. With smaller amounts of laundry, the load adjust reduces the water and energy consumption.

q Select the cotton y 60 °C stains Z programme instead of cotton y 90 °C. The longer washing time in this 60 °C programme means that the cleaning effects are comparable with those of a 90 °C programme, although the power consumption is considerably lower. q Do not use prewash for lightly to normally soiled washing. q Add detergent according to the degree of soiling, amount of laundry and water hardness, and observe the detergent manufacturer's instructions. q If washing is then to be dried in the appliance, select the higher spin speed because the more water that is spun out of the appliance, the less time and energy is required to dry it.

5 General safety instructions Your washer dryer is intended for - use in the household only, - for washing machine washable fabrics in washing lye, - operation with cold drinking water and commercially available detergents and cleaning products which are suitable for use in washing machines. Do not leave children unsupervised near the washer dryer. Keep pets away from the washer dryer. Do not insert/pull out the mains plug with wet hands. Do not pull out the mains plug by tugging the cable. Do not touch the loading door when washing/drying at high temperatures. Caution when draining hot water. Do not climb onto the washer dryer. Do not lean on the open washer dryer door. Due to the use of the condensation principle in drying, please keep the connected water tap open during the drying process, if the water supply is cut off, heat steam will come out.

Risk of scalding! 6 Introducing your washer dryer Adding detergent/cleaning product Dispenser I: Detergent for prewash or starch. Dispenser II: Detergent for main wash, soaking agent, water softener, bleach or stain remover. Dispenser 2: Additives, e.g. fabric softener or former (do not fill above the lower edge of the insert 1). Opening ... and closing the door Service flap 7 Control panel M button For starting the washing/drying cycle (programme must have been selected). Programme selector For switching the machine on and off and for selecting the programme.

Can be rotated in either direction. The programme selector does not rotate while the programme is running, the programme sequence is electronically controlled. Buttons for additional options (in addition to the programme if required) P: Actuate prewash w: Gentle spin K: Additional rinsing cycle v: Intensive wash Additional options can be combined. The indicator lights of the buttons come on, if the additional options are active. Switching off the additional option: Press the button again.

Indicator light goes out. Display panel Indicates the settings which have been selected (e.g. spin speed, time delay, childproof lock, recommended load) as well as programme progress. Button B Selects the spin speed or no final spin.

Button r Selects the drying time. Button X Selects the start time (delays the start of the programme). 8 Display panel Display P Q Prewash Washing Notes On if selected Not on if rinse, spin drain or drying additional programme was selected Not on if spin, drain or drying additional programme was selected Not on if a programme with the ---" setting (without final spin) or drying programme is running On if the drying programmes and drying time was selected For the programme status On if too much detergent dispensed On if selected On if the drying programmes and drying time was selected Not on if rinse, spin, drain or additional programme was selected Maximum spin speed of the programme or selected speed Expected drying programme duration K Rinse B Final spin / Empty r Dry Progress bar : G Overdosage Childproof lock Fan 5.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3655417)

[WXD1260EU user guide](http://yourpdfguides.com/dref/3655417)

<http://yourpdfguides.com/dref/3655417>

0kg* Recommended load 1200rpm* Spin speed or ---* No final spin 120min* Drying duration 1:17* 19'h* -0--- Programme duration Expected programme duration Start time End of programme or End of programme without final spin or See page 47 Selected start time Other displays at this location: F02* Fault displays * Example of the display 9 Programme status display The first row of symbols and the progress bar below form the programme status display. The progress bar consists of a frame and several segments. When the programme has been selected, the symbols for the individual programme sections are displayed. The frame of the progress bar flashes and requests the programme to start. When the programme has started, the almost empty bar is displayed which fills up with segments from left to right while the programme is running. The symbols indicate the programme sections which have not yet run and go out when the particular programme section has run. At the end of the programme all symbols have gone out and the progress bar is full.

: Overdosage The automatic safety system detects excessive froth in the appliance due to a highly frothing detergent or an overdosage. At the end of the programme this is indicated in the display field by the : symbol. Dispense less detergent for the next wash with similar items of washing (same degree of soiling and wash load). Overdosage of detergent may cause excessive froth formation and impair the washing and rinsing results. A rinse cycle is automatically run. i The : symbol goes out when the appliance switches off at the end of the programme or if the programme is changed. G Childproof lock Fan The activated childproof lock prevents the selected programme from being changed while the programme is running. The fan works at the last 10 minutes of drying duration for cooling the laundry. i Do not interrupt this cooling process. The recommended load is displayed depending on the selected programme and additional functions, see from page 21.

Recommended load 10 Spin speed The maximum spin speed is displayed depending on the selected programme and additional functions. You can reduce this speed, see page 30. When the programme has been selected, the expected programme duration (time after which the programme is expected to end) is displayed. The programme duration is displayed in hours and minutes, e.g.

1:17 = 1 hour and 17 minutes 0:35 = 35 minutes. When the programme has started, the colon : flashes between hours and minutes and the programme duration counts down in minutes. When the programme ends, the display shows 0. i While the programme is running, the programme duration may be extended or reduced for the following reasons. Reductions in time occur because of: - small loads, - reduced heating times, e.

g. if the water is very hot. Increases in time occur because of: - additional rinse cycle if excessive foam is in the laundry, - multiple spinning if the laundry is distributed poorly in the drum, - increased heating times, e.g. when the water is too cold, - water pressure too low, - selection of an additional option, e.g. K and/or v after the programme has started, - very absorbent washing extends the heating duration. Programme duration Start time Drying duration You can delay the start time, see page 31. You can set the drying duration. When the washing and drying without a break was selected, drying duration will add in programme duration automatically.

Cotton programmes will prolong 5 minutes for good washing performance. 11 Before using your washer dryer for the first time Preparing your washer dryer Attention The washer dryer must have been installed and connected properly (refer to page 54). i The washer dryer was tested before leaving the factory. To remove any water left over from testing procedures, the first washing cycle should be carried out without laundry in the machine. q Turn the tap on. q Pull out the detergent drawer all the way. q Pour approx. 1 litre of water into chamber II of the detergent dispenser. q Half fill the measuring beaker with detergent and pour into chamber II. i Do not use any special detergents for delicates or woollens (excessive foam).

q Close the detergent drawer. q Close the washer dryer door. q Set the programme selector to cotton y 90 °C. q Press the M button. The programme starts. The programme ends when all symbols in the upper row of the display field go out, the progress bar is completely filled and the programme duration is on 0: q Turn the programme selector to H off. 12 Preparing, sorting and loading the laundry Preparing the laundry Attention Loose debris (e.g. coins, paper clips, needles, nails) can damage items of clothing as well as parts of the washer dryer (e.g.

drum). q Empty all pockets on items of clothing. q Brush sand out of pockets and cuffs/turn ups. q Close zips, fasten pillow cases/cushion containing foam rubber or similar material. - Items which have been treated with inflammable solvents, such as stain removers, petrol, paint thin ners. Explosion hazard! - Items still containing hair lacquer or similar substances. Dangerous vapors! - Dripping wet laundry. Waste of energy! 17 Loading the laundry d Risk of explosion! Items of clothing that have been pretreated with solvent based cleaning agents, e.g. stain remover and dry cleaning spirit, represent an explosion hazard once loaded into the washer dryer.

Before loading the laundry, rinse thoroughly by hand. Attention Foreign objects in the drum may damage the laundry. Before loading the laundry, check that there is no debris in the drum. q Open the washer dryer door. q Unfold the sorted items of clothing and place them loosely into the drum. Mix large and small items. Laundry items which vary in size are more evenly distributed during the spin cycle. i Do not exceed recommended loads. Overloading will cause poor wash results and encourage creasing. q Close the washer dryer door.

Take care not to trap any items of clothing between the loading door and rubber seal. 18 Detergents and cleaning products Dosing detergent d Risk of poisoning! Keep detergents and additives out of the reach of children. Dose detergent according to q the water hardness. You can find out the water hardness from your water utility company. q the amount of laundry.

q the degree of soiling. Information on soiling can be found on page 14. q the specifications of the detergent manufacturer. The correct dosage reduces the impact on the environment and produces a good washing result. Pour liquid detergent into the corresponding dispenser.

Too little detergent: - The laundry is not washed clean and eventually becomes grey and hard. - Greyish brown dots (grease spots) may stain the laundry. - The heating elements are calcifying. Too much detergent: - The environment is loaded. - Excessive froth may be generated during the wash cycle causing a reduction in the washing mechanism. This may be the cause of poor washing and rinsing results. 19 Adding detergent/ cleaning product Dispenser I Detergent for prewash or starch.



[You're reading an excerpt. Click here to read official SIEMENS](#)

[WXD1260EU user guide](#)

<http://yourpdfguides.com/dref/3655417>

Dispenser II Detergent for main wash, water softener, pre soaking agent, bleach and stain removal product. Dispenser 2 Cleaning product, e.g.

fabric softener or fabric conditioner (do not fill above the lower edge of the insert 1). i Concentrated or viscous fabric softener or fabric conditioner must be diluted with a little water before it is poured into the dispenser (prevents the overflow from becoming blocked). q Pull out the detergent drawer all the way. q Pour in detergent and/or cleaning product. q Close the detergent drawer. 20 Programmes and functions Programme selector Select the desired programme.

In the cotton y programme the fabric will be spun at the maximum possible spin speed. In the easy care A, quick+mix z, silk q and wool Uu programmes the washer dryer spins at a low speed for gentle treatment of delicate laundry. i Programmes wash lightly soiled textiles in the shortest possible time. For heavily soiled textiles reduce the load or press the v button! Basic programmes cotton y 30, 40, 60 °C For hard wearing textiles, e.g.

g. made of cotton or linen. cotton y 60 °C stains Z For stained, heavily soiled textiles, e.g. cotton or linen.

Energy and water saving programme. The longer washing time in this 60 °C programme means that the cleaning effects are comparable with those of a 90 °C programme, although the power and water consumption is considerably lower. cotton y 90 °C Energy intensive programme for heat resistant textiles, e.g. made of cotton or linen.

To protect the waste water pipes, the hot water is mixed with approx. 7 litres of cold water and cooled before being drained. intensive dry r For cottons/coloured textiles, dry at normal heat setting. quick+mix z 30 °C Time optimised programme for lightly soiled cotton textiles and easy care textiles.

Different types of washing can be washed together. Even suitable for washing new textiles before they are worn for the first time. 21 i Wash white and coloured items separately. Do not wash new coloured washing with other washing. Short washing time. easy care A 40, 60 °C For easy care textiles, e.g.

g. made of cotton, linen, synthetic or blended fabrics. i Also suitable as short programme. gentle dry r For easy care textiles, dry at low heat setting. silk q 30 °C For delicate, washable textiles, e.g. silk, satin, synthetic materials or blended fabrics (e.g. curtains). Delicates cycle at 30 °C for hand and machine washable silk.

i We do not recommend washing these textiles with other rougher textiles. No spin between the rinse cycles. wool Uu 30 °C For hand and machine washable wool or wool rich textiles, e.g. cashmere, mohair or angora.

Also suited for hand washable silk. 22 Programme options Rinse K Rinse cycle with subsequent spin cycle for rinsing hand washed items or for starching.

Press the K button for an additional rinse cycle. Reduced spin speed. Spin B Spin cycle after a programme with setting "---" (without final spin) or for spinning hand washed washing with selection of the required speed.

Washing water or rinsing water is drained before the spin cycle. Reduced spin speed. Empty b Water is drained after a programme with the "---" (without final spin) setting on display panel for gentle treatment of delicate laundry. 23 Additional options buttons v intensive The washing time is extended so that highly soiled washing or 5.0 kg of cottons/coloureds are washed more intensively. Press the button in addition to the programme for the following combinations of load and degree of soiling: Amount of laundry 5.0 kg Programme and intensive button v cotton y 30, 40, 60 °C cotton y 60 °C stains Z cotton y 90 °C up to 5 kg cotton y 30, 40, 60 °C cotton y 60 °C stains Z up to 3 kg p g up to 2 kg p g easy care A 40, 60 °C quick+mix z 30 °C silk q 30 °C wool Uu 30 °C Degree of soiling lightly to normally soiled normally soiled with stains normally soiled normally to heavily soiled normally to heavily soiled with stains normally t h il ll to heavily soiled K rinse+ Additional rinsing of laundry. Programme duration is extended accordingly. Recommended in areas with very soft water. Gentler reduced spin cycle with subsequent fluffing.

After the spin cycle, the laundry is loose in the drum creasing is reduced. For very dirty, hard wearing laundry, e.g. cotton or linen. The washing temperature of the prewash is 30 °C. Prewash cannot be selected for woollens programme. i If the prewash is cancelled, the detergent solution is pumped out and the programme continues with the main wash cycle. w easy to iron P prewash 24 Washing/drying with standard settings Your washer dryer can be used in three ways: - washing only, - drying only, - washing and drying without a break in between. i For uninterrupted washing and drying, the maximum load must be reduce to 2.5 kg for cottons/ coloureds or 1.

5 kg for easy care. Furthermore, it is possible that certain types of laundry will not be dried satisfactorily using the non stop mode. The specified standard settings are optimally adjusted to the selected programme. If you do not want to change these standard settings: Setting the washing programme or washing and drying without interruption Example of easy care A 40 °C programme: q Turn the programme selector to the desired programme see also the separate programme overview. 25 q If required, press the button(s) for additional option(s).

The indicator light of the selected button is on. i The frame of the progress bar flashes in the display field and the following is displayed for the selected programme: - the symbols for the programme sections, - recommended load, - maximum spin speed, - drying duration (displays 0 min, if the laundry needs to be dried, please refer to setting the drying time), - programme duration. q Load the laundry and close the loading door. Do not exceed recommended loads.

26 If you do not need your laundry to be dried immediately in the machine after the washing programme, please read the instructions for starting the programme.

Otherwise, please set the drying time according to the instructions. q Press the r button to set the desired drying time, the programme will be washing and drying without interruption. q The indicator light of additional function w goes out if the additional function is selected, it is not available when a drying cycle comes subsequently. q The spin speed and programme duration will be changed accordingly after the drying time being setted. q The maximum load is also changed, do not exceed recommended washing/drying loads. i The frame of the progress bar flashes in the display field and the following is displayed for the selected programme: - the symbols for the programme sections, drying r and fan , - recommended load, - maximum spin speed, - drying duration, - programme duration. q Press the M button. The programme starts. i The almost empty progress bar is indicated in the display field. The recommended load goes out.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3655417)

[WXD1260EU user guide](http://yourpdfguides.com/dref/3655417)

<http://yourpdfguides.com/dref/3655417>

While the programme is running, the programme duration counts down and the progress bar fills up with the segments. The symbols for the run programme sections go out. 27 Setting the drying programme q Turn the programme selector to the desired programme. i Due to the use of the condensation principle in drying, please keep the connected water tap open during the drying process. i The frame of the progress bar flashes in the display field and the following is displayed for the selected programme: - the symbols for the programme sections, drying r and fan , - recommended drying load, - drying duration, - programme duration. q Press the M button. The programme starts. i The almost empty progress bar is indicated in the display field. The recommended load goes out. While the programme is running, the programme duration counts down and the progress bar fills up with the segments.

The symbols for the run programme sections go out. Washing and drying with individual settings is described subsequently. 28 Washing/drying with individual settings You can adjust the settings to your requirements. First find a quick overview of the adjustable settings. The steps for changing the settings are described in detail overleaf.

Overview at a glance Load the laundry and close the loading door. Select programme with programme selector. Spin speed Page 30 or without final spin Start time Page 31 can be set in 1-hour steps Signal Page 34 on off loudness Make further settings or press the M button. Childproof lock Page 33 on off 29 Spin speed You can reduce the displayed spin speed. The maximum displayed spin speed depends on the selected programme.

q Turn the programme selector to the desired programme. q If required, press the button(s) for additional option(s). Example of easy care A 40 °C programme: i The following is indicated in the display field: - programme status display, - recommended load, - maximum spin speed, e.g. 800, - programme duration. q Load the laundry and close the loading door. q Press the B button until the required spin speed, e.g. 600 or "---" (without final spin) is displayed. i If setting "---" (without final spin) has been selected, the washing remains in the final rinsing water.

Before the laundry can be unloaded, the b empty or B spin programme must be performed. You can change other settings or q Press the M button. The programme starts. i The speed can be changed at any time by pressing the B button until the new speed is displayed. Setting "---" (without final spin) is possible until the Rinse programme section starts. 30 Start time Before a programme starts, you can specify by how many hours the start of the programme is to be delayed. q Turn the programme selector to the desired programme. q If required, press the button(s) for additional option(s). Example of easy care A 40 °C programme: i The following is indicated in the display field: - programme status display, - recommended load, - maximum spin speed, - programme duration, 1:00 (1 hour). q Load the laundry and close the loading door.

q Press the X button, 1'h (h=hour) appears in the display. q Press the X button until the desired number of hours is displayed. i The start time can be set in 1 hour steps. The time can be delayed up to a maximum of 19'h. If a start time of 19'h has been set, the programme duration mode can be accessed by pressing the X button again.

31 You can change other settings or q Press the M button. The programme starts. The time delay begins running immediately after the programme starts. This is displayed by the flashing first segment in the progress bar and the flashing apostrophe ' between the number and h. i The time delay is counted down by the hour.

When the start time has elapsed, the programme starts automatically and the programme duration is displayed. i Changes to the start time or an immediate start are possible. To do this: - Briefly set the programme selector to another programme. @@If required, reset the start time. - Press the M button. The programme starts. @@@@i The laundry can be topped up at any time during the start time. @@@@q Load the laundry and close the loading door. q Press the M button. The programme starts.

@@@4 seconds) until the G symbol is displayed. @@q Press the M button and hold down (for approx. 4 seconds) until the G symbol goes out. @@@@Hold down the M button until the signal is emitted. The selected setting is stored. @@@@@@@q Release the button when the required volume is reached. @@q Turn the programme selector to a newly selected programme. @@q If required, change the other settings, see from page 29. q Press the M button. The programme starts.

@@@q Turn the programme selector to b empty, B spin or K rinse. @@@@q Press the M button. @@q If required, deactivate the childproof lock. q Turn the programme selector to H off. q Open the washer dryer door.

q Remove the laundry. @@q If required, deactivate the childproof lock. @@- if the childproof lock is selected, the G symbol illuminates, - if detergent was overdosed, the : symbol illuminates. q If required, deactivate the childproof lock. 37 q Select an additional programme b empty or B spin.

q Press the M button. q If required, activate the childproof lock. At the end of the additional programme: q If required, deactivate the childproof lock. q Turn the programme selector to H off. Removing the laundry q Open the washer dryer door. If the loading door cannot be opened: Wait 2 minutes (safety function is active) or there is still water in the washer dryer if the "---" (without final spin) option was selected. Select the b empty or B spin programme and press the M button. q Unload the laundry. Attention Remove any foreign objects (e.g.

coins, paper clips) from the drum and rubber seal - risk of rust! q Leave the washer dryer door and detergent drawer open to allow the interior of the washer dryer to dry. After drying: q Take the laundry out of the machine immediately to prevent creasing. This is particularly important with synthetic fabrics. Cottons + Linens - Cotton and linen items which have been dried to iron dry should be rolled together to prevent them from drying out completely before they are ironed. - Cupboard dry items must be smoothed out and folded up. Easy care/synthetics - Hang shirts and blouses individually on hangers. 38 Special applications Soaking q Load laundry of the same colour. q Pour soaking agent into dispenser II according to the manufacturer's instructions. q Set the programme selector to cotton y 30 °C. q Press the M button.

The programme starts. q After approx. 10 minutes, turn the programme selector to H off. The laundry is left to lie in the water. q Select a programme according to the required soaking time, the detergent solution is pumped out.

i Only little detergent to be dispensed for the main wash. Starching The laundry must not be treated with fabric softener. q Insert the washing. q Dose a quantity of starch for approx.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3655417)

[WXD1260EU user guide](http://yourpdfguides.com/dref/3655417)

<http://yourpdfguides.com/dref/3655417>

15 litres of water.

Dissolve starch according to the manufacturer's instructions. q Turn the programme selector to K rinse. q Set the spin speed; even setting "---" (without final spin) is possible. q Press the M button. As soon as the water runs in: q pull out the detergent drawer a little and q pour starch solution into dispenser I. q Close the detergent drawer. If setting "---" has been selected, select the b empty programme. 39 Dyeing Only use dyes that are environmentally compatible and suitable for use in washing machines. Attention Washing in subsequent wash cycles may become discoloured. q Apply dyes according to the manufacturer's instructions.

After dyeing: q Pour approx. ½ measuring beaker of detergent into dispenser II. q Without any laundry in the drum, allow the cotton y 90 °C programme to run through. q Wipe out the rubber seal. Attention Bleaches may contain sulphur or chlorine which can corrode components of the washer dryer. Do not bleach washing in the washer dryer. Bleaching 40 Demo programme The demo programme intended for presentation purposes shows the sequence of the cotton y 60 °C programme with changed settings. q To start the demo programme, press and hold down the M button and simultaneously set the programme selector to the cotton y 60 °C programme. The continuous demo begins. q To end the programme, set the programme selector to H off.

41 Cleaning and care d Risk of electric shock! First, always disconnect the appliance from the power supply. Never clean the appliance with a water jet. d Risk of explosion! As required: Never clean the appliance with solvents. Clean housing, fascia and supply lines Cleaning the drum q Use hot soapy water or a mild, non abrasive cleaning agent. q Wipe dry with a soft cloth.

If metal items (e.g. coins, paper clips, needles, nails) left in the drum have caused rust spots: q Use chlorine free cleaning agents; comply with the manufacturer's instructions. Never use steel wool. 42 Cleaning the detergent dispenser In the event that residual detergents or additives have accumulated: q Pull out the detergent drawer all the way, q press down the insert and q remove the detergent drawer.

q Open the cover. q Clean the detergent drawer and cover under running water and dry. q Close the cover and lock into position. i Insert the cover cylinder onto the guide pin. q Slide in the detergent drawer. 43 Cleaning the drain pump Drain the water This is necessary if the washing solution has not been completely drained. The pump is blocked by either loose debris or fluff which accumulates if fluff giving fabrics are washed. (Up to 20 litres. Have a suitable container ready.) d Risk of scalding! Allow the hot water to cool down beforehand.

Keep children and pets away. q Turn the programme selector to H off. q Open service flap. q Carefully unscrew the pump cap do not remove it completely and let the water drain out into a shallow container (let the remainder drip onto a floor cloth). Repeat the operation until there is no water left in the machine. q Remove the pump cover. q Remove foreign objects/fluff from inside and clean the interior. The pump impeller wheel must be able to rotate. Clean any residual lye or fluff from the thread of the pump cover and pump housing. q Insert the pump cover and screw tight.

q Insert and close the service flap. To prevent unused detergent from flowing into the drain during the next wash cycle: q Pour 1 litre of water into chamber II. q Select the b empty programme. 44 Cleaning water inlet strainers This is necessary if very little or no water flows into the washer dryer. First, reduce the water pressure in the inlet hose: q Turn off the tap.

q Turn the programme selector to any programme (except B spin / b empty). q Press the M button, and allow the programme to run for approx. 40 seconds. q Turn the programme selector to H off. Cleaning the strainer at the water tap q Disconnect the hose from the water tap.

q Rinse the strainer under flowing water. q Connect the hose. Cleaning the strainer on the washer dryer q Disconnect the hose from the back of the washer dryer. q Pull out the strainer and rinse under running water. q Insert the strainer and reconnect the hose. q Turn on the water tap and check whether water is still discharged. If water is leaking, check that the filter is correctly seated. q Turn off the tap. 45 Descaling the washer dryer Attention Descaling agents contain acids which may corrode the components of the washer dryer and discolour the laundry. Provided that you use the correct amount of detergent, it is not necessary to descale the washer dryer.

If descaling is nevertheless required, please follow the instructions supplied by the manufacturer of the descaling agent. 46 Help with minor problems If repairs are needed, and assuming that you cannot eliminate the fault yourself with the aid of the following table: q Turn the programme selector to H off. q Disconnect the appliance from the mains. q Turn off the tap. q Call customer service, see page 53. d Risk of electric shock! Repairs may be carried out by customer service or authorised technicians only. Fault displays Text in display field and signal emitted F01 Possible cause Door not closed properly.

Remedial action Check whether laundry is trapped in door; Close the washer dryer door. Turn the tap on. Eliminate cause.

Clean filter, see page 45. Eliminate cause. Clean the pump, see page 44. Clean drainage pipe and/or drainage hose. Call Customer Service.

F02 Tap not turned on. Inlet hose kinked or pinched. Filter blocked in water inlet hose. Water pressure too low. F04 Loose debris is blocking the pump. Drainage pipe and/or drainage hose blocked. F12 Water in the base pan. Appliance leaking. 47 Problems Washer dryer door cannot be opened. Cause There is still some water in the appliance, ---" (without final spin) selected. Safety function is active. Damp or lumpy detergent. Remedial action Select b empty or B spin. Wait for 2 minutes. Clean and dry the detergent dispenser; see page 43.

Use the dosing aid for liquid detergent. Detergent residue in the detergent drawer. g Difficult to dissolve detergent tablets used. Odour in the appliance. Washing at mainly low temperatures and/or with liquid detergents. A fuse has triggered. gg Before filling dispenser II, crush the tablets in the packet. Run the cotton y 90 °C programme without washing. Use a standard detergent. Switch on/replace the fuse.

If the fault occurs repeatedly, call Customer Service. Control lights do not g come on. Power failure. An interrupted programme will be resumed when the power returns. If you wish to unload the laundry, proceed as in Cleaning the drain pump, page 44.

Check whether laundry is trapped in door. Close the loading door (a click should be heard). Plug is loose or not plugged in. Programme does not start.

Loading door not closed properly.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3655417)

[WXD1260EU user guide](http://yourpdfguides.com/dref/3655417)

<http://yourpdfguides.com/dref/3655417>

M button not pressed. Water does not enter the machine or detergent is not washed away. Tap not turned on. Inlet hose kinked or pinched. Filter blocked in water inlet hose. A programme without Prewash was selected. Press the M button. Turn the tap on. Clean the strainer; see from page 45. Select programme with Prewash.

Detergent in chamber I is not washed away. 48 Problems Water not visible in the drum. Washing solution is not completely drained. Cause Remedial action Not a fault. The water lies below the visible part of the drum. Pumped blocked by foreign objects. Clean the pump (refer to page 44). Fluff producing laundry was Clean drainage pipe and/or washed. The water drainage pipe or drainage hose. Drain hose is blocked.

Screw fitting of the inlet hose is leaking. Drainage hose is leaking. Too much detergent or detergent not suitable for use in washing machines used. Tighten the screw fitting. Replace the drain hose.

Mix 1 tablespoon of fabric softener with ½ litre of water and pour into chamber II of the detergent dispenser. Reduce detergent dosage for next wash cycle or use detergent which is suitable for use in washing machines. Large laundry items have become entangled and are not evenly distributed in the drum. For safety reasons, the high speed final spin cycle was automatically cancelled. Do not put only large items in the drum.

Water runs out from under the appliance. Foam comes out of the detergent drawer. The : symbol is displayed at the end of the programme. The washing has not been spun correctly. Spin result unsatisfactory. v button pressed for reduced spin speed see page 24. p y The K rinse or B spin programme selected maximum spin speed: see page 23. Spin cycle actuated several times. Not a fault. Unbalanced load detection system is attempting to compensate the imbalance by spinning the washing several times.

49 Problems The programme takes longer than usual. Cause Not a fault. Imbalance compensation system attempts to balance the laundry by repeated distribution. The foam detection feature has activated an additional rinsing cycle to reduce the amount of foam. Remedial action Wash large and small items together in order to reduce the imbalance. Adjust the detergent dosage for the next wash cycle. Select suitable programme and press the v button or reduce load. Dose detergent according to the manufacturer's instructions. Select K rinse immediately or brush out the washing after drying. Select maximum detergent dosage and maximum permitted temperature for the next wash cycle.

Washing result not satisfactory. Soiling is greater than expected or recommended load has been exceeded. Detergent was underdosed. Detergent residue on the washing. Some phosphate free detergents contain water insoluble residue which may appear as light stains on the washing.

Soiling caused by ointment, grease or oil. Grey residue on the washing. Programme duration changed during the programme sequence Programme duration reduced Not a fault. See also explanations in the chapter Display field, programme duration from page 11. Not a fault.

For small amounts of laundry, a reduction in time of approx. 30 minutes can result, depending on washing programme. 50 Problems Programme duration extended Cause Remedial action An overdosage of detergent has Reduce the detergent dosage for caused excessive formation of froth. the next wash cycle. An additional rinse cycle and spin cycle was run to ensure a good rinsing result. The : symbol is displayed at the end of the programme. For severe imbalances during spinning, an increase in time of approx. 10 minutes can occur because of repeated distribution of the laundry. Wash large and small items together in order to reduce the imbalance. If very cold water must be heated up, an increase in time up to 20 minutes can result.

Drying programme does not start. Drying programme not selected. Drying time not set, or set drying time is too short. Tap not turned on. Loading door not closed properly. Select the desired drying programme. Set the reasonable drying time. Turn on the tap. Check whether laundry is trapped in door. Close the loading door (a click should be heard).

Pump is blocked. Clean the pump, see page 44. If the fault recurs, call Customer Service, see page 53. 51 Consumption values Normal p g programme cotton y 40 °C cotton y 60 °C cotton y 60 °C stains Z cotton y 90 °C (the hot washing solution is mixed with approx. 7 litres of cold water before being drained) Additional option Load 5 kg 5 kg 5 kg 5 kg Consumption values ** Power Water 0.

61 kWh 0.97 kWh 0.95 kWh 1.86 kWh 58 l 58 l 47 l 65 l Programme g duration 1:20 h 1:20 h 2:15 h 1:35 h v* - easy care A 40 °C (also suitable as short programme) silk q 30 °C (delicates) wool Uu 30 °C intensive dry r gentle dry r (delicates) cotton y 60 °C stains Z + intensive dry r - 2.5 kg 2 kg 2 kg 2. 5 kg 1.5 kg 5 kg 0.41 kWh 0.3 kWh 0.16 kWh 1.83 kWh 0.92 kWh 4.60 kWh 49 l 56 l 36 l 33.5 l 114 l 1:00 h 0:55 h 0:40 h 1:30 h 1:10 h 5:15 h (2:15h + 1:30 h + 1:30 h) v* * Programme setting with v option for test in accordance or in conformity with EN 50 229 and IEC 50 229.

** Consumption values will differ from the indicated values depending on the water pressure, water hardness, water inlet temperature, ambient temperature, type and quantity of laundry and degree of soiling, utilised detergent, fluctuations in the mains voltage and selected additional options. 52 Customer service Before you call customer service, please check whether you can eliminate the fault yourself (see from page 47). A technician who is called out to give advice will charge you, even if the appliance is still under guarantee. You can find your nearest customer service in the enclosed address list. Please provide customer service with the product number (E Nr.) and the production number (FD) of the appliance. Rating plate These numbers are shown on the rating plate which can be found on the frame of the open door and also on the identification plate, enclosed by a thick line, on the front of the machine behind the nameplate. E Nr. FD Product number Production number Please note the two numbers in the space provided above. In specifying the product number and production number of your appliance, you help us in our attempt to prevent unnecessary travelling and the associated extra costs.

53 Installing, connecting and transporting Safety instructions d Risk of injury! The washer dryer is heavy. Take care when lifting it. Attention Frozen hoses may tear/burst. Do not install the washer dryer in an area where there is a risk of frost or outdoors. The washer dryer may be damaged.

Do not lift the washer dryer by its projecting parts (e.g. door). In addition to the safety information listed here, the local water and electricity supplier may have special requirements. If in doubt, have the appliance connected by a specialist.

Standard accessories On the rear of the washer dryer: - Water drainage hose.



[You're reading an excerpt. Click here to read official SIEMENS
WXD1260EU user guide
http://yourpdfguides.com/dref/3655417](http://yourpdfguides.com/dref/3655417)

- Water inlet hose. - Elbow for attaching the drainage hose e.g. to the sink. - Mains cable with plug. Moisture in the drum is due to the final inspection which every washer dryer undergoes before it leaves the factory. Depending on the connection situation, the following part is also required: - 1 hose clip Ø 24 40 mm (DIY store) is also required for connection to a siphon. The bag contains: - Covers for holes left by removing the transport bolts. 54 Useful tools The following tools are helpful: - Box wrench A/F 13 for removing the transportation bolts.

- Spirit level for aligning the washer dryer. Dimensions $a = 600 \text{ mm}$ $b = 560 \text{ mm}$ $c = 860 \text{ mm}$ Weight 68 kg Installation surface Appliance stability is important so that the washer dryer does not wander" during the spin cycles. The installation surface must be solid and level. Soft floor coverings, e.g. carpets or floor coverings with a foam backing are not suitable. If the washer dryer is to be installed on a wooden floor: q If possible, install the washer dryer in a corner. q Screw a water resistant wooden board (at least 30 mm thick) to the floor. q Secure the washer dryer feet with fixing brackets*. If the washer dryer is to be installed on a base: q Secure the washer dryer feet with fixing brackets*.

* Holding brackets (set) can be obtained from a specialist store or the Customer Service, order no. WX 9756. 55 Removing the transportation protection devices d Caution The transport bolts must always be removed before using the appliance for the first time and must be retained for any subsequent transport (e.g. when moving).

q Release all screws A using the A/F 13 wrench until they can be moved freely. q Remove the four spacers. They will fall to the floor when you tip the machine. q Insert the covers. 56 Built under or built in appliance installation The appliance must be built under or built in prior to connecting the power supply.

The appliance can be built into or under a kitchen work surface. For this purpose, a recess width of 60 cm is required. q The washer dryer must only be installed under a one piece worktop that is permanently attached to the surrounding cabinets. Attention For safety reasons in built under installation, a metal cover* must be assembled by a specialist in place of the appliance cover plate. * Cover plate (set) can be obtained from a specialist store or the Customer Service, order no. @@@@ Attention Operate the washer dryer with cold drinking water only. @@ If in doubt, have the appliance connected by a specialist. The water inlet hose must not be - kinked or crushed, - modified or severed (strength is no longer guaranteed). Plastic threads must only be tightened by hand. Do not remove the strainers from the water supply hose.

Check the mains water pressure: - The water pressure should be between 1 and 10 bars (when the tap is turned on, at least 8 litres of water is discharged per minute). - If the water pressure is higher, install a pressure reducing valve. Connect the water supply hose q to the rear panel of the washer dryer and ... q to the tap. q After connecting the water inlet hose: Turn on the water tap completely, and check connection points for water tightness. 59 Water drainage hose Warning Do not bend or pull the water drainage hose. Height difference between the placement area and drainage point: maximum 100 cm. Drainage into a siphon: q Secure connection point with 24 40 mm Ø hose clip (specialist outlet).

Drainage into a wash basin: Attention The plug must not block the drain of the wash basin. q Secure the drainage hose to prevent it from slipping out of the sink. q When the water is being pumped out of the washer dryer, check that the water drains away quickly enough. 60 Aligning the washer dryer All four appliance feet must be firmly on the ground. The washer dryer must not wobble.

Level the washer dryer with the assistance of the four adjustable feet and a spirit level: q Loosen the lock nut 1 using the wrench. q Adjust the height by rotating the foot 2. q Tighten the lock nut 1 against the housing. 61 Connecting the power Caution Connect the washer dryer only to an alternating current via a correctly installed earthed socket. The mains voltage must correspond to the voltage specification on the washer dryer (nameplate).

Connection specifications as well as the required fuses are stipulated on the appliance nameplate. Ensure that: - The mains plug and socket are compatible. - The cable cross section is adequate. - The earthing system has been installed correctly. The mains cable may be changed (if required) by an electrician only. Replacement mains cable available from Customer Service. Do not use multiple plugs/sockets or extension cables. In the event that an earth leakage circuit breaker is to be used, only use types marked with the following symbol: 7. Only this symbol can guarantee compliance with all current regulations. Do not insert/pull out the mains plug with wet hands.

Do not pull out the mains plug by tugging the cable. 62 Transport, e.g. when moving Before transporting the washer dryer: - Turn off the tap. - Reduce the water pressure in the water inlet hose (refer to page 45). - Drain any residual washing solution (refer to page 44). - Disconnect the washer dryer from the mains. - Dismantle the supply and drainage hose. - Install transportation protection devices. Having transported the appliance and ensured proper installation and connection, allow the b empty programme to run through before starting the first wash programme.

Transporting the washer dryer: Preparing and inserting the transport bolts q Remove the 4 covers C. q Remove the rear cover D and prepare the transport bolts. q Insert and tighten the transport bolts. 63 WXD 1260 EU SIEMENS ELECTROGERÄTE GMBH 0105 en 5120 004 648 .



[You're reading an excerpt. Click here to read official SIEMENS](#)

[WXD1260EU user guide](#)

<http://yourpdfguides.com/dref/3655417>