



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST KH 1091 CHOCOLATE FOUNTAIN. You'll find the answers to all your questions on the SILVERCREST KH 1091 CHOCOLATE FOUNTAIN in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SILVERCREST KH 1091 CHOCOLATE FOUNTAIN  
User guide SILVERCREST KH 1091 CHOCOLATE FOUNTAIN  
Operating instructions SILVERCREST KH 1091 CHOCOLATE FOUNTAIN  
Instructions for use SILVERCREST KH 1091 CHOCOLATE FOUNTAIN  
Instruction manual SILVERCREST KH 1091 CHOCOLATE FOUNTAIN

4 △

■ CHOCOLATE FOUNTAIN



KH 1091

- 🇬🇧 **Chocolate Fountain**  
Operating instructions
- 🇵🇸 **Fontanna do czekolandy**  
Instrukcja obsługi
- 🇭🇺 **Csokoládé szökőkút**  
Használati utasítás
- 🇸🇰 **Čokoladni vrelec**  
Navodila za uporabo
- 🇨🇪 **Čokoládová fontána**  
Návod k obsluze
- 🇨🇾 **Fontána na čokoládu**  
Návod na obsluhu
- 🇭🇷 **Čokoladni zdenac**  
Upute za upotrebu
- 🇩🇪 **Schokoladenbrunnen**  
Bedienungsanleitung

KOMPERNASS GMBH · BURGSTRASSE 21 · D-44867 BOCHUM  
www.kompernass.com  
ID-Nr.: KH1091-06/09-V4



[You're reading an excerpt. Click here to read official SILVERCREST KH 1091 CHOCOLATE FOUNTAIN user guide](http://yourpdfguides.com/dref/3033779)  
<http://yourpdfguides.com/dref/3033779>

#### **Manual abstract:**

*This appliance is intended for use in keeping liquid chocolate in a liquid form and allowing it to flow over the chocolate fountain. The appliance is intended only for use in indoor rooms in domestic households and is not intended for commercial or industrial applications. Only use the appliance inside buildings. Never place the appliance on or close to a gas or electric cooker or a hot oven. The use of ancillaries not recommended by the manufacturer could cause damage to the appliance. Only use the appliance for its intended purposes. This appliance complies with the normal safety regulations. Do not pull on the cable to remove the plug, rather, pull the plug itself from the socket. Before plugging the appliance in, check that the electricity type and mains voltage matches the information given on the type plate. Do not place the appliance near inflammable materials or explosive/ignitable gases.*

*Do not place the appliance near a gas burner, electric stove or other sources of heat. Allow the appliance to cool down before removing individual parts. Place an extension cable in such a way as to prevent anyone from tripping over it or inadvertently pulling on it. @@@@This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used.*

*Always check the power cable and plug before use.*

*To reduce risks in the event of damage to the power cable, arrange for it to be examined and repaired as soon as possible by the manufacturer, by Customer Services or by a similarly qualified person. Do not place the power cable over sharp edges or close to hot surfaces or objects. These may damage the insulation of the power cable. If the appliance is not in use, and also before cleaning it, remove the plug from the power socket. Before taking out or inserting accessories, unplug the power cable and allow the appliance to cool down.*

*Children should be supervised to ensure that they do not play with the appliance. Do not touch the appliance until it has cooled down, or use oven gloves.*

*Rinse all parts, except the base 7, in warm water (see chapter "Cleaning and Care"). Place the appliance base 7 on a level and heat resistant surface.*

*Equalise any possible unevenness with the adjustable feet 0. Place the small cascade 2 on the large cascade 3. Insert the power plug into a power socket. For the chocolate fountain you can use all types of standard commercial chocolates that do not contain any solid ingredients, for example, nuts. However, as a general rule, the higher the proportion of cacao butter in the chocolate, the better are the flow characteristics. accordingly , covering chocolate (coverture) is especially suitable for the chocolate fountain.*

*Coverture is a type of chocolate that contains more cacao butter than conventional chocolates. @@@@Mix everything well so that the chocolate becomes more fluid. @@@@ 2. @@@@ 3. @@@@This will reduce the running noise level from the chocolate fountain. You could use the spatula 8 to help you do this. @@@@If you do not, the appliance could become irreparably damaged. @@If need be, add some cooking oil. 7.*

*@@@Always withdraw the plug from the power socket before cleaning! risk of electrical shock! Allow the appliance to cool down before cleaning it. risk of Burns! Do not use any aggressive or abrasive cleaning agents to clean the appliance. UNDER NO CIRCUMSTANCES should you pour the remaining chocolate into the toilet or into the drains. Wipe the chocolate residues off with a paper towel and lay the individual components in a solution of hot water and mild detergent for several minutes. 3. After this, the chocolate residues can be easily removed with a dishwashing brush or cloth.*

*For the places that are difficult to reach, it is best to use the cleaning brush. 4. Rinse the individual parts with warm water then dry them well. Ensure that firm foods do not fall into the chocolate fountain, as they could block the screw-conveyors 5. When you want to take the chocolate fountain out of use, position the function switch w at "O".*

*Let it cool down to a level where the chocolate is still somewhat soft, thus allowing it to be more easily removed. For hygienic reasons the chocolate should only be used once, as microbes could form in it. When the chocolate has cooled and solidified after use, do not melt it for a second time, instead, dispose of it.*

*@@Then soak up the water and chocolate residues with a dishcloth. Clean difficult to reach places with the cleaning brush. To clean the upper surfaces of the base 7 use a soft and moist cloth. Then carefully dry them off. @@@@Please retain your receipt as proof of purchase. @@Only in this way can a post-free despatch for your goods be assured. The warranty covers only claims for material and manufacturing defects, not for wearing parts or for damage to fragile components, e.*

*If this product has been subjected to improper or inappropriate handling, abuse, or modifications not carried out by one of our authorised sales and service outlets, the warranty will be considered void. Your statutory rights are not restricted in any way by this warranty. Do not dispose of the appliance in your normal domestic waste. This product is subject to the provisions of European Directive 2002/96/EC. Dispose of the appliance through an approved disposal centre or at your community waste facility. observe the currently applicable regulations. In case of doubt, pleasecontact your waste disposal centre. Niniejsz instrukcj należy zachowa, aby móc take później z niej skorzysta, w przypadku przekazywania urzdzenia osobom trzecim należy przekaż take instrukcj! .*



**[You're reading an excerpt. Click here to read official SILVERCREST KH 1091 CHOCOLATE FOUNTAIN user guide](http://yourpdfguides.com/dref/3033779)**

**<http://yourpdfguides.com/dref/3033779>**