



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST KH 1157 DIGITAL KITCHEN SCALES. You'll find the answers to all your questions on the SILVERCREST KH 1157 DIGITAL KITCHEN SCALES in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SILVERCREST KH 1157 DIGITAL KITCHEN SCALES

User guide SILVERCREST KH 1157 DIGITAL KITCHEN SCALES


Operating instructions SILVERCREST KH 1157 DIGITAL KITCHEN SCALES

Instructions for use SILVERCREST KH 1157 DIGITAL KITCHEN SCALES

Instruction manual SILVERCREST KH 1157 DIGITAL KITCHEN SCALES

3

■ **DIGITAL KITCHEN SCALES**



KH 1157

- Digital Kitchen Scales**
Operating instructions
- Digitaalinen keittiövaaka**
Käyttöohje
- Digital köksväg**
Bruksanvisning
- Digital køkkenvægt**
Betjeningsvejledning
- Ψηφιακή ζυγαριά κουζίνας**
Οδηγίες χρήσης
- Digitale Küchenwaage**
Bedienungsanleitung

KOMPERNASS GMBH · BURGSTRASSE 21 · D-44867 BOCHUM
www.kompernass.com
ID-Nr.: KH1157-12/09-V1



[You're reading an excerpt. Click here to read official SILVERCREST KH 1157 DIGITAL KITCHEN SCALES user guide](http://yourpdfguides.com/dref/3034024)
<http://yourpdfguides.com/dref/3034024>

Manual abstract:

Pass this booklet on to whoever might acquire the appliance at a later date. These digital kitchen scales are intended for use in weighing non-caustic, unaggressive and non-abrasive liquids (especially water and milk) and solid materials in domestic households. @@ Never place more than 5 kg on the scale.

@@ Only use the scale on level and firm surfaces. Do not place anything on the display. @@@@ Do not throw batteries into a fire. Never open batteries, never solder or weld batteries. If you do not intend to use the device for an extended period, remove the batteries. If the batteries have leaked, to avoid the risk of injury through chemical burns put on a pair of protective gloves before removing the batteries. Clean the battery compartment and the battery contacts with a dry cloth.

Keep batteries out of the reach of children. Children can put batteries into their mouths and swallow them. If a battery is swallowed, medical assistance must be sought IMMEDIATELY. This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used. Children should be supervised to ensure that they do not play with the appliance.

Failure to comply with them could damage the scales and possibly nullify your claims under the warranty provisions. Q Suspension frame w Weighing area e Display r Battery compartment t Sensor area ON/OFF y Sensor area Z/T (ZERO/TARE) u Sensor area UNIT (Measurement unit switch) i Sensor area T-SET (Timer/Clock adjustment) For Summer/Winter Time) press and hold the T-SET button i until the hour indicator blinks. Place the kitchen scales on a level and slip-free surface. This appliance is equipped with non-slip rubber feet. As furniture surfaces may be made of a variety of materials and are treated with many different types of cleaning agents, it cannot be completely ruled out that some substances contain ingredients which may corrode the rubber rests and soften them.

Close the battery compartment cover, until it locks in place. The scale is now in clock mode and ready for use. You can choose between the metric and the AngloAmerican (Imperial) system. From 0g to 999g the unit is shown in g/oz and from 999g in kg/lbs and g/oz. To switch between the metric and the AngloAmerican weighing systems, press and hold a finger on the sensor area UNIT u until the unit used for measuring has changed. @@@@ You can repeat this procedure several times. @@@@ The timer can be used in both a clock and weighing mode. @@@@ You can repeat this procedure several times. However, never place more than 5 kg on the scale. @@ This signal can be switched off by pressing on any sensor area.

@@ Pay attention to the correct polarity when exchanging batteries. @@ If you do not weigh anything for ca. @@ Keep batteries out of the reach of children. Remove the old batteries and replace them with new ones. @@ Never place more than 5 kg on the scale. @@@@ place less than 5 kg on the scale. If the display e shows "Lo", the batteries are discharged. Should , - - - " appear in the display e, wait a few seconds. If your scale does not function as expected, replace the batteries. @@@@ Wipe the scale clean with a cloth lightly moistened by a mild detergent solution or use a special stainless steel cleaner. do not use abrasive or solvent cleaners. Clean the display e only with a lightly moistened cloth and then wipe it dry with a lint-free towel. The warranty for this appliance is for 3 years from the date of purchase. The appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase.

In the event of a warranty claim, please make contact by telephone with our Service Department. Only in this way can a post-free despatch for your goods be assured. The warranty covers only claims for material and manufacturing defects, but not for transport damage, for wearing parts or for damage to fragile components, e. This product is for private use only and is not intended for commercial use. The warranty is void in the case of abusive and improper handling, use of force and internal tampering not carried out by our authorized service branch.

Your statutory rights are not restricted in any way by this warranty. The warranty period will not be extended by repairs made under warranty. this applies also to replaced and repaired parts. Any damage and defects extant on purchase must be reported immediately after unpacking the appliance, at the latest, two days after the purchase date. Repairs made after the expiration of the warranty period are subject to payment. Do not dispose of the appliance in your normal domestic waste. This product is subject to the European guideline 2002/96/EC. @@ observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre. Batteries may not be disposed of with normal domestic waste.

@@@@@ Only dispose of batteries when they are fully discharged. Lämna in den till ett företag som har tillstånd att ta hand om kasserade apparater av den här typen eller till rätt återvinningsstation på din kommuns avfallsanläggning. Den som använder någon typ av batterier är skyldig att lämna in dem till ett insamlingsställe i sin kommun eller stadsdel eller lämna tillbaka dem till affären där de köptes. .



[You're reading an excerpt. Click here to read official SILVERCREST KH 1157 DIGITAL KITCHEN SCALES user guide](http://yourpdfguides.com/dref/3034024)
<http://yourpdfguides.com/dref/3034024>