



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST KH 1159 DIGITAL KITCHEN SCALES. You'll find the answers to all your questions on the SILVERCREST KH 1159 DIGITAL KITCHEN SCALES in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SILVERCREST KH 1159 DIGITAL KITCHEN SCALES

User guide SILVERCREST KH 1159 DIGITAL KITCHEN SCALES

Operating instructions SILVERCREST KH 1159 DIGITAL KITCHEN SCALES

Instructions for use SILVERCREST KH 1159 DIGITAL KITCHEN SCALES

Instruction manual SILVERCREST KH 1159 DIGITAL KITCHEN SCALES

3

■ Digital Kitchen Scales



- Digital Kitchen Scales**
Operating instructions
- Digitaalinen keittiövaaka**
Käyttöohje
- Digital köksväg**
Bruksanvisning
- Ψηφιακή ζυγαριά κουζίνας**
Οδηγίες χρήσης
- Digitale Küchenwaage**
Bedienungsanleitung

KOMPERNASS GMBH · BURGSTRASSE 21 · D-44867 BOCHUM
www.kompernass.com
ID-Nr.: KH1159-01/09-V2



[You're reading an excerpt. Click here to read official SILVERCREST KH 1159 DIGITAL KITCHEN SCALES user guide](http://yourpdfguides.com/dref/3034040)

<http://yourpdfguides.com/dref/3034040>

Manual abstract:

These kitchen scales are intended for use in weighing non-caustic, unaggressive and non-abrasive liquids (especially water and milk) and solid materials in domestic households. Failure to comply with them could damage the scales and possibly nullify your claims under the warranty provisions. @@ Never place more than 4 kg on the scale. @@@@When interacting with batteries, please observe the following: This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used. Children should be supervised to ensure that they do not play with the appliance. Do not throw batteries into a fire. Never open batteries, never solder or weld batteries. If you do not intend to use the appliance for an extended period, remove the batteries. In the event of the batteries leaking acids, put on a pair of protective gloves. Clean the battery compartment and the battery contacts with a dry cloth.

Keep batteries away from children. Children can put batteries into their mouths and swallow them. If a battery is swallowed, medical assistance must be sought immediately. Should a battery leak, avoid making contact to the leakage with your skin, eyes and mucous membranes. If contact is made with the battery acids, rinse the affected area with copious amounts of water and then consult a doctor.

As soon as the batteries have been inserted the hour indicator blinks. Press either the Z/T y or the UNIT t button repeatedly to adjust and set the hour indicator. For Summer/Winter Time) press and hold the T-Set button r until the hour indicator blinks. There must be sufficient space to fold down the glass plate i. Bear in mind that the bowl o may also have to be placed on the glass plate i.

Check to ensure that there are no power cables located in the wall. Should you bore into a power cable with the drill, you may receive a potentially fatal electric shock! @@Using a 6mm drill, bore two holes with a horizontal spacing of ca. 88 mm into a vertical wall. @@@@Close the battery compartment cover, until it locks in place. The scale is now in clock mode and ready for use. @@@@To do this, press the Z/T y button once again. You can repeat this procedure several times. However, never place more than 4 kg on the scale. @@You can repeat this procedure several times. @@The timer can be used in both a clock and a weighing mode.

@@@This signal can be switched off by pressing on any button. If you do not weigh anything for ca. @@Never place more than 4 kg on the scale. @@@If, - - -" appears in the display w, wait a few seconds. If your scale does not function as expected, replace the batteries. @@@Pay attention to the correct polarity when exchanging batteries. An incorrect battery exchange could lead to the risk of an explosion. only exchange batteries for identical or equivalent types. @@Do not, under any circumstances, dispose of the appliance with household refuse. This product is subject to the provisions of European Directive 2002/96/EC.

Dispose of the appliance through an approved disposal centre or at your community waste facility. observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre. Batteries can be swallowed by children and cause impairment of health. Keep batteries out of the reach of children.

Remove the old batteries and replace them with new ones. Take note of the correct polarity: The side of the battery marked with a "+" must show to the top. Do not dispose of batteries with household waste. Therefore always remove the batteries/cells from the appliances before disposing of them. Every consumer is statutorily obliged to dispose of batteries at a collection site of his community/city district or at a retail store.

This obligation is intended to ensure that batteries are disposed of in an environmentally safe fashion. Only dispose of batteries when they are fully discharged. Wipe the scale with a soft cloth moistened with mild soap suds. do not use abrasive or solvent cleaners. Clean the display w only with a lightly moistened cloth and then wipe it dry with a lint-free towel. Wash the bowl o in a mild soapy water and then rinse it well with clear water. Dry all of the components well before re-using them. The warranty for this appliance is for 3 years from the date of purchase. The appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase.

@@Only in this way can a post-free despatch for your goods be assured. @@@@Your statutory rights are not restricted in any way by this warranty.

Lämna in den till ett företag som har tillstånd att ta hand om den här typen av uttjänta apparater eller till din kommunala avfallsanläggning. Den som använder någon typ av batterier är skyldig enligt lag att lämna in dem till ett insamlingsställe i sin kommun eller stadsdel eller lämna tillbaka dem till återförsäljaren. .



[You're reading an excerpt. Click here to read official SILVERCREST KH 1159 DIGITAL KITCHEN SCALES user guide](http://yourpdfguides.com/dref/3034040)
<http://yourpdfguides.com/dref/3034040>