



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST KH 1558 ELECTRIC RICE COOKER. You'll find the answers to all your questions on the SILVERCREST KH 1558 ELECTRIC RICE COOKER in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SILVERCREST KH 1558 ELECTRIC RICE COOKER  
User guide SILVERCREST KH 1558 ELECTRIC RICE COOKER  
Operating instructions SILVERCREST KH 1558 ELECTRIC RICE COOKER  
Instructions for use SILVERCREST KH 1558 ELECTRIC RICE COOKER  
Instruction manual SILVERCREST KH 1558 ELECTRIC RICE COOKER

3 2

## ■ ELECTRIC RICE COOKER



KH 1558

- Ⓜ **Electric Rice Cooker**  
Operating instructions
- Ⓜ **Elektroninen riisikeitin**  
Käyttöohje
- Ⓜ **Elektrisk riskokare**  
Bruksanvisning
- Ⓜ **Elektrisk riskoger**  
Betjeningsvejledning
- Ⓜ **Ηλεκτρικός βραστήρας ρυζιού**  
Οδηγός χρήσης
- Ⓜ **Elektrischer Reiskocher**  
Bedienungsanleitung

KOMPERNASS GMBH · BURGSTRASSE 21 · D-44867 BOCHUM  
www.kompernass.com  
ID-Nr.: KH1558-11/09-V2



[You're reading an excerpt. Click here to read official SILVERCREST KH 1558 ELECTRIC RICE COOKER user guide](http://yourpdfguides.com/dref/3034311)  
<http://yourpdfguides.com/dref/3034311>

**Manual abstract:**

Connect the rice cooker only to correctly installed and earthed mains sockets supplying a voltage that tallies with the details given on the appliance identification plate. Always remove the plug from the mains power socket when you move or fill the device, in the event of problems, before cleaning the appliance and when the cooker is not in use! Never disconnect the appliance by pulling on the power cable. Never touch the appliance plug with wet or moist hands. Never submerge the device in water or other liquids. Should the appliance ever fall into a liquid, IMMEDIATELY remove the plug from the mains power socket. Then, do not operate the appliance again until it has been inspected by an approved service company. Never subject the appliance to moisture and do not use it outdoors. @@@@ Do not kink or crush the power cable and do not wind it around the appliance. Arrange for defective power plugs and/or cables to be replaced at once by qualified technicians or our Customer Service Department. Never leave the appliance unattended during operation.

warning! Hot steam escapes from the steam hole and upon opening the cover! risk of scalding! This symbol on the appliance warns you of the risk of burns caused by hot surfaces. @@@@ When cooking, never cover the appliance lid with handtowels or anything similar. If you do, the safety concept of the appliance can no longer be assured and the warranty becomes void. Only use the accessory parts provided with the appliance and never use the appliance without first inserting the cooking bowl. @@ Carefully remove the rice cooker from the packaging.

@@@@@ As a general rule: A level measuring cup - filled with rice - yields a portion for one person. Determine the right quantity of rice and water for you in a few cooking attempts. If you do not wash the rice, this could lead to poor cooking results and increased foam and steam formation in the cooking bowl 4. 5. After washing it, pour the rice into the cooking bowl 4 and smooth it out.

1 Steam exit opening 2 Lid 3 Steamer attachment 4 Cooking bowl 5 Yellow control lamp (Keep-warm) 6 Red control lamp (Cooking) 7 Function selector switch for "Cooking" and "Keep-warm" 8 Connection socket for the power cable Place at least 2 measuring beakers of rice into the rice cooker! Then add water in the cooking bowl 4 as per the following cup markings: · 10 Measuring beakers of rice = Water up to cup marking "10" Subject to taste preferences, salt can also be added to the rice. Insert the power plug into a properly installed power socket. During the cooking process steam is emitted from the steam exit opening 1. NEVER hold your hands or other parts of the body over the steam exit opening 1 during the cooking process. There is a risk of receiving severe scalds! @@@@@@ If necessary, wipe the outside with a clean cloth. @@@@ Other spoons may cause damage to the anti-stick coating. @@@@@@ Otherwise, there is a permanent risk of receiving an electric shock! @@ the steaming attachment 3 becomes hot during the steaming process. When taking hold of the steaming attachment 3, use oven cloths or something similar to lift it from the cooking bowl 4. Take note of the examples given in the following table. 1 filled measuring cup is sufficient for about 15 minutes of steaming.

@@@@ Place the power plug in a wall socket. @@@@@ The food is now completely steamed and is ready to eat. @@@@ Use a dry cloth to clean the rice cooker housing incl. Clean the steaming attachment 3, the lid 2, the cooking bowl 4, the plastic spoon and the measuring cup in water containing a mild detergent. Dry all parts before using the appliance again. The rice cooker Push the power is not plugged plug into the in. Use a different wall power socket. Do not dispose of the appliance in your normal domestic waste. This product is subject to the provisions of European Directive 2002/96/EC. Dispose of the appliance through an approved disposal centre or at your community waste facility.

observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre. The cooking The yellow indibowl 4 is empty cator light 5 Fill the cooking and, as such, switches on, but bowl 4 with the the safety the cooking foodstuffs to be switch cannot process cannot cooked. The warranty for this appliance is for 3 years from the date of purchase. @@ Please retain your receipt as proof of purchase.

@@ Only in this way can a post-free despatch for your goods be assured. @@@@@ Your statutory rights are not restricted in any way by this warranty. The warranty period will not be extended by repairs made under warranty. this applies also to replaced and repaired parts. Any damage and defects extant on purchase must be reported immediately after unpacking the appliance, at the latest, two days after the purchase date.

Repairs made after the expiration of the warranty period are subject to payment. Lämna in den till ett företag som har tillstånd att ta hand om kasserade apparater av den här typen eller till rätt återvinningsstation på din kommuns avfallsanläggning. .



**[You're reading an excerpt. Click here to read official SILVERCREST KH 1558 ELECTRIC RICE COOKER user guide](http://yourpdfguides.com/dref/3034311)**  
<http://yourpdfguides.com/dref/3034311>