



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST KH 2032 MULTI-BAND RADIO. You'll find the answers to all your questions on the SILVERCREST KH 2032 MULTI-BAND RADIO in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SILVERCREST KH 2032 MULTI-BAND RADIO  
User guide SILVERCREST KH 2032 MULTI-BAND RADIO  
Operating instructions SILVERCREST KH 2032 MULTI-BAND RADIO  
Instructions for use SILVERCREST KH 2032 MULTI-BAND RADIO  
Instruction manual SILVERCREST KH 2032 MULTI-BAND RADIO

**SILVERCREST®**

3

## Multi-Band Radio



- GB **Multi-Band Radio**
- DE **Operating instructions**
- FI **Maailmanradio**  
Käyttöohje
- SE **Radiomottagare**  
Bruksanvisning

KOMPERNASS GMBH  
BURGSTRASSE 21 · D-44867 BOCHUM  
www.kompernass.com  
ID-Nr.: KH2032-06/10-V4



[You're reading an excerpt. Click here to read official SILVERCREST KH 2032 MULTI-BAND RADIO user guide](http://yourpdfguides.com/dref/3036197)  
<http://yourpdfguides.com/dref/3036197>

**Manual abstract:**

Hand the instructions over when transferring the device to a third party. Every copying, also as extracts, as well as any reproduction of images, even in an altered state, is only permitted with the written consent of the manufacturer. This appliance is intended for receiving generally approved radio transmissions in all countries (world receiver) and only for domestic use. Utilisation other than as described here is not permitted and it could lead to damages and injuries. This appliance fulfills, in regard to conformity with, the fundamental requirements and other relevant provisions of the EMC Directive 2004/108/EC, the Low Voltage Directive 2006/95/EC and the Ecodesign Directive 2009/125/EC (Commission Regulation 1275/2008 Annex II, No . Various countries may have different national rules on the radio frequency ranges assigned. Please note that you may not sell, transfer to third parties or abuse information received outside the assigned radio frequency ranges. These symbols bring to your attention that here a warning notice follows in regard to one of the following matters: - Risk of injury, - Risk of electric shocks, - Risk of fire, - Risk of explosion, plus bringing your attention to important matters such as: - Information regarding the handling of batteries, - Information about voltage surges, - Information about mains-power disconnection. This symbol warns about submersing the appliance in water or other liquids. This symbol warns you about hearing damage.

@@@ check the device and all parts for visible damage. The device's safety concept can only work if the device is in perfect condition. A mains adapter connected to the device must always be easily accessible so that the device can be quickly disconnected from the mains power in an emergency. Ensure that the rating of the local power supply tallies completely with the details given on the rating plate of the appliance. Damaged adapters or mains cables should be exchanged immediately by an authorised technician or the Customer Service in order to avoid risks.

Connection cables or devices that do not work perfectly or have been damaged should be repaired or exchanged immediately by Customer Services. never immerse the device in water! Simply wipe it with a slightly damp cloth. Do not expose the wall wart to rain or use it in a damp or wet environment. Ensure that the connection cable is never wet or damp when in use. You must not open or repair the device's housing.

This can be dangerous and renders the warranty null and void. Protect the device from moisture and sprayed water. Therefore do not place any objects filled with water (e. Do not use the device near hot surfaces. Do not set the device up where it is exposed to direct sunlight. This could cause it to overheat and damage it beyond repair. Never leave the device unattended during operation. Never cover the device's ventilation slots when it is switched on. Do not place open flames, such as candles, on or near the device. Keep children away from the connection cable and device.

children frequently underestimate the danger of electrical devices. If the device has fallen down or is damaged it must no longer be used. Have the device checked by a qualified specialist and, if necessary, repaired. batteries must not be handled by children. Children can put batteries in their mouths and swallow them. Devices connected to mains power can be damaged during a thunder storm. If there is a thunder storm, always remove the mains plug from the socket. If the product does not work properly due to electrical fast transient processes (voltage surges) or electrostatic discharge, it must be reset to restore normal operation. If necessary, remove the plug from the power socket and insert it again. Information on separating the device from mains power The POWER button on this device does not completely separate it from the mains network.

in addition , the device uses power when in standby mode. In order to completely separate the device from the mains supply the plug must be removed from the mains socket. Do not throw batteries into a fire. There is a risk of explosion and injury! If the appliance is not going to be used for long periods, remove the batteries. if batteries leak , put on protective gloves.

Clean the battery compartment and contacts with a dry cloth. Do not let children play with the plastic film. There is a risk of suffocation. Check the items supplied Whilst unpacking, check that all of the following items are available to you: · When you disconnect the radio from the mains supply, any settings you may have made (time, alarm, stations in memory) will be lost. If you wish to keep these settings, insert batteries (see below) before disconnecting.

The device can also be operated with batteries (not supplied) as well as from the mains. You will need four 1. Insert four batteries into the compartment, paying attention to the polarity. If the batteries become too weak, this is indicated by the symbol blinking in the display. Subsequently, the appliance then switches itself off. Plug the mains adapter into an easily accessible socket. On the left side of the radio, you will find the headphone socket. With this appliance, use only the supplied type E105 headphones. Listening to music with headphones for long periods and at high volume levels can lead to hearing damage! In order to prevent changing the settings unintentionally by touching the buttons, you can activate the key lock. With the radio switched on, press and hold the button MEM for about 3 seconds.

on screen , the message flashes. All buttons, except the buttons SNOOZE and MEM, are now blocked. Press and hold down the MEM button again for about 3 seconds to cancel the key lock. The screen will remain lit for about 15 seconds. Fold out the base on the rear of the device to make the device more stable.

When the power supply is effective (mains or battery operation), the device launches with an automatic update. "SYSTEM SETTING PLEASE WAIT" appears in the display. When an RDS signal is received, the time and date are adjusted automatically. When it is finished, the current time and the temperature will then be indicated in the display. If the time is not adjusted automatically, make the settings manually, as explained in the following sections.

The time functions can only be set when the radio is switched off. If an RDS signal is not received at the first switch-on, the pre-adjusted time for the multi-band radio begins with "0:00 00". If the device is disconnected from its power supply the settings are lost. @@@@During this time, adjust the setting with the UP/DOWN buttons. @@@@Press the UP or DOWN button to move the date forward or backward.

@@Press MODE again or three times. @@@@Press MODE again or four times to show the world time. @@@@ in addition , the SDA message will flash on the screen.

@@They do not have summer time. @@@@ in addition , the SDA message will flash on the screen.

Turn off the alarm by pressing any button. @@@@You can select which information is shown on the screen when the radio is switched off.



[You're reading an excerpt. Click here to read official SILVERCREST](http://yourpdfguides.com/dref/3036197)

[KH 2032 MULTI-BAND RADIO user guide](http://yourpdfguides.com/dref/3036197)

<http://yourpdfguides.com/dref/3036197>

*the selected mode is indicated by a corresponding symbol on the screen. When the radio is switched off, select the display mode by repeatedly pressing the FINE button in accordance with the following table: Symbol on the screen display mode CLK only the time is displayed CITY The time and world time are shown in succession DATE The time and date are shown in succession CIT DAT the time, date and world time are shown in succession This multi-band radio provides you with two independently adjustable alarm times, AL1 and AL2. You can programme for both . . If the device should sound an alarm on every workday, at the weekend, the whole week or on a single specific weekday; . If the alarm should sound with an alarm tone or with the radio. You can set two alarm times in your world receiver. With the radio switched off, press the buttons VOL.*

*Press the UP or DOWN button to move the alarm time forward or backward at minute intervals. @@Press the SNOOZE button to set the weekday on which you want the alarm to sound: You can select between workdays (Mo, Tu, We, Th, Fr), weekends (Sa, Su), the whole week (Su, Mo, Tu, We, Th, Fr, Sa) or a single weekday. Press the SNOOZE button until the desired alarm days are set. Hold down the SNOOZE button until the screen shows an individual week day. To go back to selecting week days, weekend or every day, briefly hold down the SNOOZE button again. Press the MODE button to save the setting and return to the time mode. The setting is also saved if you wait around 15 seconds until the screen returns to displaying the time. And the "signal sounds" alarm function has been selected, the signal sound is played for 10 minutes. Please take note that the last tuned radio station together with the last used sound volume setting is used for the alarm call. With the radio switched off, press the button MODE seven times.*

*the screen displays the snooze time set (default is "SNO 10"). Use theUP and DOWN buttons to set the snooze time to a time between 1 and 59 minutes. The stop watch function is only available when the radio is switched off. Press and hold down the PAGE button for around 2 seconds, the screen shows 00. During time measurement, it can be stopped by pressing SNOOZE.*

*Leave the stop watch by pan/AMS): · Hold down the MEMORY SCAN button for about 1 second. The world receiver now searches all frequencies in the currently selected frequency range and saves the stations it finds from the currently set memory page and memory space. All stored stations will be played in succession for about 15 seconds. Press the button SNOOZE to finish the rendering of the memory positions. Note: Please take note that with this the snooze function will be activated.*

*Risk of injury from electric shock: Disconnect the device from the mains power before cleaning it! Never immerse the device's parts into water or other liquids! Clean the housing surface with a slightly damp cloth. Never use petrol, solvent or detergents that could attack the plastic! Dispose of the device using an authorised disposal company or your local disposal facility. This device is subject to European Directive 2002/96/EC. please follow the currently valid regulations. In case of doubt, contact your disposal facilities. Each consumer is obliged by law to bring batteries/rechargeable batteries to a collection point provided by the local authority/council or to retailers. This obligation is so that the batteries can be disposed of in an environmentally friendly manner. The warranty for this appliance is for 3 years from the date of purchase. The appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase.*

*In the event of a warranty claim, please make contact by telephone with our Service Department. Only in this way can a post-free despatch for your goods be assured. The warranty covers only claims for material and manufacturing defects, but not for transport damage, for wearing parts or for damage to fragile components, e. @@@@Your statutory rights are not restricted in any way by this warranty. @@ this applies also to replaced and repaired parts.*

*@@Repairs made after the expiration of the warranty period are subject to payment. Den här varningssymbolen ska göra dig uppmärksam på en varningstext som ska varna för följande saker: - risk för personskador, - risk för elchocker, - risk för eldsvåda, - risk för explosion samt viktig information om: - hur man handskas med batterier, - stötspanningar, - hur strömtillförseln bryts. För att inställningarna ska bli verksamma behöver du bara vänta tills visningen slutar blinka (displayen växlar till att visa klockan igen) eller gå över till nästa funktion genom att trycka på knappen MODE. Lämna in den till ett företag som har tillstånd att ta hand om den här typen av uttjänta apparater eller till din kommunala avfallsanläggning. Den som använder någon typ av batterier är skyldig enligt lag att lämna in dem till ett samlingsställe i sin kommun eller stadsdel eller lämna tillbaka dem till återförsäljaren.*



[You're reading an excerpt. Click here to read official SILVERCREST  
KH 2032 MULTI-BAND RADIO user guide  
http://yourpdfguides.com/dref/3036197](http://yourpdfguides.com/dref/3036197)