



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST KH 206 WIRELESS DOORBELL. You'll find the answers to all your questions on the SILVERCREST KH 206 WIRELESS DOORBELL in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SILVERCREST KH 206 WIRELESS DOORBELL
User guide SILVERCREST KH 206 WIRELESS DOORBELL
Operating instructions SILVERCREST KH 206 WIRELESS DOORBELL
Instructions for use SILVERCREST KH 206 WIRELESS DOORBELL
Instruction manual SILVERCREST KH 206 WIRELESS DOORBELL

SILVERCREST®

CZ SK

Wireless Doorbell



- GB **Wireless Doorbell**
Operating instructions
- CZ **Bezdrátový zvoněk**
Návod k obsluze
- SK **Zvonček na dvere**
Návod na obsluhu

KOMPERNASS GMBH
BURGSTRASSE 21 · D-44867 BOCHUM
www.kompernass.com
ID-Nr.: KH206-06/10-V2



[You're reading an excerpt. Click here to read official SILVERCREST KH 206 WIRELESS DOORBELL user guide](http://yourpdfguides.com/dref/3036175)
<http://yourpdfguides.com/dref/3036175>

Manual abstract:

Pass this booklet on to whoever might acquire the appliance at a future date. This appliance serves as a radio doorbell system for wireless visitor signalisation and thus makes possible the operation of a door bell without wiring. The appliance is intended for domestic use only, not for commercial or industrial applications. No warranty is provided for damages resulting from improper use of the appliance! 5 V Batteries, Type "AA/Mignon/LR6" 3 V Battery, Type CR2032 Stand for the receiver Screw for fixing the transmitter on to the assembly plate Nameplates Plastic cover for the nameplate Wallplugs with screws for transmitter assembly Wallplug with a screw for receiver suspension Operating manual Do not permit children to handle electrical appliances without supervision, as they cannot correctly assess the possible dangers of injury. This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used. Children should be supervised to ensure that they do not play with the appliance. • Keep batteries well away from children. Children can put batteries into their mouths and swallow them. If a battery is swallowed, medical assistance must be sought IMMEDIATELY. Do not throw batteries into a fire.

Never open batteries, never solder or weld batteries. If you do not intend to use the appliance for an extended period, remove the batteries. Do not use any aggressive chemical substances for cleaning. Protect the receiver against moisture. •••••Taking the appliance into use Take the appliance out of the carton and remove all packaging materials.

The side marked with "+" must be facing up. replace the assembly plate h back onto the transmitter. Should the performance of the appliance diminish or fall away completely, it means the batteries are exhausted. The used batteries should then be changed for new ones of the same type. Selecting the signal type The receiver can indicate the reception of a door-ring signal either optically, acoustically or optically and acoustically.

To select, bring the signal type switch t into the desired position: - only acoustic ring indications, the selected melody sounds, - only optical ring indications, the signal indicator blinks, - optical and acoustic ring indications. Adjusting the signal sound volume To select the desired signal sound volume, press the VOL. Button e repeatedly until the desired volume level is set. Selecting the call melody There are 36 different call melodies stored in the appliance.

repeatedly press the button for melody selection r. When the desired melody sounds, stop the selection. The appliance will utilise the last melody it played as the call melody. Synchronising the transmitter and receiver The transmitter and receiver of this doorbell system can communicate with each other on a variety of different frequencies. Consequently, up to four transmitters can be operated with one receiver. The precondition for this is that the transmitter and receiver within a system are working on the same frequency.

For this, you must synchronise the appliances as follows: Press the synchronisation button on the receiver The red signal indicator q now glows. Now press the bell button w. ••••• (68 mm) and then bore the holes for the enclosed wallplugs. Screw the assembly plate h onto the wall.

•••••Bear in mind that the given range refers to the free-space range. •••••If they do, there is a risk that the appliance could be damaged. •••••Do not, under any circumstances, dispose of the appliance in your household refuse. This appliance is subject to the provisions of European Guidelines 2002/96/EC. transmitter and receiver units • Arrange for the product, or parts of it, to be disposed of by a professional disposal company or by your communal waste facility. In case of doubt, please contact your waste disposal centre.

batteries/rechargeable batteries • Used batteries/rechargeable batteries may not be disposed of in household waste. • Batteries can contain poisons which are damaging to the environment. Therefore, dispose of the batteries/ rechargeable batteries in accordance with statutory regulations. • Every consumer is legally obligated to surrender batteries/ rechargeable batteries to a community collection centre in their district or to a dealer. The purpose of this obligation is to ensure that batteries are disposed of in a non-polluting manner.

This appliance conforms with the fundamental requirements and other relevant regulations of the R&TTE Directive 1999/5/EC. A complete copy of the original conformity declaration is available from the importer. The warranty for this appliance is for 3 years from the date of purchase. ••Please retain your receipt as proof of purchase. ••Only in this way can a post-free despatch for your goods be assured.

••This product is for private use only and is not intended for commercial use. The warranty is void in the case of abusive and improper handling, use of force and internal tampering not carried out by our authorized service branch. Your statutory rights are not restricted in any way by this warranty. The warranty period will not be extended by repairs made under warranty. this applies also to replaced and repaired parts. Any damage and defects extant on purchase must be reported immediately after unpacking the appliance, at the latest, two days after the purchase date. Repairs made after the expiration of the warranty period are subject to payment. .



[You're reading an excerpt. Click here to read official SILVERCREST KH 206 WIRELESS DOORBELL user guide](http://yourpdfguides.com/dref/3036175)
<http://yourpdfguides.com/dref/3036175>