




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST KH 2156 UNIVERSAL REMOTE CONTROL. You'll find the answers to all your questions on the SILVERCREST KH 2156 UNIVERSAL REMOTE CONTROL in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SILVERCREST KH 2156 UNIVERSAL REMOTE CONTROL
User guide SILVERCREST KH 2156 UNIVERSAL REMOTE CONTROL
Operating instructions SILVERCREST KH 2156 UNIVERSAL REMOTE CONTROL
Instructions for use SILVERCREST KH 2156 UNIVERSAL REMOTE CONTROL
Instruction manual SILVERCREST KH 2156 UNIVERSAL REMOTE CONTROL

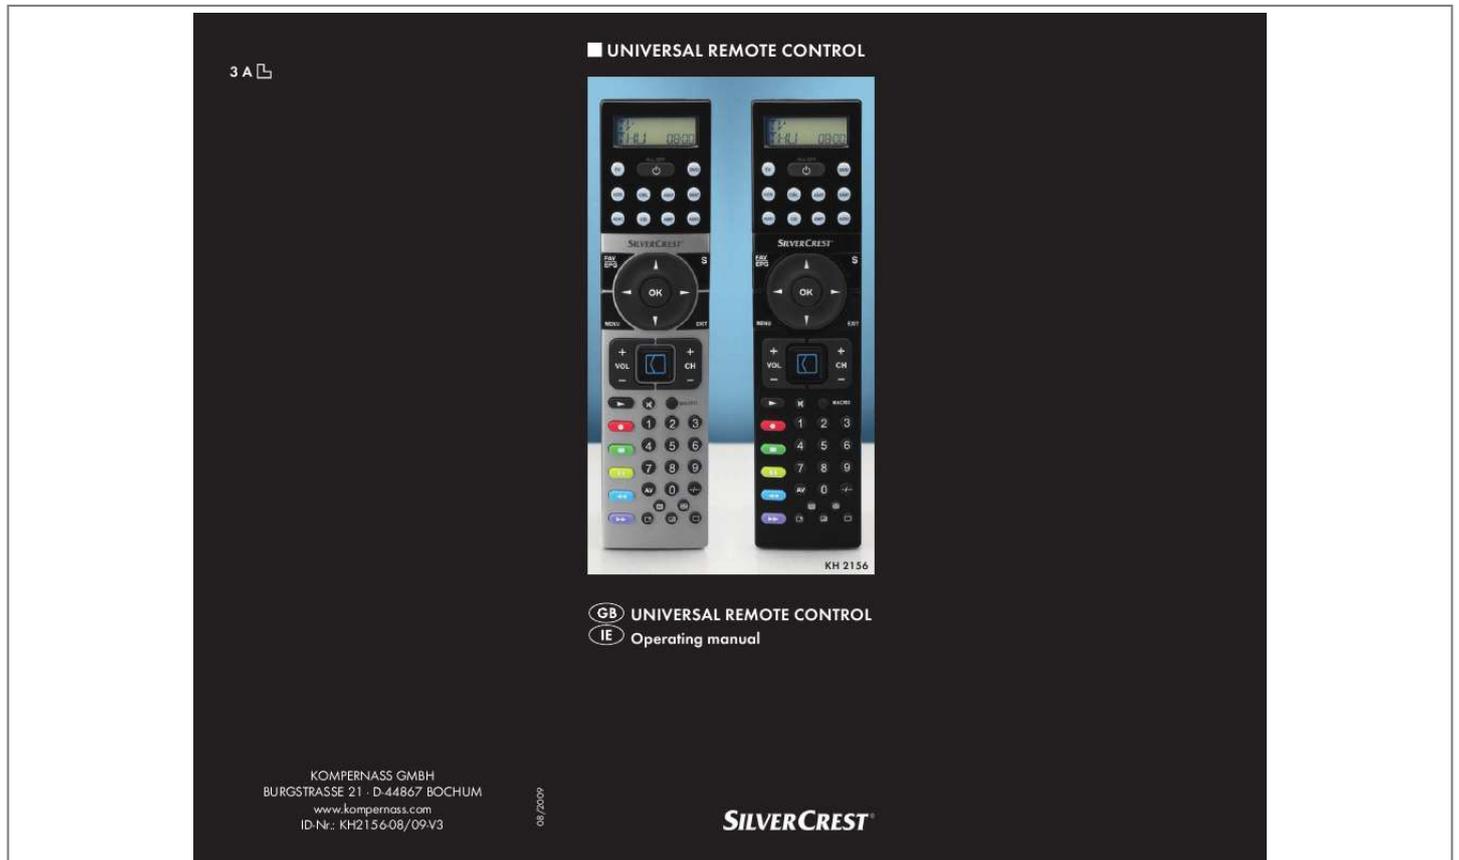

[You're reading an excerpt. Click here to read official SILVERCREST KH 2156 UNIVERSAL REMOTE CONTROL user guide](http://yourpdfguides.com/dref/3034584)
<http://yourpdfguides.com/dref/3034584>

Manual abstract:

The universal remote control is intended for private use. It is not suitable for commercial use. Any other use is considered improper use. The manufacturer declines to accept responsibility for damage(s) arising from improper use. There is a danger of injury in the event of improper handling of batteries! Batteries must be handled with special care. Take note of the following safety instructions: · Take the batteries out of the battery compartment as soon as they are depleted. · Do not throw batteries into a fire. Never subject batteries to high temperatures. @@ · Explosion hazard! Non-rechargeable batteries must never be recharged. · Do not open the batteries or short-circuit them.

@@In event of contact with the skin, rinse with large amounts of water. @@@@ · Keep batteries well away from children. Children can put batteries into their mouths and swallow them. If a battery is swallowed medical assistance must be sought IMMEDIATELY. Laser The Universal remote control contains an infrared diode of laser class 1.

A safety system prevents the emission of dangerous laser radiation during use. To prevent eye injuries, do not modify or damage the safety system of the device. -2- Damage to the device · If the device is defective, do not attempt to repair it yourself. In case of damage, contact the manufacturer or the manufacturer's service hotline (see Warranty information). · If liquid escapes from the device or if the device has been otherwise damaged, it must be inspected by the manufacturer or the manufacturer's service hotline.

Contact the manufacturer or the manufacturer's service hotline (see Warranty information). Device summary q w e r t y u i o a s d f g h j k l 1 (2) LCD display /ALL OFF button Device buttons S button Arrow buttons EXIT button CH +/- buttons MACRO button Number buttons Button for one or two digit programme numbers Teletext function buttons AV button Record/Playback buttons Mute switching VOL +/- buttons MENU button OK button FAV / EPG button Infrared sender/receiver Battery compartment cover Tips: · The functions described here pertain to the theoretically ideal circumstance that the button structure of the respective original remote control is identical to this universal remote control. This only occurs, however, in rare cases. If, therefore, not all of the original remote control's functions can be reproduced it is not due to a deficiency in the Universal remote control. · All the brand names used in these instructions or in the accompanying code list are trademarks of the corresponding companies. -3- Initial use Unpacking the device / checking the package contents Important! Keep the plastic packaging well away from small children. There is a risk of suffocation! · Unpack the device and accessories. · Check the package contents - Universal remote control (URC), - Operating instructions, - Manufacturers directory with device code list: - 2 x 1,5 V Batteries, type AAA/LR03 (Micro) · Remove the protective foil from the LCD display q. Note: Transport damage If you notice any transport damage contact the manufacturer or the manufacturer's Service-Hotline (see warranty information). Inserting the batteries Attention! The Universal remote control must only be operated with 1.

5 Volt batteries (Type AAA, LR03). Carry out the battery change as quickly as possible. Preset settings will remain saved for approx. 1 minute. If new batteries have not been installed within this time all of the settings will have to be carried out again. The time of day will, however, in any case be deleted. 1. Open the battery compartment cover 2) in the direction of the arrow. 2. Insert the batteries as shown in the diagram and close the battery compartment. The LCD display q is activated as long as batteries are installed. The following diagram shows the LCD display q after the batteries have been installed or changed. -4- Note: If no LCD display q is visible check the polarity of the batteries or install new ones. Operating components LCD display The LCD display q is divided into fields. Text field 2! Here is shown the currently selected device, for example DVD, TV VCR etc.

Infrared symbol 2@ Every time a button is pressed, with which an infrared signal is to be sent the Infrared symbol illuminates. Code/Time field 2# Here is shown the device code of the relevant selected device or the time of day. With the time of day indicator ":" the numbers blink in the middle. Day of the week field 2\$ Here you can read the English shortened form of the current day of the week after you have entered the date. MON Tue WED THU FRI SAT SUN = Monday = Tuesday = Wednesday = Thursday = Friday = Saturday = Sunday Standard display: -5- The standard readout of the LCD display q consists of the details for the relevant device, for example, "TV", the initial for the day of the week and the time of day indicator.

Buttons Note: All the functions described here can, of course, only be used if they are supported by the device being controlled. /ALL OFF button. w Switch device on/off. hold down for approx. 5 seconds to switch all devices on/off. Device buttons e The device buttons are used to select the device that should be operated. Television Video recorder Accessory unit 1 Cable receiver CD player Analogue satellite receiver Audio amplifier DVD player Digital satellite receiver Accessory unit 2 "S" button r Hold down for 3 seconds to access the SETUP menu. Arrow buttons t Move up, right, left and down in menus. EXIT button y Move a level backward in the menu. -6- CH +/- buttons u Change the reception channel.

MACRO button i MACRO button i followed by a number button o 1-4 activates a previously saved chain of commands. Number buttons o Enter programme and device code numbers. Button for one/two digit programme numbers a F or two digit programme numbers (depending on the device type) first press the button then via the number buttons o enter the programme number. When pressed again the display becomes single digit once more. Teletext function buttons s In teletext operation the buttons have the following functions: Access the teletext function Stop automatic paging forward for multi-page teletexts. Enlarge page presentation Screen text and TV image one upon the other To end the teletext function. Note: The function is only available in the European TV mode and your TV device must have a teletext module. In addition the CH +/- buttons u control the following teletext functions: CH + CH -- AV button d Switch to the AV input. Leaf one page forward Leaf one page backwards -7- Record/playback buttons f The playback buttons f control devices such as DVD/CD players and video recorders: Record Start playback Stop Playback/Record/Wind Pause playback Wind forward Rewind Mute switching g Switch sound on/off. VOL +/- buttons h Set volume (Volume).

MENU button j Access the menu of the controlled device.



[You're reading an excerpt. Click here to read official SILVERCREST KH 2156 UNIVERSAL REMOTE CONTROL user guide](http://yourpdfguides.com/dref/3034584)
<http://yourpdfguides.com/dref/3034584>

15 seconds to pass without an entry. @@Example: You want to save a command chain in a Macro. We begin in the mode "MACRO STEP".

@@@The notice "CODE SETUP" appears. @@In the display "MACRO SETUP 1" appears.

@@@Confirm the delete process with the OK button k. The LCD display q shows "SUCCESS". All Macros are now deleted and the menu will end. Tips:

1. When the LCD display q shows "CONFIRM CLEAR" you can stop the delete process with the EXIT button y.

2. Individual Macros can not be deleted they can only be overwritten. Favourites channel Note: With this function you can save your preferred stations as favourites. To programme favourites Your favourite stations are saved as follows: 1. Press the device button e for the device that you want to save a favourite.

2. Hold down the S button r for a little longer than 3 seconds. The notice "CODE SETUP" appears. 3. With the or button t select "FAV CH SETUP" and confirm with the OK button k.

In the display "FAV CH SETUP 1" appears. 4. With the or button t select the memory slot to be programmed (FAV CH SETUP 1 - 4) and confirm with the OK button k. 5. In the LCD display q "FAV CH STEP" appears. Now press, one after the other, the buttons (max. 4) for access to your desired favourite stations.

6. When the maximum number of button commands is reached the LCD display q shows "FULL". 7.

Save the entry with the S button r. In the LCD display q "FAV CH SETUP" appears. 8. If, with the selection of the favourites to be programmed (step 4), you select a memory slot that is already occupied the existing favourite will be overwritten. 9.

Repeat the steps to apply further favourites. 10. With the EXIT button y you move a level backwards in the menu except during the entry of the button commands. - 19 - Note: The input of the channel numbers can vary according to the model and brand of the selected devices. If necessary, with multi-digit channel numbers you must first press the button a.

To access favourites To access a pre-programmed favourite press the FAV/EPG button l followed by the corresponding number button for the desired memory slot (1 - 4). Delete All FAV channels To delete all pre-programmed favourites proceed as follows: 1. Hold down the S button r for a little longer than 3 seconds. 2. With the or button t select "FAV CH SETUP" and confirm with the OK button k. In the display "FAV CH SETUP 1" appears. 3. With the or button t select "FAV CH CLEAR" and confirm with the OK button k. 4. In the LCD display q "CONFIRM CLEAR" (confirm delete) appears.

Confirm the delete process with the OK button k. The LCD display q shows "SUCCESS". All favourites are now deleted and the menu will end. Tips: 1. When the LCD display q shows "CONFIRM CLEAR" you can stop the delete process with the EXIT button y. 2. Individual favourites can not be deleted they can only be overwritten. Volume control Vol +/-, (Mute switching) Press the "VOL+" button to increase the volume. With the "VOL -" button you reduce the volume. To mute the sound press the -button g.

A further press of this button turns the sound back on. When you activate the VOL +/- buttons h on the URC basically the volume adjustment on the TV device is addressed, regardless thereof, which device button e was pressed previously. This admittedly does not apply to the devices "AMP" and "DSAT" since you can assume that these devices have their own volume adjustment. - 20 - For operation > To operate one of the programmed devices with the URC first press the corresponding device button e. Then point the URC to this device and press the desired button.

> Put the number buttons o exactly as you do with the original remote control. Before you make a two digit entry press, if necessary, the button a. > Press the FAV/EPG button l to start the electronic programme guide of a device equipped with this function. > Whilst you hold down the S button r the date will be superimposed below to the right in the LCD display q. > Whilst you hold down one of the device buttons e the active code for this device will be superimposed below to the right in the LCD display q.

@@@For this hold down the ALL OFF button w for approx. 5 seconds. This will only function under the following circumstances: 1. A visible connection exists between all the devices and the URC. 2. @ @ 3. All target devices must be suitable for remote control switch off. @ @ more the button Faults / Remedies Your device does not react to the URC. > Check the batteries. They must have enough voltage and be properly installed.

> Firstly have you pressed the correct device button e for the desired target device? > Check to see that the correct code is programmed in for the target device (see section "Code Setup"). The URC is transmitting the commands incorrectly. @ @ > The batteries must have enough voltage and be properly installed. - 21 - > It is possible that you are using the wrong code. @ @ The URC does not change the station on the device. @ @ @ @ @ Some buttons on the URC do not function properly. > It is possible that your URC does not have all of the functions that are on the device's original remote control. > It is possible that you have not programmed in the optimal code. Search for a code that supports more of the target device's functions. The URC stops reacting after a button is pressed.

> The batteries must have enough voltage and be properly installed. > Point the URC towards your device. The LCD display q shows nothing. > The batteries must have enough voltage and be properly installed. > The contrast could be set too low.

Increase the contrast setting. Disposal Do not dispose of the device in your normal domestic waste. This product is subject to the European directive 2002/96/EC. Universal remote control · Have the universal remote control or parts of it disposed of by a professional disposal company or by your communal disposal facility. · Observe the currently applicable regulations.

In case of doubt contact your disposal facility. Batteries/rechargeable batteries · Used batteries/rechargeable batteries may not be disposed of in household waste. · Batteries can contain poisons which are damaging to the environment. Therefore, dispose of the batteries/rechargeable batteries in accordance with statutory regulations. - 22 - · Every consumer is legally obliged to surrender batteries/ rechargeable batteries to a community collection centre in their district or to a dealer. The purpose of this obligation is to ensure that batteries are disposed of in a nonpolluting manner. · Only dispose of batteries when they are fully discharged. Dispose of packaging materials in an environmentally responsible manner. CE- Conformity This device satisfies the fundamental requirements and other relevant regulations of the EMC Directive 2004/108/EC.



[You're reading an excerpt. Click here to read official SILVERCREST KH 2156 UNIVERSAL REMOTE CONTROL user guide](http://yourpdfguides.com/dref/3034584)
<http://yourpdfguides.com/dref/3034584>

Importer KOMPERNASS GMBH BURGSTRASSE 21 44867 BOCHUM, GERMANY www.

kompernass.com Technical data Controllable devices: Dimensions L x W x H: Weight : Infrared LED: Power supply Batteries: 10 212 x 50 x 23 mm 116 g (without batteries) Laser class 1 2 x 1.5 V, type AAA/LR03 (micro) (supplied) Important Warranty Notices The warranty for this device is for 3 years from the date of purchase. Should you have grounds for complaint, despite our high quality standards, please contact our Service Hotline. In the event that your complaint cannot be resolved over the telephone, you will receive from them · a processing number (RMA number) as well as · an address to which you can send your device for repair under warranty. In the case of a mail-in shipment please enclose a copy of the purchase receipt (sales slip). The device must be securely packed and the RMA number clearly visible. Shipments without an RMA number can not be processed. - 23 - Note: The warranty provisions cover only material or factory defects. The warranty provisions do not cover · parts subject to wear and tear · for damage to breakable parts, such as switches or rechargeable batteries.

This product is for private use only and is not intended for commercial use. The warranty is void in the case of abusive and improper handling, use of force and internal tampering not carried out by our authorized service branch. Your statutory warranty claims are not restricted by this warranty. DES Ltd Tel.:

0870/787-6177 Fax: 0870/787-6168 e-mail: support.

uk@kompernass.com Kompernass Service Ireland Tel: 1850 930 412 (0,082 EUR/Min.) Standard call rates apply. Mobile operators may vary. e-mail: support.

ie@kompernass.com - 24 - .



[You're reading an excerpt. Click here to read official SILVERCREST KH 2156 UNIVERSAL REMOTE CONTROL user guide](http://yourpdfguides.com/dref/3034584)
<http://yourpdfguides.com/dref/3034584>