



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST KH 2157 UNIVERSAL REMOTE CONTROL. You'll find the answers to all your questions on the SILVERCREST KH 2157 UNIVERSAL REMOTE CONTROL in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SILVERCREST KH 2157 UNIVERSAL REMOTE CONTROL  
User guide SILVERCREST KH 2157 UNIVERSAL REMOTE CONTROL  
Operating instructions SILVERCREST KH 2157 UNIVERSAL REMOTE CONTROL  
Instructions for use SILVERCREST KH 2157 UNIVERSAL REMOTE CONTROL  
Instruction manual SILVERCREST KH 2157 UNIVERSAL REMOTE CONTROL

3 A

■ UNIVERSAL REMOTE CONTROL

GB UNIVERSAL REMOTE CONTROL  
IE Operating manual

FI YLEISKAUKOSÄÄDIN  
Käyttöohje

SE UNIVERSALFJÄRRKONTROLL  
Bruksanvisning

KOMPENASS GMBH  
BURGSTRASSE 21 · D-44867 BOCHUM  
www.kompenass.com  
ID-Nr.: KH2157-09/09-V2

01/2009

SILVERCREST



[You're reading an excerpt. Click here to read official SILVERCREST KH 2157 UNIVERSAL REMOTE CONTROL user guide](http://yourpdfguides.com/dref/3034599)  
<http://yourpdfguides.com/dref/3034599>

### Manual abstract:

*It can only be used for entertainment electronics with infrared receivers. Any other use is considered improper use. The manufacturer accepts no responsibility for damage caused by improper handling or unauthorized reconstruction. Warning A warning of this danger level signifies a possible dangerous situation. If the dangerous situation is not avoided it can lead to injuries. The directives in this warning are there to avoid personal injuries. Important A warning of this danger level signifies possible property damage. If the situation is not avoided it can lead to property damage. The directives in this warning are there to avoid property damage. Batteries must be handled with special care.*

*Take note of the following safety instructions: · Keep batteries well away from children. Children can put batteries into their mouths and swallow them. If a battery is swallowed medical assistance must be sought IMMEDIATELY. Do not throw batteries into a fire. Battery acid leaking from a battery can cause inflammation of the skin.*

*In event of contact with the skin, rinse with large amounts of water. If the liquid comes into contact with your eyes, rinse thoroughly with water, do not rub and immediately consult a doctor. Laser warning The Universal remote control contains an infrared diode of laser class 1. A safety system prevents the emission of dangerous laser radiation during use. To prevent eye injuries, do not modify or damage the safety system of the device.*

*If liquid escapes from the device or if the device has been otherwise damaged, it must be inspected by the manufacturer or the manufacturer's service hotline.*

*Take the batteries out of the battery compartment as soon as they are depleted. If you will not be using the device for a long period of time, remove the batteries to prevent them from discharging. Always change all batteries at the same time and always use batteries of the same type. Q w e r t y u i o a s d f g h j k l 1 ( 2 ) LCD display /ALL OFF button Device buttons S button Arrow buttons EXIT button CH +/- buttons MACRO button Number buttons Button for one or two digit programme numbers Teletext function buttons AV button Record/Playback buttons Mute switching VOL +/- buttons MENU button OK button FAV / EPG button Infrared sender/receiver Battery compartment cover The functions described here pertain to the theoretically ideal circumstance that the button structure of the respective original remote control is identical to this universal remote control. This only occurs, however, in rare cases. If, therefore, not all of the original remote control's functions can be reproduced it is not due to a deficiency in the Universal remote control. All the brand names used in these instructions or in the accompanying code list are trademarks of the corresponding companies. Keep the plastic packaging well away from small children. There is a risk of suffocation! Note: Transport damage If you notice any transport damage contact the manufacturer or the manufacturer's Service-Hotline (see warranty information).*

*The Universal remote control must only be operated with 1.5 Volt batteries (Type AAA, LR03). Carry out the battery change as quickly as possible. If new batteries have not been installed within this time all of the settings will have to be carried out again. The time of day will, however, in any case be deleted. The following diagram shows the LCD display q after the batteries have been installed or changed. Here is shown the currently selected device, for example DVD, TV VCR etc. With the time of day indicator ":" the numbers blink in the middle. Day of the week 2\$ Here you can read the English shortened form of the current day of the week after you have entered the date. The standard readout of the LCD display q consists of the details for the relevant device, for example, "TV", the initial for the day of the week and the time of day indicator.*

*Note: All the functions described here can, of course, only be used if they are supported by the device being controlled. Device buttons e The device buttons are used to select the device that should be operated. Television Video recorder Accessory unit 1 Cable receiver CD player Analogue satellite receiver Audio amplifier DVD player Digital satellite receiver Accessory unit 2 "S" button r Hold down for 3 seconds to access the SETUP menu. Arrow buttons t Move up, right, left and down in menus. MACRO button i MACRO button i followed by a number button o 1-4 activates a previously saved chain of commands. Button for one/two digit programme numbers a F or two digit programme numbers (depending on the device type) first press the a button then via the number buttons o enter the programme number. When pressed again the display becomes single digit once more. Teletext function buttons s In teletext operation the buttons have the following functions: Access the teletext function Stop automatic paging forward for multi-page teletexts. Enlarge page presentation Screen text and TV image one upon the other To end the teletext function. The teletext function is only available in the European TV mode and your TV device must have a teletext module.*

*In addition the CH +/- buttons u control the following teletext functions: Leaf one page forward CH + Leaf one page backwards CH -- · Record Stop Playback/Record/Wind Pause playback Rewind Wind forward Mute switching g Switch sound on/off. OK button k You can confirm a menu selection with the OK button. Time of day setting, date, display contrast and background illumination as well as system reset · Assigning favourites On the following page you can see a summary of the menu structure. 3 Programming methods are available for the remote control: Programming by brand code search, by automatic code search and by direct code input (manual). First you should use the brand code search since this method is the fastest way of programming if the manufacturer of your device is itemized in the code list. As second is recommended the direct code input followed by the automatic code search. With this method you select the brand and code direct via the LCD display q. Hold down the S button r for a little longer than 3 seconds. Carry out entries in the menu quickly because after approx. With the buttons t select "BRAND CODE" and confirm with the OK button k.*

*4. Now appears the alphabetical first brand name from the list of pre-programmed devices. To make access easier you can skip directly to specific letters of the alphabet with the number buttons o: 2 => A 3 => D 4 => G 5 => J 6 => M 7 => P 8 => T 9 => W Example With button number 5 the display skips to the letter "J". the first brand is "JVC"\*. If, for example, you own a "Kenwood"\* brand device, continue leafing with the 4 button t until this brand name appears. (\* All brand names used here are trademarks of the corresponding manufacturer. ) 7. The majority of manufacturers use several different codes for the remote control.*



[You're reading an excerpt. Click here to read official SILVERCREST KH 2157 UNIVERSAL REMOTE CONTROL user guide](http://yourpdfguides.com/dref/3034599)  
<http://yourpdfguides.com/dref/3034599>

You must now ascertain which of the available codes is best suited to your device. If, however, none or only a few of the buttons function select with the or button t the next code and test again as described in step 8.

11. With the EXIT button y you will move one level upwards in the menu. Repeat these operational steps for all devices that you would like to control with the remote control. In this mode the remote control can be programmed by direct input of a code number. You can obtain the necessary code number from the enclosed manufacturers directory with device code list.

Hold down the S button r for a little longer than 3 seconds. Now the first digit of the code blinks and waits for your code input. Enter the new four digit code via the number buttons o. In the event of failure the LCD display q shows briefly "ERROR" and waits for a new code entry. Then you repeat step 4.

6. With the EXIT button y you will move one level upwards in the menu. This process can take several minutes per device since all codes for the selected device have to be gone through. Therefore this method should only be used when the device cannot be programmed via brand code search or direct code input or if your device is not listed at all in the manufacturers directory with device code list. Follow the steps listed below to carry out programming by means of the automatic code search. Hold down the S button r for a little longer than 3 seconds. Thereby the device sends, one after the other, the code numbers in ascending order. When the device reacts by switching off press immediately the OK button k to save the relevant code. Check to see if the majority of your device's functions can now be controlled with the remote control. If yes you have most probably found the correct code.

In the event that a few functions are not working you can start the automatic code search again beginning with step 1. 8. However if the device does not react any more you probably did not press the OK button k quick enough in step 6. Then press repeatedly the EXIT button y to exit the menu and return to the standard display. 9. Now hold down the device button e of the device for which you have just sought the relevant code. Below on the right in the LCD display q will thereby be shown the relevant code. Make a note of this number. 10. Then proceed as described in the preceding chapter "Programming by manual code entry" and check to see if the code with the next lowest number combination will function.

tips: 1. When code search is activated all buttons except OK k and EXIT y are ignored. 2. Should the correct code be found, however the device's original remote control did not have a POWER button then it is possible that the device cannot be switched on or off remotely. If the automatic search has reached the end of the code list it stops there.

You set this as follows: 1. Hold down the S button r for a little longer than 3 seconds. 15 seconds pass without an entry the device exits the menu and returns to the standard display. 2. With the or button t select "SYSTEM SETUP" and confirm with the OK button k.

With the or button t you can switch to the other time format (12 HR). After which the time display for the time of day will show an "A" or "P" before the time. „A" stands for "AM" = "ante meridiem" (Morning, 0:00 o'clock midnight to 12:00 o'clock midday). „P" stands for "PM" = "post meridiem" (Afternoon and evening, 12:00 o'clock midday to 0:00 o'clock midnight). Now the hour indicator blinks. With the or button t select the hour number for the present time of day and press the OK button k. With the or button t select the minute number for the present time of day and press the OK button k to save. To exit this or the following menus press repeatedly the EXIT button y until the standard display appears in the LCD display q. The LCD display q shows you the date when you press the S button r. You set the date in this way: 1.

Hold down the S button r for a little longer than 3 seconds. With the or button t select "SYSTEM SETUP" and confirm with the OK button k.

@@@ Hold down the S button r for a little longer than 3 seconds. tips: 1. @@ 2. @@ 3. @@ This mode can not be ended by pressing a button on the URC.

4. @@ 5. @@ Hold down the S button r for a little longer than 3 seconds.

@@@@@ 6. @@ 7. @@ 8. @@@@ 9. @@@@ delete all of a device's programmed buttons 1.

@ 2. Hold down the S button r for a little longer than 3 seconds. @@@@ There are 4 Macro memory slots available for you. Hold down the S button r for a little longer than 3 seconds. With the or button t select "MACRO SETUP" and confirm with the OK button k.

With the or button t select the memory slot to be programmed (MACRO SETUP 1 - 4) and confirm with the OK button k. Now press, one after the other, the desired buttons (max. 16). The sequence should begin with a device button e. 5. When the maximum number of button commands is reached the LCD display q shows "FULL". 6. Save the entry with the S button r. If, with the selection of the Macros to be programmed (step 3), you select a memory slot that is already occupied the existing Macro will be overwritten. 8.

Repeat the process from step 3 to create further Macros. 9. With the EXIT button y you move a level upwards in the menu except during the entry of the button commands. tips: 1. A maximum of 16 button commands can be saved in a Macro. After entering the 16 button commands the Macro is automatically saved and in the LCD display q "FULL" appears. 2. To exit the mode without saving allow approx. 15 seconds to pass without an entry. 3.

In the mode "MACRO STEP" you can only return to the previous status with the S button r. Example: You want to save a command chain in a Macro. In the mode "MACRO STEP", for this you enter the following button commands: => => => => Execute a Macro To execute a pre-programmed Macro proceed as follows: 1. With the corresponding number button o you access the desired Macro (1-4). Example: If Macro 3 is to be implemented press first the Macro button i and then, within 5 seconds, the number button " ".

Hold down the S button r for a little longer than 3 seconds. With the or button t select "MACRO SETUP" and confirm with the OK button k. With the or button t select "MACRO CLEAR" and confirm with the OK button k. When the LCD display q shows "CONFIRM CLEAR" you can stop the delete process with the EXIT button y. 2.

Individual Macros can not be deleted they can only be overwritten. Note: With this function you can save your preferred stations as favourites. to programme favourites Your favourite stations are saved as follows: 1. Press the device button e for the device that you want to save a favourite. 2. Hold down the S button r for a little longer than 3 seconds. With the or button t select "FAV CH SETUP" and confirm with the OK button k.



[You're reading an excerpt. Click here to read official SILVERCREST KH 2157 UNIVERSAL REMOTE CONTROL user guide](http://yourpdfguides.com/dref/3034599)  
<http://yourpdfguides.com/dref/3034599>

With the or button t select the memory slot to be programmed (FAV CH SETUP 1 - 4) and confirm with the OK button k. Now press, one after the other, the buttons (max. When the maximum number of button commands is reached the LCD display q shows "FULL".

7. Save the entry with the S button r. If, with the selection of the favourites to be programmed (step 4), you select a memory slot that is already occupied the existing favourite will be overwritten. 9. Repeat the steps to apply further favourites. 10. With the EXIT button y you move a level backwards in the menu except during the entry of the button commands. Note: The input of the channel numbers can vary according to the model and brand of the selected devices. If necessary, with multi-digit channel numbers you must first press the button a. To access favourites To access a pre-programmed favourite press the FAV/EPG button l followed by the corresponding number button for the desired memory slot (1 - 4).

delete All FAV channels To delete all pre-programmed favourites proceed as follows: 1. Hold down the S button r for a little longer than 3 seconds. 2. With the or button t select "FAV CH SETUP" and confirm with the OK button k. With the or button t select "FAV CH CLEAR" and confirm with the OK button k. When the LCD display q shows "CONFIRM CLEAR" you can stop the delete process with the EXIT button y. 2. Individual favourites can not be deleted they can only be overwritten. With the "VOL --" button you reduce the volume. To mute the sound press the -button g.

A further press of this button turns the sound back on. When you activate the VOL +/- buttons h on the URC basically the volume adjustment on the TV device is addressed, regardless thereof, which device button e was pressed previously. This admittedly does not apply to the devices "AMP" and "DSAT" since you can assume that these devices have their own volume adjustment. > To operate one of the programmed devices with the URC first press the corresponding device button e. Then point the URC to this device and press the desired button. > Put the number buttons o exactly as you do with the original remote control. Before you make a two digit entry press, if necessary, the button a. > Press the FAV/EPG button l to start the electronic programme guide of a device equipped with this function. > Whilst you hold down the S button r the date will be superimposed below to the right in the LCD display q. > Whilst you hold down one of the device buttons e the active code for this device will be superimposed below to the right in the LCD display q.

> Via the MENU button j you access the dialogue for the setting of the respective target device. Tips: With the button ALL OFF (all off) w all devices that are switched on can be automatically switched off. This function can switch on again devices that have already been switched off (depending on the device). For this hold down the ALL OFF button w for approx. 5 seconds. This will only function under the following circumstances: 1. Automatic code search, brand code search and MACRO function are not active. 3. All target devices must be suitable for remote control switch off. To again switch on all devices automatically hold down once w until all devices are switched on.

Ensure that moisture cannot permeate into the device during cleaning! otherwise there is the danger of causing irreparable damage to the device! > Clean the housing of the device exclusively with a soft moist cloth and a mild dishwashing detergent. > Store the device exclusively in an environment that complies with the specifications given in the technical data. > Before storing remove the batteries so that they will not cause damage to the device if, during storage, they happen to leak. Your device does not react to the URC. > Check the batteries.

They must have enough voltage and be properly installed. > Firstly have you pressed the correct device button e for the desired target device? > Check to see that the correct code is programmed in for the target device (see section "Code Setup"). > The batteries must have enough voltage and be properly installed.

> It is possible that you are using the wrong code. Start the brand code search, the automatic code search or the direct code input (manual).

> In the event that the original RC does not have a "-/-" button, change the programme with the CH+/- buttons u or the number buttons o. > If this also does not work the child protection for the target device could be activated. Some buttons on the URC do not function properly. > It is possible that your URC does not have all of the functions that are on the device's original remote control. > It is possible that you have not programmed in the optimal code. Search for a code that supports more of the target device's functions. The URC stops reacting after a button is pressed. > The batteries must have enough voltage and be properly installed. > The batteries must have enough voltage and be properly installed. > The contrast could be set too low.

Do not dispose of the device in your normal domestic waste. This product is subject to the European directive 2002/96/EC. @@In case of doubt contact your disposal facility. @@@@ Every consumer is legally obliged to surrender batteries/ rechargeable batteries to a community collection centre in their district or to a dealer. The purpose of this obligation is to ensure that batteries are disposed of in a nonpolluting manner. Only dispose of batteries when they are fully discharged. This device satisfies the fundamental requirements and other relevant regulations of the EMC Directive 2004/108/EC. You receive a 3-year warranty for this appliance as of the purchase date. This appliance has been manufactured with care and meticulously examined before delivery.

Please retain your receipt as proof of purchase.

In the case of a warranty claim, please make contact by telephone with our service department. Only in this way can a post-free despatch for your goods be assured. The warranty covers only claims for material and manufacturing defects, but not for transport damage, wearing parts or for damage to fragile components, e. This product is for private use only and is not intended for commercial use. The warranty is void in the case of abusive and improper handling, use of force and internal modifications not carried out by our authorized Service Centre.

Your statutory rights are not restricted in any way by this warranty. The warranty period is not extended through repairs made under warranty. this applies also for replaced or repaired parts. Any damages or deficiencies found on purchase must be reported as soon as possible after unpacking, at the latest two days after purchase. Alla rättigheter förbehålles, inklusive rätten till fotomekanisk återgivning, mångfaldigande och distribuering med särskilda metoder (t ex via databearbetning, flyttbara datamedia och datanät), även delvis, samt rätten till förändringar av innehållet och tekniska ändringar.



[You're reading an excerpt. Click here to read official SILVERCREST KH 2157 UNIVERSAL REMOTE CONTROL user guide](http://yourpdfguides.com/dref/3034599)

<http://yourpdfguides.com/dref/3034599>

Om du trycker på knappen en gång till växlar visningen till ensiffriga programnummer. Tryck på apparatknappen e till den apparat som du vill programmera till fjärrkontrollen. För att göra det enklare kan du hoppa direkt till vissa begynnelsebokstäver med sifferknapparna o: 2 => A 3 => D 4 => G 5 => J 6 => M 7 => P 8 => T 9 => W Exempel: Med sifferknapp 5 hoppar visningen till J. Du måste nu ta reda på vilken av de koder som står till förfogande som passar bäst till just din apparat. Tryck på apparatknappen e till den apparat som du vill programmera till fjärrkontrollen. > För att du ska kunna använda universal fjärrkontrollen till en apparat som programmerats till den måste du först trycka på motsvarande apparatknapp e. Lämna in universal fjärrkontrollen och dess delar till ett godkänt återvinningsföretag eller till din kommunala avfallshantering för kassering. Den som använder någon typ av batterier (uppladdningsbara eller vanliga) är skyldig enligt lag att lämna in dem till ett speciellt insamlingsställe i sin kommun eller stadsdel eller att lämna tillbaka dem till återförsäljaren. .



[You're reading an excerpt. Click here to read official SILVERCREST KH 2157 UNIVERSAL REMOTE CONTROL user guide](http://yourpdfguides.com/dref/3034599)  
<http://yourpdfguides.com/dref/3034599>