



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST KH 2289 KITCHEN RADIO. You'll find the answers to all your questions on the SILVERCREST KH 2289 KITCHEN RADIO in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SILVERCREST KH 2289 KITCHEN RADIO
User guide SILVERCREST KH 2289 KITCHEN RADIO
Operating instructions SILVERCREST KH 2289 KITCHEN RADIO
Instructions for use SILVERCREST KH 2289 KITCHEN RADIO
Instruction manual SILVERCREST KH 2289 KITCHEN RADIO

5 new

**■ RADIO DE COCINA
RADIO DA CUCINA**



KH 2289

- ES** Radio de cocina
Instrucciones de uso
- IT** Radio da cucina
Istruzioni per l'uso
- PT** Rádio para cozinha
Manual de instruções
- EN** Kitchen Radio
Operating instructions
- DE** Küchenradio
Bedienungsanleitung

KOMPERNASS GMBH · BURGSTRASSE 21 · D-44867 BOCHUM
www.kompernass.com
ID-Nr.: KH2289-06/09-V1

SILVERCREST®



[You're reading an excerpt. Click here to read official SILVERCREST KH 2289 KITCHEN RADIO user guide](http://yourpdfguides.com/dref/3034903)
<http://yourpdfguides.com/dref/3034903>

Manual abstract:

This appliance has been both examined and approved in regard to conformity with the fundamental requirements and other relevant regulations of the EMC Directive 2004/108/EC as well as the Directive for Low Voltage Appliances 2006/95/EC. The Kitchen Radio is intended for use either freestanding or for assembly beneath a wall cabinet. The intended uses for the Kitchen Radio are the reception of FM radio transmissions and as an alarm/timer, using signal tones or the radio itself. This Kitchen Radio is not intended for utilisation in commercial or industrial applications. This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used. â· Children should be supervised to ensure that they do not play with the appliance. â· To avoid unintentional switching on, disconnect the power cable after use and before cleaning. The safety concept can work only if the appliance is in a faultless condition. â· The power plug must always be easily accessible, so that the appliance can be quickly separated from the mains in the event of an emergency. @ @ 5 Å 108 MHz.

@ @ @ @ @ @ Ensure that the rating of the local power supply tallies completely with the details given on the rating plate of the appliance. â· Arrange for defective power plugs and/or cables to be replaced at once by qualified technicians or our Customer Service Department. @ @ â· Always take hold of the power cable by the plug. @ @ â· Do not place the device, furniture or anything else on the power cable and ensure that it does not become clamped/trapped. â· Never tie knots in the power cable and do not bind it to other cables.

Place the power cable so that no one can stumble over it. â· Make sure that the power cable does not become wet during operation. â· You are not permitted to open the device housing or repair the device. If the housing is opened, you run the risk of receiving a potentially fatal electric shock and the warranty lapses. â· Protect the appliance against drip and spray water.

Do not place any water-filled vessels (e. Do not use the appliance near hot surfaces. â· Do not locate the appliance in places exposed to direct sunlight. If you do, it may overheat and become irreparably damaged. â· Do not locate the kitchen radio directly above hotplates. The kitchen radio may be damaged. Do not leave the appliance unattended when in use. @ @ Keep children away from the power cable and the appliance. @ @ â· Keep batteries away from children. Children can put batteries into their mouths and swallow them.

@ @ @ @ @ @ @ @ @ @ @ @ Possibly the power supply must be separated and then reconnected. The batteries (if present) must be removed and then reinserted. Notice regarding separation from mains-power: The POWER switch does not completely disconnect the appliance from the power network. additionally , the appliance consumes power when in standby-mode. To completely separate the appliance from mains power, the power plug MUST be removed from the wall socket. Do not throw batteries into a fire. Never open batteries, never solder or weld batteries. If you do not intend to use the appliance for an extended period, remove the batteries. Clean the battery compartment and the battery contacts with a dry cloth. Fixing the kitchen radio beneath a wall cabinet With the supplied mounting plate q you can fix the kitchen radio below, for example, a kitchen wall cabinet: 1.

Press the two retaining levers on the back of the appliance down. Push the mounting plate q back and remove it. Allow 3,5 cm room to the front edges. This way the kitchen radio will later fit flush. Place the kitchen radio diagonally with the two recesses in the retainer lugs of the mounting plate q. Press the kitchen radio up until you hear it engage. Do not set up the kitchen radio without the mounting plate q. Otherwise the speakers are covered and the sound is scarcely audible. To set up the kitchen radio with the enclosed mounting plate q: 1. @ @ Push the mounting plate q back and remove it.

2. @ @ 3. @ @ You can now set up the radio. @ @ You can now remove the mounting plate q. @ @ @ @ Then pull the kitchen radio forwards to remove it. @ @ @ @ For this, you require two 1. 5V batteries of type AAA. They are not supplied with the appliance. Make sure the polarities are correct. @ @ @ @ The kitchen radio then reminds you at 8 a.

@ @ @ @ @ @ When the set date corresponds with the SDA alarm. The acoustic signal is repeated on the hour every hour until 11 p. m. If you wish to stop the SDA alarm, press any button. @ @ Insert the plug into a power socket. The kitchen radio starts in automatic mode. @ @ @ @ the current time is shown in the display. Subject to reception quality, this can take up to 5 minutes. @ @ @ @ The radio must be off to set the time. @ @ @ @ The time is automatically updated when the appliance is switched on and reception is made from a station transmitting an RDS-Signal.

The update is complete when the clock symbol stops blinking and is displayed continuously. For the hours of the morning there now appears additionally an AM on the display, and for the hours of the afternoon a PM. Press the button TIMER o once more to start the kitchen timer. a clock symbol running in an anti-clockwise direction appears on the display. From 30 seconds before expiry of the time span an acoustic signal sounds every 5 seconds, repeating at shorter intervals the closer the set time approaches.

When the time has elapsed, the signal sounds continuously and with an increasing sound volume. @ @ @ @ @ @ You can save kitchen timer periods with the buttons 1-6 r. There are 6 memory slots at your disposal: Buttons 1-6 r. @ @ @ @ 7. Press the button TIMER o once more to start the kitchen timer. @ @ @ @ Press the button ALARM MODE o repeatedly until the desired alarm days are programmed in. Keep the button ALARM MODE o pressed down until a single day appears on the display. To return to the selection of workdays, weekends or whole weeks, once again hold the button ALARM MODE o briefly pressed down. 7. Press the button MODE SETTING i to save the settings and to return to automatic mode. You can programme two alarm times into your kitchen radio. And the alarm function "Radio" has been selected, the radio plays for one hour at a pre-defined alarm volume. With the AMS function the radio searches automatically for radio stations and saves them to the memory positions 1-6 r. A pressed down for two seconds. @ @ @ @ the last tuned frequency is played.

If you wish to start the AMS function from a certain frequency, programme in the start frequency by pressing the buttons UP/DOWN s. A pressed down for two seconds. The kitchen radio now automatically searches for the next radio station, beginning at the starting frequency, and saves it.



[You're reading an excerpt. Click here to read official SILVERCREST KH 2289 KITCHEN RADIO user guide](http://yourpdfguides.com/dref/3034903)
<http://yourpdfguides.com/dref/3034903>

You can have the kitchen radio search for stations. @@@@ 3. @@@@ Only the next 10 stations will be saved to the memory button that was last pressed. To save the next 10 stations, select another memory button and then continue the AMS function from the last saved frequency. If you wish to recall the saved radio stations, press the button MEMORY REVIEW/A. The kitchen radio plays every saved position of the last pressed save-button for five seconds.

Programming stations With the buttons 1-6 r you can save 60 radio stations.

Wish to save the station. Press the respective button once for the first memory position (e. Press the respective butto.



[You're reading an excerpt. Click here to read official SILVERCREST
KH 2289 KITCHEN RADIO user guide
http://yourpdfguides.com/dref/3034903](http://yourpdfguides.com/dref/3034903)