



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST KH 2296 KITCHEN RADIO. You'll find the answers to all your questions on the SILVERCREST KH 2296 KITCHEN RADIO in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SILVERCREST KH 2296 KITCHEN RADIO  
User guide SILVERCREST KH 2296 KITCHEN RADIO  
Operating instructions SILVERCREST KH 2296 KITCHEN RADIO  
Instructions for use SILVERCREST KH 2296 KITCHEN RADIO  
Instruction manual SILVERCREST KH 2296 KITCHEN RADIO

4 △

## ■ KITCHEN RADIO



KH 2296

- GB **Kitchen Radio**  
Operating instructions
- PL **Radio kuchenne**  
Instrukcja obsługi
- HU **Konyhai rádió**  
Használati utasítás
- SI **Kuhinjski radio**  
Navodila za uporabo
- CZ **Kuchyňské rádio**  
Návod k obsluze
- SK **Kuchynské rádio**  
Návod na obsluhu
- HR **Kuhinjski radio**  
Upute za upotrebu
- DE **Küchenradio**  
Bedienungsanleitung

KOMPERNASS GMBH  
BURGSTRASSE 21 · D-44867 BOCHUM  
www.kompernass.com  
ID-Nr.: KH2296-07/09-V3



**SILVERCREST**



[You're reading an excerpt. Click here to read official SILVERCREST KH 2296 KITCHEN RADIO user guide](http://yourpdfguides.com/dref/3034920)  
<http://yourpdfguides.com/dref/3034920>

**Manual abstract:**

Pass this booklet on to whoever might acquire the appliance at a future date. This Kitchen Radio is intended for use either free-standing or for assembly beneath a wall cabinet. The intended uses for this Kitchen Radio are the reception of FM radio transmissions and as an alarm/timer, using either signal tones or the radio itself. This Kitchen Radio is not intended for utilisation in commercial or industrial applications. The warranty does not provide compensation for damage caused by improper use of the appliance! In some countries, different national regulations may apply to the assigned radio frequency ranges. Please note that information received outside of the assigned radio frequency ranges may not be utilised, passed on to third parties or otherwise misused. This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used. Children should be supervised to ensure that they do not play with the appliance. @@@@ Ensure that the rating of the local power supply tallies completely with the details given on the rating plate of the appliance. Do not expose the appliance to rain and never use it in a humid or wet environment.

Always take hold of the power cable by the plug. Do not pull on the cable itself and never touch the power cable with wet hands, this could result in either a short circuit or you receiving an electric shock. Do not place the appliance, furniture or anything else on the power cable and ensure that it does not become clamped. NEVER make a knot in the power cable and do NOT bind it together with other cables. The power cable should be positioned so that no one can step on or trip over it.

Ensure that the power cable does not become wet during operation. You are not permitted to open the appliance housing or repair the appliance. If the housing is opened, you run the risk of receiving a potentially fatal electric shock and the warranty lapses. â· Protect the appliance against drip and spray water. Do not place any water-filled vessels (e.

Do not use the appliance near hot surfaces. Do not place the appliance in locations that are subject to direct sunlight. Otherwise, it may overheat and become irreparably damaged. Do not locate the kitchen radio directly above hotplates. The kitchen radio may be damaged. there is a danger of fire! Never leave the appliance unattended while it is being used. Never cover the ventilation slots of the appliance while it is on. Do not place open fire sources, such as candles, on or near the appliance. risk of personal injury! Keep the power cable and appliance away from children. Keep batteries well away from children.

Children can put batteries into their mouths and swallow them. If a battery is swallowed medical assistance must be sought immediately. Equipment connected to a power supply can be damaged during a thunderstorm. You should therefore always remove the plug from the power socket when there is a storm. Notice regarding separation from mains-power The POWER switch does not completely disconnect the appliance from the power network. additionally , the appliance consumes power when in standby-mode. To completely separate the appliance from mains power, the power plug MUST be removed from the mains power socket. Notice regarding electrical power surges (EFT / electrical fast transient) and electrostatic discharges: In a case of malfunction due to an electrical fast transient (power surge) and/or electrostatic discharge, the appliance must be returned to default settings in order to re-establish normal operation. Possibly the power supply must be separated and then reconnected. The batteries (if present) must be removed and then reinserted.

Do not throw batteries into a fire. do not recharge the batteries. Never open batteries, never solder or weld batteries. If you do not intend to use the appliance for an extended period, remove the batteries. Should the batteries leak, put on a pair of protective gloves and clean the battery compartment and terminals with a dry cloth.

Fixing the kitchen radio beneath a wall cabinet With the supplied mounting plate q you can fix the kitchen radio below, for example, a kitchen wall cabinet: 1. Press the two retaining levers on the back of the appliance down. Push the mounting plate q back and remove it. Allow 3 cm space to the front edges. This way the kitchen radio will later fit flush.

Hold the kitchen radio slanted, with the two recesses in the retaining lugs on the mounting plate q. Press the kitchen radio upwards until it audibly engages. To disassemble the kitchen radio, press the two retaining levers at the rear of the appliance downwards. Then pull the radio out to the front and remove it. Do not set the kitchen radio up without the mounting plate q. Otherwise the speakers are covered and the sound is scarcely audible. To set up the kitchen radio with the enclosed mounting plate q: 1. Simultaneously press the two retaining levers on the back of the appliance down. Push the mounting plate q back and remove it. 2.

Push the two retainer lugs on the mounting plate q into the recesses on the lower rear side of the kitchen radio. 3. Firmly press the front part of the mounting plate q down until you hear it engage. You can now set up the radio. @@@@ For this you require two 1. Make sure the polarities are correct. @@ Insert the plug into a mains power socket. @@@@ The radio must be off to set the time. @@@@ Press the button UP h to return to the 24 hour modus. @@@@ @ 3.

Press the button TIMER y once again to start the kitchen timer. @@@@ @01-10 a to save the time to one of the memory positions T0-4. or , repeatedly press the button MEM. 11-20 s to save the time to one of the memory positions T5-9. @@ The time period is now saved. @@ Press the button TIMER y once again to start the kitchen timer. @@@@ D to set the weekdays on which you require the alarm function: You can choose between "workdays" (MON, TUE, WED, THU, FRI), "weekends" (SAT, SUN) and "every day" (MON, TUE, WED, THU, FRI, SAT, SUN). D pressed down for 2 seconds, you can also, through repeated brief pressing of the A. To return to the selection of workdays, weekends or whole weeks, once again hold the button A. Press the button MODE SET/X-BASS j to save the settings and return to automatic modus.

And the alarm function "Radio" has been selected, the radio plays for one hour at a pre-defined alarm volume. And the alarm function "Signaltones" has been selected, the signal tone sounds for 10 minutes, with an increasing volume. For radio reception, completely unwind the wire aerial e and, with the radio switched on, determine the most favourable positioning for it. Press the button POWER t once again to switch the radio off and return the appliance to the automatic modus.



[You're reading an excerpt. Click here to read official SILVERCREST KH 2296 KITCHEN RADIO user guide](http://yourpdfguides.com/dref/3034920)  
<http://yourpdfguides.com/dref/3034920>

*Automatic station search You can have the kitchen radio search for stations. The kitchen radio searches the frequency range until it finds a station. 1. Press and hold the button UP h for two seconds: the kitchen radio searches for the station with the next highest frequency. Press and hold the button DOWN g for two seconds: the kitchen radio searches for the station with the next lowest frequency. Repeat these steps until you have found a radio station to your liking.*

*01-10 a to save the radio station to one of the memory positions 1-10. or , repeatedly press the button MEM. 11-20 s to save the radio station to one of the memory positions 11-20. @@ "MEM" and the memory position are constantly indicated, the radio station is saved. â To recall saved radio stations, when in radio modus press the appropriate memory button (MEM. 01-10 a or MEM. 11-20 s) repeatedly until the number of the memory position is indicated in the display r. AMS (Automatic Memory System) With the AMS function the radio searches automatically for radio stations and then saves them to the 20 memory positions. The kitchen radio automatically searches for sufficiently powerful radio stations and saves them in the memory. â The station search can be stopped by pressing on the button MODE SET/X-BASS j.*

*@@@ Press this button once again to deactivate the function. @@@@ â To disable the lock function, press and hold the button STORE/Key-Lock f until the key symbol extinguishes. D to call up the function and, if need be, to switch the radio on. D button, or hold it down, to enter in the number of minutes for which the appliance should remain switched on. After a few seconds, the frequency is indicated once again.*

*3. At any time you can press the A. On expiry of the time period the appliance switches itself off. Always remove the plug before cleaning the appliance! Moisture penetrating into the appliance creates the risk of electric shock! Additionally, the kitchen radio could become irreparably damaged! Clean the housing of the kitchen radio with a slightly moist cloth and a mild detergent only. Ensure that moisture cannot permeate into the appliance during cleaning! Do not dispose of the appliance in your normal domestic waste.*

*This pr.*



[You're reading an excerpt. Click here to read official SILVERCREST  
KH 2296 KITCHEN RADIO user guide  
http://yourpdfguides.com/dref/3034920](http://yourpdfguides.com/dref/3034920)