



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST KH 2381 CAR RADIO. You'll find the answers to all your questions on the SILVERCREST KH 2381 CAR RADIO in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SILVERCREST KH 2381 CAR RADIO
User guide SILVERCREST KH 2381 CAR RADIO
Operating instructions SILVERCREST KH 2381 CAR RADIO
Instructions for use SILVERCREST KH 2381 CAR RADIO
Instruction manual SILVERCREST KH 2381 CAR RADIO

bc

CAR RADIO

KH 2381

CAR RADIO
Operating instructions

ΡΑΔΙΟΦΩΝΟ ΑΥΤΟΚΙΝΗΤΟΥ
Οδηγίες χρήσης

BILRADIO
Betjeningsvejledning

KOMPERNASS GMBH · BURGSTRASSE 21 · D-44867 BOCHUM
www.kompernass.com
ID-Nr.: KH2381-11/08-V2

SilverCrest



[You're reading an excerpt. Click here to read official SILVERCREST KH 2381 CAR RADIO user guide](http://yourpdfguides.com/dref/3035205)
<http://yourpdfguides.com/dref/3035205>

Manual abstract:

It is not suitable for use in commercial or industrial areas. @@@@ â Children should be supervised to ensure that they do not play with the device. Do not throw batteries into a fire. Never open batteries, never solder or weld batteries. Remove the batteries if you do not intend to use the device for an extended period of time. â Put on protective gloves when handling a leaking battery. â Keep batteries away from children. Children can put batteries into their mouths and swallow them. If a battery is swallowed immediately seek medical assistance. â Clean the battery compartment and the battery contacts with a dry cloth. Make sure that during operation the connection cable can never become wet or moist. Run the cable in such a way that it cannot become clamped or damaged in any other way. â To avoid possible dangers exchange damaged cables or connectors immediately at an authorized specialist establishment or the customer service department. Make sure that liquids or objects are never able to enter into the device. Should you do so, device safety can no longer be assured and the warranty will become void.

Repairs are to be carried out exclusively by a specialist firm or the service centre. Install the device in such a way as to avoid the development of heat accumulation and so that the device is sufficiently ventilated. â Avoid any additional heat build up, e. There is invisible laser radiation inside the device. â Avoid all direct optical contact with the laser beam, it could lead to serious eye injuries.

Traffic safety is the number one priority. Only operate your car radio when the traffic situation allows. Familiarize yourself with the device before driving. Acoustical signals from the police, fire service and other emergency services must be able to be heard inside the vehicle in good time. Therefore moderate the programme's volume during the journey. Dim display illumination e Sensor for remote control r Multi controller: Press to access the bass, treble, balance and fader settings/ turn to set the value/volume t Display y Unlocking the face plate u / : Title/station search backwards/forwards i Card slot for SD/MMC cards o USB port a AF ("Alternative Frequency"): Alternative Frequency search s TA ("Traffic Announcement"): Activate traffic radio station d PTY ("Programme Type"): Station search by PTY group f Station button 5/previous directory Station button 6/next directory A Behind the face plate 2# : Eject disc 2\$ Holder for the face plate 2% RESET: Reset the car radio 2^ Theft protection LED 2& CD compartment 2 Holder for face plate Connections, rear panel 2(ISO block connection B 3) Automotive flat fuse 10 A 3! ISO block connection A 3@ Securing screw (incl. If you want to install your car radio yourself follow the installation and connection instructions in this manual. AS/PS/MP3: Automatic station memory/ MP3 search 4@ 6/D-UP: Station button 6/next directory 4# 5/D-DN: Station button 5/previous directory 4\$ TA/TP: ("Traffic Announcement"): Activate traffic radio station 4% PTY: ("Program Type") Search for station by PTY group 4^ Battery compartment 4& MUTE: Switch off sound 4* DISP: Show display information 4(SCAN/REC: Automatic station search/Record to a data carrier at the USB port or the SD/MMC card slot 5) RDM/4: Random playback in the CD/MP3/WMA operation mode/ number button 4 5! INT/3: Intro function in the CD/MP3/WMA operation mode, number button 3 5@ RPT/2: Repeat function in the CD/MP3/WMA operation mode/ number button 2 5# PAU/1: Playback start or stop/ number button 1 5\$ BAND/ENTER: Select band range/confirm selection E F G H Try connecting the cable to perform a function test before finally installing the device. Insert the device in the slot provided for it or select a location for mounting the device that does not obstruct the driver during normal operation of the vehicle. â In the event that changes to the vehicle are necessary contact your vehicle dealer/qualified radio installation facility.*

If the device is installed with more than a 30Â° inclination it could lead to function disorders. Make sure that a permanent positive connection is applied to the station memory of connection 7 in the ISO block A. You can connect an external amplifier to the audio cinch output LINE OUT or an external sound source to the audio cinch input LINE IN. When doing so, please follow the operating instructions of the external amplifier/sound source. Before installation remove, without fail, the two transport securing screws on the top of the radio housing (marked with a red sticker)! The car radio can be installed into any standard ISO mounting duct. In the event that your vehicle does not have an ISO mounting duct contact your local specialist establishment, local dealer or the technical department of the store. â Pull the installation bracket and the bezel frame off of the car radio's housing. Bend the tabs on the installation bracket with a screw driver so that the bracket is fixed firmly into the mounting duct (see diagram). ISO B 4 Front right 5 Front left + 6 Front left 7 Rear left + 8 Rear left - Of course you can also only connect the car radio to two speakers. Then you only use the cable for the front speakers.

In a few vehicle models, the standard configuration of the connections [4] and [7] in the ISO Block A (see above "Configuration of the ISO Blocks") is interchanged at the factory. If this is the case the station memory can be lost. To correct this, the connections 4 (Ignition positive) and 7 (Permanent positive) in the ISO Block A must be swapped. Connect the ISO socket block of the car radio with the two ISO plugs on your vehicle. If necessary, secure your device against theft with additional measures.

Attach the securing screw with the anchoring plate and the securing material to the engine firewall of the vehicle. Carefully push the car radio into the mounting duct until it locks into place. The vehicle specific ISO adapter that you may possibly require can be obtained from a specialist establishment, from a local dealer or from the store's technical department. When using other connection types the warranty becomes void! Observe the cable positioning when pushing the radio in; it could become damaged. The relay then automatically extends the antenna when the radio is switched on.

When switched off the antenna retracts. This connection can also be used to control an external amplifier. for exact connection information please consult the amplifier's operating instructions. Never attach the antenna power connection with the antenna's motor power cable; this can cause damage to the radio! If you have connected the audio output of an external sound source (e. g. An MP3 player) to the LINE IN on the rear panel of the device via a stereo cinch cable, you can play back this sound source on the car radio.



[You're reading an excerpt. Click here to read official SILVERCREST KH 2381 CAR RADIO user guide](http://yourpdfguides.com/dref/3035205)
<http://yourpdfguides.com/dref/3035205>

• While the radio is on, select playback of the audio input by pressing the button LD/MD several times until AUX is shown in the display. Make sure that for the station memory the permanent positive is applied to the connection 7 in the ISO block A. Otherwise you will not be able to save any radio stations! • After all connections have been made activate the RESET button with a ball point pen or other pointed object. To disassemble the device first remove the bezel frame and then feed the right and left keys into the respective slots on the sides of the device.

The tabs are now bent back and you can pull the device out. Place the face plate with the left side in the frame first. Then firmly press the right side until it locks into place. When the face plate is not inserted into the frame the theft protection LED on the device blinks. To safeguard the face plate always keep it stored in its case. If the face plate is incorrectly installed it can result in malfunctions when operating the car radio. The car radio will only function with the face plate connected. To remove the face plate first tip it slightly forward and pull the right side away first and then the left side. Pull the battery compartment out of the remote control by first pressing the lateral locking device and then pulling the battery compartment out. • Remove the depleted battery and insert a new battery of the type CR2025 (Button cell) into the battery compartment.

Make sure that the battery is inserted in accordance with its correct polarity. You can use the remote control for distances of up to approx. Most of the functions can be operated by the buttons on the device as well as by the corresponding buttons on the remote control. The buttons on the device are described in these instructions. If the buttons on the remote control are meant this will be specifically mentioned.

Instead of pressing the multi controller described in the manual, it is also possible to use the SEL button on the remote control. Instead of turning the multi controller left or right, it is also possible to use the VOL- and VOL+ buttons on the remote control. MUTE - Switch off the sound Press the button MU (MUTE on the remote control) to To switch the sound back on, press the button MU again or turn the multi controller. When the DSP equalizer is on, the settings for BASS and TREBLE are not available. 5 seconds after a setting has been made the playback will again be displayed and the setting is saved.

When the loudness function is switched on, LOUD ON is shown in the display, and LOUD OFF is shown when the loudness function is switched off. To switch off, hold down the PWR/DIM button longer. By pressing the DISP button you can switch the notices in the display around in the following manner: PS (Programme name), time of day (will automatically be set with RDS reception), PTY settings (these RDS functions are transmitted by the broadcast institutions in various extents; see also the chapter "Radio functions") and frequencies. Always set the volume to a level that will allow you, at any time, to clearly hear acoustical signals from emergency service vehicles! @@ Each notice only appears for a few seconds. @@ Your car radio is equipped with an RDS controlled clock. @@@@ Turn the seconds. @@ Hold down the buttons or fast forward or backward. Dampness and high humidity can cause the CD player to malfunction. @@@@ You can stop the playback with the PAU/I button. The entire disc is then played back on repeat.

@@@@@ This is a block of information that is contained in the MP3 file. @@@@ 10 seconds from all titles will playback one after the other. Turn the multi controller to enter the last digit of the title number. The second digit of the three digit title input blinks. • Turn the multi controller to enter the ten's digit of the title number. The first digit of the three digit title input blinks. • Turn the multi controller to enter the hundreds digit of the title number. • When you have entered the desired title number, confirm your input with BD/ENT (BAND/ENTER on the remote control). However with MP3-CDs you can select the titles and the artists directly. These functions and the other MP3 specific functions are largely dependent on the MP3-CD.

Please bear this in mind when creating these CDs (see the next section). All conventional encodings can be played back. Turn the multi controller to enter a letter or number, with which the title name begins. Turn the multi controller to enter the second letter or a number. Turn the multi controller to enter the third letter or a number.

• Press the BD/ENT button to show all titles that begin with the sought after symbol. • Turn the multi controller to select a title and start playback with BD/ENT. You can connect an MP3 player or another USB data carrier to the USB port on the front panel of the device. Your car radio can handle USB data carriers up to 2 GB. With this the directory structure may contain a maximum of 1024 folders, 4096 files and a directory depth of 8 levels.

The operations for playing files on the external data carrier as well as the search function are exactly the same as with MP3-CDs. • If the device is in a different mode (CD or card reader), you can select the USB port with the button LD/MD (MODE/LOUD on the remote control). • Place the protective cap back on the USB port when no USB device is connected to avoid contamination. Turn the multi controller to display the available MP3 directories, and select a directory with the button BD/ENT (BAND/ENTER on the remote control). Playback of the first title from the selected directory starts immediately. Your car radio is equipped with a memory card slot for SD and Multimedia cards. Your car radio can read all currently available SD/MMC memory cards (up to 4 GB). With this the directory structure may contain a maximum of 1024 folders, 4096 files and a directory depth of 8 levels. Press station button 6 (6/D-UP on the remote control) to play the next directory or station button 5 (5/D-DN The device can also play WMA files. Slide a memory card into the memory card slot with the marking pointing to the right.

The operations for playing files, function exactly the same as for MP3-CDs. • If the device is in a different mode (CD, Radio, AUX or USB), you can select the card reader with the button LD/MD (MODE/LOUD on the remote control). When the USB data carrier is full the recording automatically switches to the card reader, so long as a memory card is inserted. You can play back the file by switching to the USB or SD/MMC mode by pressing the button LD/MD (MODE/LOUD on the remote control) and then loading the corresponding title from the data carrier. Please observe the legal regulations valid in your place of residence regarding the duplication of copyrighted works (COPY ERROR). In case of doubt please consult a specialist in your area.



[You're reading an excerpt. Click here to read official SILVERCREST KH 2381 CAR RADIO user guide](http://yourpdfguides.com/dref/3035205)
<http://yourpdfguides.com/dref/3035205>

Copy-protected audio CDs cannot be overwritten with this device! You can copy individual titles from an MP3-CD to the external USB data carrier or an SD/MMC memory card. During playback of a title from an MP3-CD, hold down the SCAN/REC button. Press the SCAN/REC button several times to select either the copy option COPY USB (copy to a USB data carrier) or COPY MMC (copy to an SD/MMC memory card). During the copy process, COPY appears in the display and a percentage indicator from 00 - 100 shows the copying progress.

After the notice COPY 100 the copying process is ended and playback of the MP3 title continues. With your car radio you can record files from the CD player to an external USB data carrier or an SD/MMC card. The notice USB ALL appears (When the recording target is SD/MMC, MMC ALL appears). Press the SCAN/REC button multiple times to select either the recording option USB ALL/MMC ALL (Record all titles) or USB ONE/MMC ONE (Record one title). At the beginning of the recording the notice RECORD appears in the display.

With your radio you can also record data from the radio and/or the audio input to a USB memory stick or a memory card. Insert a memory medium in the card slot or USB port and press the button LD/MD (MODE/LOUD on the remote control) to select radio mode or AUX mode. Press the SCAN/REC button several times to select either the recording option USB (Recording to a USB memory medium) or MMC (Recording to an SD/MMC memory card). If you do not wish to delete the file, press the button LD/MD (MODE/LOUD on the remote control) or wait about 5 seconds until the notice DELETE disappears from the display. @@@@Audio CD and radio recordings are recorded in stereo and with a bitrate of 128 kbps and/or a sampling frequency of 44 kHz. When copying MP3 files the recording format of the copy source will be adopted. Press the button LD/MD (MODE/LOUD on the remote control) to switch to USB or SD/MMC mode, depending on where the file you would like to delete is located. Once the deletion process is finished, playback continues with the next title. A CD is already inserted into the car radio. Clean the CD or insert a different CD. Switch the car radio off for a few hours and then try it again. Not all market available devices conform to this standard. It is possible that a device is connected that does not function according to the USB standard. There is a malfunction with the device. The card reading device does not read the cards The card is possibly defective, dirty or not properly inserted.

Clean the CD or insert a different CD. Clean the housing and the face plate only with a slightly damp cloth and a mild cleanser. Ensure that moisture cannot permeate into the device during cleaning! The radio and/or the automatic station memory is not functioning Moisture penetrating into the device creates the risk of electric shock! Besides which, the device could become irreparably damaged! Station memory is not functioning The connection 7 in the ISO block A (Permanent positive) is not connected correctly. Do not dispose of the device in your normal domestic waste. This product is subject to the European directive 2002/96/EC. Dispose of the device through an approved disposal centre or at your community waste facility. observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre. You receive a 3-year warranty for this device as of the purchase date. Should you, in spite of our high quality standards, have grounds for complaint please contact our Service Hotline.

In the event that processing of your complaint is not possible by telephone here you will receive A processing number (RMA number) as well as An address, to which you can send your product for warranty processing. in the case of a mail-in shipment please enclose a copy of the purchase receipt (sales slip). The device must be securely packed and the RMA number clearly visible. Products sent in without the RMA number cannot be processed. Used batteries/rechargeable batteries may not be disposed of in household waste.

The purpose of this obligation is to ensure that batteries are disposed of in a non-polluting manner. only dispose of batteries etc. When they are fully discharged. The warranty provisions cover only material or factory defects. This product is for private use only and is not intended for commercial use. In the event of misuse and improper handling, use of force and interference not carried out by our authorized service branch, the warranty will become void. Your statutory warranty claims are not restricted by this warranty. Fill in this section and submit it with the device! In order to guarantee a cost free repair procedure please get in touch with the service hotline. Make sure you have your sales slip handy. .



[You're reading an excerpt. Click here to read official SILVERCREST KH 2381 CAR RADIO user guide](http://yourpdfguides.com/dref/3035205)
<http://yourpdfguides.com/dref/3035205>