



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST KH 2610 NEGATIVE DIGITISER. You'll find the answers to all your questions on the SILVERCREST KH 2610 NEGATIVE DIGITISER in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SILVERCREST KH 2610 NEGATIVE DIGITISER
User guide SILVERCREST KH 2610 NEGATIVE DIGITISER
Operating instructions SILVERCREST KH 2610 NEGATIVE DIGITISER
Instructions for use SILVERCREST KH 2610 NEGATIVE DIGITISER
Instruction manual SILVERCREST KH 2610 NEGATIVE DIGITISER



[You're reading an excerpt. Click here to read official SILVERCREST KH 2610 NEGATIVE DIGITISER user guide](http://yourpdfguides.com/dref/3035317)
<http://yourpdfguides.com/dref/3035317>

Manual abstract:

Read the information included here so that you can quickly familiarize yourself with your device and thus make full use of its functions. We wish you a great deal of enjoyable use. These operating instructions are a component of the negative digitiser KH 2610 (henceforth designated as the device) and supplies you with important information for intended use, safety and connection as well as operation of the device. The operating instructions must be constantly kept available close to the device. They are to be read and used by anyone assigned to the operation and repairing of the device. Keep these operating instructions and hand them over with the device to any future owners. Any copying and/or printing, including partial copying/printing, as well as reproductions of the diagrams, even in an altered state is only allowed with written permission from the manufacturer. All technical information, data and information for connection and operation, contained in these operating instructions correspond to the latest at the time of printing and, to the best of our knowledge, take into account our previous experience and know-how. No claims can be derived from the details, illustrations and descriptions in these instructions. The manufacturer assumes no responsibility for damage caused by failure to observe the instructions, improper use, inappropriate repairs, making unauthorized changes or for using unapproved replacement parts.

@@If the dangerous situation is not avoided it can lead to injuries. The directives in this warning are there to avoid personal injuries. @@If the situation is not avoided it can lead to property damage. The directives in this warning are there to avoid property damage. @@@@ WARNING Danger from unintended use! Danger can come from the device if used for unintended purposes and/or other types of use.

Claims of any kind for damage resulting from unintended use will not be accepted. In this chapter you receive important safety information regarding handling of the device. This device complies with the statutory safety regulations. Improper use can lead to personal injury and property damage. For safe handling of the device observe the following safety information: Before use check the device for visible external damage.

Do not put into operation a device that is damaged or has been dropped. Damaged cables or connections should be replaced by authorized qualified persons or by the customer service department. Persons who, due to their physical, intellectual or motor abilities, are incapable of operating the device safely may only use the device under supervision or direction from a responsible person. Only permit children to use the device under supervision. Repairs should only be carried out by authorized specialist companies or by the customer service department. GB A repair to the device during the warranty period may only be carried out by a customer service department authorized by the manufacturer otherwise no additional warranty claims can be considered for subsequent damages. Defective components may only be replaced with original replacement parts. Only by using original replacement parts can you guarantee that the safety requirements are complied with. Do not carry out any unauthorised reconstructions or alterations to the device. Protect the device from moisture and liquid penetration.

WARNING Personal injury and property damage can occur during initial operation of the device! Observe the following safety information to avoid danger:

Packaging material should not be used as a play thing. There is a risk of suffocation! The device is delivered with the following components as standard: Scanner Slide holder Film negative holder Programme and driver CD Cleaning brush Operating instructions GB NOTICE Check the contents to make sure everything is there and for visible damage. If the contents are not complete or are damaged due to defective packaging or through transportation contact the service hotline (see warranty card). The packaging materials are selected from the point of view of their environmental friendliness and disposal technology and are therefore recyclable. the recirculation of packaging into the material circuit saves on raw material and reduces generated waste.

@@The window for language selection will be displayed. @@@@@@@@@@ insert the film strip into the holder correctly orientated. Close the holder making sure that the cover locks into place. @@@@Close the holder making sure that the cover locks into place. @@@@@@@@@@The window "Capture from scanner" will be displayed.

@@@@ the scan motif will be displayed in the preview field (3). @@NOTICE When scanning negatives with the brightness/pigment content will be decreased and with they will be increased. Repeat these steps to scan further images and buffer in the main memory. nOTICE A maximum of 12 images can be buffered. When scanning the 13th image the following notice appears: "Please transfer images before next scan" Save the images before you continue scanning.

Hold down the button "Strg" and in the preview field (1) highlight the images that you want to save as files. Highlighted images will be displayed with a green frame. Remove the USB cable 4 from the USB port of your computer. Make sure when you are cleaning the device that no moisture gets inside in order to avoid irreparable damage to it. Clean the housing exclusively with a soft damp cloth and a mild dishwashing liquid.

Clean the surface of the scanner lens inside of the device with a cleaning brush 7 . For this slide the cleaning brush with the cleaning surface downwards into the slot 3 . In this chapter you will receive important information for malfunction localization and remedies. WARNING Observe the following safety information to avoid danger and property damage: Repairs to electronic devices may only be carried out by specialists who have been trained by the manufacturer. The following table will help with localizing and remedying minor malfunctions: Malfunction LED does not light up Possible cause The device is not connected correctly. NOTICE If you cannot solve the problem with the aforementioned methods please contact customer service. Do not dispose of the device in your normal domestic waste. This product is subject to the European directive 2002/96/EC-WEEE (Waste Electrical and Electronic Equipment).

Dispose of the device through an approved disposal centre or at your community waste facility. observe the currently applicable regulations.

In case of doubt, please contact your waste disposal centre. This device complies regarding conformity with the basic requirements and other relevant provisions of the directive for electromagnetic compatibility 2004/108/EC. The complete original declaration of conformity can be obtained from the importer. You receive a 3-year warranty for this device as of the purchase date. @@Please retain your receipt as proof of purchase. @@Only in this way can a post-free despatch for your goods be assured.



**You're reading an excerpt. Click here to read official SILVERCREST
KH 2610 NEGATIVE DIGITISER user guide
<http://yourpdfguides.com/dref/3035317>**

@@@In the event of misuse and improper handling, use of force and interference not carried out by our authorized service branch, the warranty will become void. Your statutory rights are not restricted in any way by this warranty. The guarantee period will not be extended by the warranty. this also applies to replacement and repaired parts.

Damages and defects possibly present at time of purchase must be reported immediately after unpacking or at the latest two days after the purchase date. After expiration of the guarantee period incidental repairs are liable to costs. Diabilder USB-anlutningskabel Hållare till fotonegativ Hållare till diabilder Rengöringsborste Felaktigt utförda reparationer utgör en avsevärd risk för användaren och risk för skador på produkten. Lämna in den till ett företag som har tillstånd att ta hand om den här typen av uttjänta apparater eller till din kommunala avfallsanläggning. .



[You're reading an excerpt. Click here to read official SILVERCREST KH 2610 NEGATIVE DIGITISER user guide](http://yourpdfguides.com/dref/3035317)