



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST SAD 12 A1. You'll find the answers to all your questions on the SILVERCREST SAD 12 A1 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SILVERCREST SAD 12 A1  
User guide SILVERCREST SAD 12 A1  
Operating instructions SILVERCREST SAD 12 A1  
Instructions for use SILVERCREST SAD 12 A1  
Instruction manual SILVERCREST SAD 12 A1

**SILVERCREST®**

4 △

## Aroma Diffuser SAD 12 A1



- |   |   |
|---|---|
| <b>GB</b> <b>Aroma Diffuser</b><br>Operating instructions   | <b>PL</b> <b>Dyfuzor zapachowy</b><br>Instrukcja obsługi  |
| <b>HU</b> <b>Párasító aromalámpa</b><br>Használati utasítás | <b>SI</b> <b>Aroma razpršilnik</b><br>Navodila za uporabo |
| <b>CZ</b> <b>Difuzér na aroma</b><br>Návod k obsluze        | <b>SK</b> <b>Aromatický difuzér</b><br>Návod na obsluhu   |

KOMPERNASS GMBH  
BURGSTRASSE 21 · D-44867 BOCHUM  
www.kompernass.com  
ID-Nr.: SAD12A1-04/11-V3  
IAN: 64661



[You're reading an excerpt. Click here to read official SILVERCREST SAD 12 A1 user guide](http://yourpdfguides.com/dref/3976937)

<http://yourpdfguides.com/dref/3976937>

**Manual abstract:**

These operating instructions must be constantly kept available close to the appliance. They are to be read and applied by everyone assigned to operate the appliance and to eliminate faults with it. Retain these operating instructions and pass them on, together with the appliance, to a possible future owner. Any copying or reproduction, including as extracts, as well as the reproduction of images, also in an altered state, is only permitted with the written authorisation of the manufacturer. This appliance is intended only for domestic use and for the refreshing and humidification of air in enclosed spaces. This appliance is not intended for any other use or for uses beyond those mentioned here. **WARNING Risks from unintended use!** Risks can be engendered by the appliance if it is used for unintended purposes and/or other types of use. Use the appliance exclusively for its intended purposes. Claims of any kind resulting from damage caused by improper use, incompetent repairs, unauthorized modifications or the use of nonapproved spare parts will not be acknowledged. In these extant operating instructions the following warnings are used: **WARNING** A warning at this risk level indicates a possibly dangerous situation.

@@Follow the instructions in this warning to avoid personal injuries. @@If the situation is not avoided it could lead to property damage. The directives in this warning are there to avoid property damage. @@This appliance complies with the statutory safety regulations. Incorrect usage can, however, lead to personal and property damage.

@@Do not put into operation an appliance that is damaged or has been dropped. There is also a risk of personal injury! This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used. Children should be supervised to ensure that they do not play with the appliance. place the appliance only on flat surfaces , so that a tipping over is excluded. Repairs should only be carried out by authorised specialist companies or by the Customer Service Department.

To avoid risks, arrange for defective power plugs and/or cables to be replaced at once by qualified technicians or our Customer Service Department. This appliance may not be exposed to rain. Protect the appliance from moisture and the penetration of liquids and objects into the housing. **NEVER** submerge the appliance in water and do not place objects filled with liquids (such as vases) on the appliance. the appliance could also be irreparably damaged! When filling or emptying the water tank and before every cleaning, **ALWAYS** disconnect the adapter from the mains power socket. Do not operate the appliance close to open flames (e. Always disconnect the mains power cable from the socket by pulling on the plug, do not pull on the cable itself. Otherwise, the power cable could be damaged. Diffusion cone Steam outlet On/off switch with lighting Ventilation slot Water tank Ceramic disk Pouring direction arrow Maximum filling level Plug socket Mains adapter Measuring beaker **WARNING** During the commissioning of the appliance personal injury and property damage could occur! Observe the following safety information to avoid these risks: Packaging material should not be used by children as a play thing. There is a risk of suffocation.

To avoid damage to people and property, pay heed to the requirements for the installation site and the electrical connection of the appliance.

@@@@@@@@@@@@@@@@To avoid possible damage to the appliance this data must match. @@@@@@There is a risk of being scalded by steam. It is possible that oil drops may cause damage to furniture surfaces. @@ 80 ml of clean mains water. Pay heed to the maximum filling level . Add 3-5 drops of your desired 100% essential oil to the water. Then replace the diffusion cone onto the container. Insert the power adapter into the mains power socket. @@ **IMPORTANT** Damage to the appliance! **NEVER** tilt the appliance during operation and do not try to empty it.

@@@@@@@@@@@@@@@@Clean the water tank after each use so as to remove oil residue as completely as possible. For this, use a soft and slightly moist cloth. in the case of stubborn stains , place a few drops of mild detergent on the damp cloth. Should the steam production diminish, the ceramic disk located at the bottom of the water tank must be cleaned. For this, use a slightly moistened cotton bud.

Clean the surfaces of the appliance with a soft and dry cloth. to descale the appliance , use a standard commercial liquid descaling agent. Pay heed also to the manufacturer's instructions for your descaler. Fill the water tank to the maximum filling level with descaler and let it stand until the scale is fully dissolved. Pour the scale removal away and then clean the water tank with a soft and slightly damp cloth.

Should you decide to not use the appliance for an extended period, disconnect it from the mains power supply and store it in a clean and dry location away from direct sunlight. Do not dispose of this appliance in your normal domestic waste. This product is subject to the provision of European Directive 2002/96/EC-WEEE (Waste Electrical and Electronic Equipment). Dispose of the appliance through an approved disposal centre or at your community waste facility. observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre. In regard to conformity with essential requirements and other relevant provisions, this appliance complies with the European EMC Directive 2004/108/EC, the Low Voltage Directive 2006/95/EC and the Eco-design Directive 2009/125/EC (Regulation 1275/2008 Annex II , No. 1). The complete original declaration of conformity can be obtained from the importer. @@@@Please retain your receipt as proof of purchase.

@@Only in this way can a post-free despatch for your goods be assured. @@This product is for domestic use only and is not intended for commercial applications. The warranty is void in the case of abusive and improper handling, use of force and internal tampering not carried out by our authorised service branch. Your statutory rights are not restricted in any way by this warranty. The warranty period is not extended by repairs made under the warranty. this applies also to replaced and repaired parts. Damages and defects extant at the time of purchase must be reported immediately after unpacking, resp. No later than two days after the date of purchase. Repairs made after the lapse of the warranty period are subject to charge. .



[You're reading an excerpt. Click here to read official SILVERCREST](http://yourpdfguides.com/dref/3976937)

[SAD 12 A1 user guide](http://yourpdfguides.com/dref/3976937)

<http://yourpdfguides.com/dref/3976937>