



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST SAS 7.4 LI A1. You'll find the answers to all your questions on the SILVERCREST SAS 7.4 LI A1 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SILVERCREST SAS 7.4 LI A1
User guide SILVERCREST SAS 7.4 LI A1
Operating instructions SILVERCREST SAS 7.4 LI A1
Instructions for use SILVERCREST SAS 7.4 LI A1
Instruction manual SILVERCREST SAS 7.4 LI A1

SILVERCREST®



LI-ION-AKKU-HANDSTAUBSAUGER SAS 7.4 LI A1

DE (D) (G)
Klappen Sie vor dem Lesen die Seite mit den Abbildungen aus und machen Sie sich anschließend mit allen Funktionen des Gerätes vertraut.

NL
Voór vóór het lezen de pagina met de afbeeldingen open en maak u vertrouwd met alle functies van het apparaat.

GB
Before reading, unfold the page containing the illustrations and familiarise yourself with all functions of the device.

DE (D) (G)
LI-ION-AKKU-HANDSTAUBSAUGER
Bedienungsanleitung

GB
LI-ION RECHARGEABLE HANDHELD VACUUM CLEANER
Operating instructions

DE (D) (G)
LI-ION-ACCU-KRUMELDIEF
Gebruiksaanwijzing

DE/AT/CH	Bedienungsanleitung	Seite	1
NL	Gebruiksaanwijzing	Pagina	9
GB	Operating instructions	Page	17

KOMPENASS GMBH
Burgstraße 21
D-44387 Soest
www.kompenass.com

Stand der Informationen: Stand van de informatie
Last Information Update:
02/2012 Ident. No.: SAS7.4IA122011.3

IAN 73540 1 IAN 73540

DE (D) (G)



[You're reading an excerpt. Click here to read official SILVERCREST SAS 7.4 LI A1 user guide](http://yourpdfguides.com/dref/4455038)
<http://yourpdfguides.com/dref/4455038>

Manual abstract:

Pass this manual on to whoever might acquire the device at a future date. 2012 12:03 Uhr Seite 18 Li-Ion Rechargeable Handheld Vacuum Cleaner Congratulations on the purchase of your new appliance. You have clearly decided in favour of a quality product. These operating instructions are a part of this product. They contain important information in regard to safety, use and disposal. Before using the product, familiarise yourself with all of these operating and safety instructions. Use the product only as described and only for the specified areas of application. In addition, pass these documents on, together with the product, to any future owner. ⚠ Arrange for repairs to be carried out only by specialist workshops. Under no circumstances should you open the appliance yourself.

Interferences that are not carried out by a specialist workshop could lead to physical injuries. ⚠ Before switching the hand vacuum cleaner on, ensure that the mains voltage corresponds to the voltage indicated in the technical data for the appliance. ⚠ Do not vacuum dry or wet materials and fluids. People or animals may not be vacuumed with this appliance. ⚠ The manufacturer accepts no liability for damages that result from improper use of the appliance or are caused by the incorrect operation of it.

The appliance is not intended for commercial use. Important safety instructions To avoid potentially fatal electric shocks: ⚠ Do not charge or use the appliance outdoors. ⚠ Do not change any accessories while the appliance is switched on. ⚠ Do not use the hand vacuum for vacuuming up sharp objects or glass shards. ⚠ Never vacuum up burning matches, glowing ashes or cigarette butts.

⚠ Do not use the hand vacuum for vacuuming up chemical products, stone dust, gypsum, cement or similar particles. ⚠ This appliance is not suitable for use with inflammable and explosive substances or chemical and aggressive liquids. ⚠ Always store the appliance indoors. To prevent accidents, keep the appliance in a dry location when not in use. ⚠ Under extreme conditions, leaks in the battery cells may occur. ⚠ The power adapter may not be used for other purposes. Never carry the wall holder or the power adapter by the cable. Do not pull on the cable when you want to move the appliance. ⚠ A blocked ventilation circuit can result in overheating and damage to the appliance. ⚠ This product contains rechargeable batteries.

Do not throw the batteries into a fire and do not subject them to high temperatures. There is the risk of an explosion! ⚠ Take special care when using the hand vacuum on stairs. ⚠ Do not use the hand vacuum without the dust filter inserted. ⚠ Do not use the power adapter for a different product and do not attempt to charge this appliance with a different charging station. Use only the charging station supplied with this appliance. ⚠ Never try to recharge non-rechargeable batteries. Items supplied Handheld Vacuum Cleaner Crevice tool Wet suction nozzle Wall holder Assembly material Power transformer Operating instructions Check the items supplied directly after unpacking for completeness. ⚠ The batteries must be charged for 24 hours before the first use. ⚠ 1. ⚠ Secure the barrel plug 5 by turning it.

⚠ 2. ⚠ 3. Bore two holes with a spacing of approx. 68 mm.

⚠ The boreholes must be suitable for 5 mm wallplugs. 4. ⚠ 5. You can place the nozzles on the lateral accessories holder. 6.

Connect the power adapter 4 to a mains power socket. ⚠ operation Warning! The suction opening must always be open and unblocked. Blockages lead to overheating and damage to the motor. ⚠ 1. ⚠ 2. ⚠ This does not mean that the batteries are fully charged. When the charge indicator lamp 7 glows green, it means the batteries are charged to about 80%. ⚠ When charging is complete, which with fully discharged batteries can take approx. 5 hours, the appliance automatically switches to a trickle charge (maintenance function). Nevertheless, in order to avoid possible damage to the batteries, do not leave the appliance permanently connected to the power adapter 4.

⚠ First recharge the batteries when the suction power of the hand vacuum cleaner is noticeably weaker and the charge indicator light 7 green is blinking. Note: After you have vacuumed up liquids, immediately clean the dirt container q. Otherwise bacteria and microbes could form in it! ⚠ 3. To switch the appliance on, slide the on/off switch 6 forwards. The charge indicator lamp 7 lights up green. 4. ⚠ This product is subject to the provisions of European Directive 2002/96/EC. The appliance and the batteries must be disposed of separately. 1. Unscrew all the cross-head screws on the motor block and take it apart.

2. Cut the connection cable from the battery and remove the battery from the appliance. Dispose of the appliance through an approved disposal centre or at your community waste facility. observe the currently applicable regulations. In a case of doubt, please contact your waste disposal centre. These could damage the surfaces of the appliance. 1. To open the dirt container q, press the unlocking button 8 and remove the dirt container q. 2. Remove the dust filter 0 from the dirt container q.

Pull the dust filter bag 9 with its mounting out of the dust filter 0. 5. ⚠ Do not dry it with hot air. 6. Place the dust filter 0 back into the dirt container q. ⚠ 7. Replace the dirt container q back onto the motor block: ⚠ Push the plastic nose on the underside of the hand vacuum cleaner into the recess on the dirt container q. ⚠ The dirt container q now sits firmly on the motor block. 8. Clean the housing and both nozzles with a lightly moistened cloth.

For stubborn soiling use a mild detergent on the cloth. 9. ⚠ Every consumer is statutorily obliged to dispose of batteries at a collection site of his community/city district or at a retail store. The purpose of this obligation is to ensure that batteries are disposed of in a non-polluting manner. Only dispose of batteries/cells when they are fully discharged. 2012 12:03 Uhr Seite 23 Warranty and Service The warranty for this appliance is for 3 years from the date of purchase. The appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase. In the event of a warranty claim, please make contact by telephone with our Service Department. Only in this way can a post-free despatch for your goods be assured.

The warranty covers only claims for material and manufacturing defects, but not for transport damage, for wearing parts or for .



[You're reading an excerpt. Click here to read official SILVERCREST SAS 7.4 LI A1 user guide](http://yourpdfguides.com/dref/4455038)
<http://yourpdfguides.com/dref/4455038>