



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST SDB 2400 A1. You'll find the answers to all your questions on the SILVERCREST SDB 2400 A1 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SILVERCREST SDB 2400 A1

User guide SILVERCREST SDB 2400 A1

Operating instructions SILVERCREST SDB 2400 A1

Instructions for use SILVERCREST SDB 2400 A1

Instruction manual SILVERCREST SDB 2400 A1

SILVERCREST®

5 ⚙

Plancha de vapor SDB 2400 A1
Ferro da stiro a vapor



ES **Plancha de vapor**
Instrucciones de uso

PT **Ferro de engomar a vapor**
Manual de instruções

DE **Dampfbügeleisen**
Bedienungsanleitung

IT **Ferro da stiro a vapore**
Istruzioni per l'uso

GB **Steam Iron**
Operating instructions

KOMPERNASS GMBH
BURGSTRASSE 21 · D-44867 BOCHUM
www.kompernass.com
ID-Nr.: SDB 2400 A1-06/11-V2
IAN: 66493



[You're reading an excerpt. Click here to read official SILVERCREST SDB 2400 A1 user guide](http://yourpdfguides.com/dref/3990511)
<http://yourpdfguides.com/dref/3990511>

Manual abstract:

Congratulations on the purchase of your new appliance! You have clearly decided in favour of a modern and high quality product. These operating instructions are a component of this product. They contain important information about safety, operation and disposal. Before using this product, familiarise yourself with all of these operating and safety instructions. Use this appliance only as described and only for the specified areas of application. Additionally, pass them on to whoever might acquire the appliance at a future date. Any copying or reproduction of it, including as extracts, as well as the reproduction of images, also in an altered state, is only permitted with the written authorisation of the manufacturer. The iron may only be used indoors and in domestic households. all other use is deemed to be improper use. This appliance is NOT intended for industrial or commercial applications or for use outdoors.

wARNING Risks from unintended use! Risks can be engendered by the appliance if it used for unintended purposes and/or other types of use. Use the appliance exclusively for its intended purposes. observe the procedures described in these operating instructions. NOTICE Risks can be engendered if this appliance is used for purposes not intended for it and/or for other types of use. Use the appliance exclusively for its intended purposes.

observe the procedures described in these operating instructions. Claims of any kind for damage resulting from unintended use, incompetent repairs, unauthorised modification or the use of unauthorised spare parts will not be accepted. @@@@Never bend (kink) or crush the power cable, always lay it in such a way that it cannot come into contact with hot surfaces and lay it such that no-one can step on or trip over it. After every use, before cleaning and when refilling with mains water, always remove the plug from the mains power socket. do not use extension cables.

Never touch the power cable or the plug with wet hands. Under no circumstances should you submerge the steam iron in any liquid or permit liquids to penetrate into the housing of the steam iron. Do not expose the appliance to humidity and do not use it outdoors. Should liquids enter the housing, unplug the appliance from the power socket immediately and arrange for it to be repaired by a qualified technician. Never use the steam iron adjacent to water contained in a bath, shower, wash basin or other vessels. the proximity of moisture presents a danger, even when the appliance is switched off. You may not open the appliance housing of the steam iron. Permit only authorised technicians to repair a defective appliance should repairs be necessary. Under NO circumstance should you use the appliance if it shows visible signs of damage, has fallen or leaks water. arrange for it to be repaired by qualified specialists.

Always disconnect the plug from the mains power socket after use. Ensure that the appliance, the power cable and the plug are NEVER submerged in water or other fluids. Grasp the steam iron only by the handle when it is hot. Children should be supervised to ensure that they do not play with the appliance. Never place your hands in the steam spray or on hot metal parts. You may not open the filler opening of the water reservoir while the iron is in use. First allow the steam iron to cool down and remove the plug from the power socket. The iron and its connecting cable must, when it is switched on or cooling down, be kept out of the reach of children who are younger than 8 years old. Discontinue use of the appliance if the anti-kink protection on the power cable is damaged! This appliance may be used by children aged 8 years or more and by individuals with reduced physical, sensory or mental capabilities or lack of experience and/or knowledge if they are supervised, or have been instructed in the safe use of the appliance and have understood the potential risks. Children may not play with the appliance.

Cleaning and user maintenance by children should not be carried out without supervision of them. Never leave the steam iron unattended when it is connected to the mains power supply. Put the steam iron into storage only when it has cooled down completely. Use only the ironing temperatures given in the care instructions for the material, or those suitable for it. Otherwise, you could damage the textiles.

Should care instructions not be given or known, start with the lowest temperature setting. The iron must be used and parked on a stable surface. When you want to put the steam iron down, place it only on its stand. @@If you do so, the clothing item could be permanently damaged. the water tank is to be filled exclusively with mains or distilled water.

You will otherwise damage the steam iron. @@@@ 6) Activate the steam blast 3 button a few times. @@@@Do not put any additives in the water tank. @@@@ 1) Insert the plug into a mains power socket. @@If you do so, the clothing item could be permanently damaged. @@TIPS The iron takes longer to cool down than to heat up. Therefore, first iron delicate fabrics at lower temperature settings. @@Wait until the control lamp "Temperature" 4 goes out. NOTICE To help with ironing severely wrinkled or very dry materials, you can dampen them by using the fine water spray 2 6) You can now start ironing. The temperature regulator 7 must be at least at level Otherwise it cannot produce any steam.

1) Set the steam regulator 1 to the desired steam setting. 2) Wait until the control lamp "Temperature" 4 goes out. The steam blast is especially suitable for smoothing difficult to reach parts of a garment. The temperature regulator 7 must be in the red marked setting range least in order to produce a steam blast. If you want to smooth sensitive materials, hold the steam iron at a distance of 10 - 20 cm away, so as to avoid damaging the material. Never leave a steam iron that is hot, switched on or connected to the mains power supply unattended. Taking the steam iron out of service 1) Disconnect the plug from the mains power socket. With conventional steam irons it can happen that water drips from the iron sole at low temperatures. This iron however possesses a new feature characteristic, the DRIP-STOP function: The iron automatically cuts off the supply of water for steam generation (for steam blast and steam ironing) at low temperatures. when this happens, a "CLICK" is to be heard.

Thus, no water can drip from the soleplate 9. You must then re-set a suitable temperature with the temperature regulator 7. As soon as this is reached, steam production is continued. Also when you put the steam iron down or simply let it cool down, the DRIP-STOP function prevents dripping from the soleplate 9.

NOTICE We recommend carrying out the self-cleaning every 2 weeks.

If the water in your area is very hard, you should carry out the self cleaning more frequently. 1) Check to ensure that the plug has been disconnected from the mains power socket. 2) Adjust the steam regulator to the position 3) Fill the water tank to the marking MAX.



[You're reading an excerpt. Click here to read official SILVERCREST](http://yourpdfguides.com/dref/3990511)

[SDB 2400 A1 user guide](http://yourpdfguides.com/dref/3990511)

<http://yourpdfguides.com/dref/3990511>

4) Insert the plug into a mains power socket. 5) Set the temperature regulator 7 to the position MAX and let the iron heat up until the control lamp "Temperature" 4 goes out.

6) Disconnect the plug from the mains power socket. Move the iron gently back and forth, thereby, steam and boiling water flows from the steam exit holes in the sole of the iron 9. Impurities that may be present are washed out. To do this, pass the sole plate 9 a few times back and forth over a towel or piece of old cloth. 11) Allow the steam iron to cool down before putting it to one side. Allow the appliance to cool down before cleaning it! Clean the housing and the sole plate 9 with a damp cloth. This iron is equipped with a safety switch-off: The iron switches off automatically when. . The iron stands on its soleplate 9 for longer than 30 seconds without being moved.

. The iron lies on its side for longer than 30 seconds without being moved. . The iron stands on the appliance base 6 for longer than 8 minutes without being moved. 6 signal tones sound prior to the automatic switch-off. @@ the iron is re-activated once it has been moved. @@@@POSSIBLE CAUSE The plug is not connected to the mains power supply. You have poured chemical additives into the water tank. You have sprayed laundry starch onto the fabric. @@This is not a defect: the control lamp "Temperature" 4 indicates the heating up of the appliance.

There is not enough water in the water tank. First carry out a self-cleaning process and then clean the iron. Empty the water tank, carry out a self-cleaning process and then fill it with only water as per the instruction in "Filling with mains water". In principle, spray laundry starch onto the back of the fabric. After ironing, there are stains on the textiles Fill the water tank with water.

Do not dispose of the appliance in your normal domestic waste. This product is subject to the provisions of European Directive 2002/96/EC. Dispose of the appliance through an approved disposal centre or at your community waste facility. observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre.

Wi.



[You're reading an excerpt. Click here to read official SILVERCREST SDB 2400 A1 user guide](http://yourpdfguides.com/dref/3990511)
<http://yourpdfguides.com/dref/3990511>