



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST SDRB 1000 A1 STEAM BRUSH. You'll find the answers to all your questions on the SILVERCREST SDRB 1000 A1 STEAM BRUSH in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SILVERCREST SDRB 1000 A1 STEAM BRUSH
User guide SILVERCREST SDRB 1000 A1 STEAM BRUSH
Operating instructions SILVERCREST SDRB 1000 A1 STEAM BRUSH
Instructions for use SILVERCREST SDRB 1000 A1 STEAM BRUSH
Instruction manual SILVERCREST SDRB 1000 A1 STEAM BRUSH

SILVERCREST®

3

Steam Brush SDRB 1000 A1



Steam Brush
 Operating instructions

Ångborste
Bruksanvisning

Dampfbürste
 Bedienungsanleitung

Höyrysiivitysharja
Käyttöohje

Dampborste
Betjeningsvejledning

KOMPERNASS GMBH
BURGSTRASSE 21 · D-44867 BOCHUM
www.kompernass.com
ID-Nr.: SDRB1000A1-07/10-V2



[You're reading an excerpt. Click here to read official SILVERCREST SDRB 1000 A1 STEAM BRUSH user guide](http://yourpdfguides.com/dref/3624251)
<http://yourpdfguides.com/dref/3624251>

Manual abstract:

When the appliance is hot, grasp it only by the handle. This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used. Children should be supervised to ensure that they do not play with the appliance. Never hold your hand over the steam spray or on hot metal parts. You should not open the filler opening of the water reservoir while the iron is in use. First of all, remove the plug from the power socket and allow the device to cool down completely. NEVER iron clothing while still wearing it! Under NO circumstance should you use the appliance if it shows visible signs of damage, has fallen or leaks water. Use only the ironing temperatures given in the care instructions for the material, or those suitable for it. Otherwise, you could damage the textiles. Should care instructions not be given or known, start with the lowest temperature setting.

The rating of the local power supply must tally completely with the details given on the rating plate of the appliance. To avoid possible dangers, arrange for a defective appliance to be checked and possibly repaired by qualified technicians, or contact our Customer Service Department. @@@@ Never bend (kink) or crush the power cable. @@@@ Always unroll the power cable fully before switching on and do not use an extension cable. Never touch the power cable or the power plug with wet hands.

Under no circumstances may the appliance be submersed in fluids or fluids be allowed to permeate the housing. Do not expose the appliance to humidity and do not use it outdoors. Should liquids enter the housing, unplug the appliance from the power socket immediately and arrange for it to be repaired by a qualified technician. Do NOT leave the appliance unsupervised when it is connected to mains power. Put the appliance into storage only when it has cooled down.

Place the appliance on level and heat resistant surfaces only with the stand folded out. The appliance must be stood securely when it is put down. NEVER use the appliance adjacent to water contained in a bath, shower, wash basin or other vessels. You may not open the appliance housing. Should the care instructions in the clothing item forbid ironing (Symbol), you may not use the steam brush on it. Should you do so, the clothing item could be permanently damaged. You will otherwise damage the appliance. You may not clean the appliance with solvents, alcohol or abrasive cleaning agents. 1 Water tank 2 Water fill opening 3 Temperature regulator 4 Unlocking device for the water tank 5 Heating-up control lamp 6 Suspension eye 7 Power cable with power plug 8 Steam blast button 9 Stand 0 Sole of the iron q Unlocking device for brush attachment w Brush attachment e Fluff brush r Clothes brush t Measuring beaker This Steam Brush is intended exclusively for the smoothing and removal of crinkles, fluff and hairs on home textiles. It may only be used indoors and in a domestic household.

To avoid fatalities through suffocation, keep plastic bags out of the reach of children. Fill the water tank 1 with water (See chapter "Filling with water"). @@@@Heat the steam brush up at the highest setting for a few minutes. By doing this you will clear production residues from the sole 0 of the appliance. Activate the steam shot button 8 a few times, so that steam exits from the soleplate 0. Then iron a redundant piece of material, this will remove any impurities that may possibly be on the sole of the iron 0. Should the mains water at your locality be rated as hard, it is recommended that you mix mains water with some distilled water. Otherwise, the jets for the steam blast function could calcify (become blocked) prematurely. To extend the optimal steam blast function, mix mains water with distilled water according to the table. Water hardness very soft / soft medium hard very hard On the first heating up of the appliance a small volume of smoke and smell may be generated, caused by production residues.

This is completely normal and is not dangerous. The water hardness level can be queried at your local water works. Should the care instructions in the clothing item forbid ironing (Symbol), you may not use the steam brush on it. If you do so, the clothing item could be permanently damaged. If you do, the material/furniture could become damaged.

Before refilling with water, ALWAYS remove the plug 7 from the mains power socket! There is a risk of electric shock! Lift the water tank 1 up vertically, in that you slide the release 4 for the water tank 1 to the rear until the water tank 1 allows itself to be lifted off. Using the measuring beaker t, fill the water tank 1 with mains water to the "Max" marking, but no further. NEVER fill the water tank 1 with chemical substances, cleaning agents or fluids other than mains water (or a mix of mains and distilled water). Close the water fill opening 2 to the water tank 1. ensure that the lug on the water fill opening 2 sits in the indentation on the lid.

Only in this way is the water tank 1 properly closed. @@@@The steam brush can be used with all clothing items. @@@@Suspend the crumpled garment from a coat hanger. @@@@You can thereby press the steam blast button 8 in short intervals. @@@@ Then simply follow the directions given under "Clothing care". Always carry out a test first at a concealed part. If you are using the appliance horizontally, every now and then hold it upright so as to have the maximum steam performance. If doubt exists, start with a low temperature and gradually increase it to a higher one. With sensitive materials we recommend carrying out an ironing test at a concealed part (inside seam). For heavily creased laundry, you can use the steam function by pressing the steam shot button 8.

Should the heating-up control lamp 5 glow during the process, release the steam blast button 8 and wait for a few moments until the heating-up control lamp 5 extinguishes. @@@@Threads, fluff and hairs can be easily removed with the red fluff brush e by slowly brushing over the garment with it from left to right. You can clean the fluff brush e by brushing with it in the opposite direction (from right to left) over, for example, a remnant of material. As soon as the set temperature has been reached, the heating-up control lamp 5 goes out. @@@@Should the water tank 1 become empty while the appliance is in use, remove the plug 7 from the power socket before refilling it. If you want to put the appliance down during use, fold out the stands 9 to the front and place the appliance on them. When you are ready to reuse the appliance, simply fold the stands 9 back to the rear. Remove the plug 7 from the power socket and allow the appliance to cool down before putting it into storage. You can also hang the appliance up by the suspension eye 6.



[You're reading an excerpt. Click here to read official SILVERCREST SDRB 1000 A1 STEAM BRUSH user guide](http://yourpdfguides.com/dref/3624251)
<http://yourpdfguides.com/dref/3624251>

After use, ALWAYS remove the plug 7 from the power socket.

Pour away any water remaining in the water tank 1 to do this, open, the water fill opening 2 of the water tank 1, turn the appliance upside down and lightly swivel it. Fill the water tank 1 with water (See "Filling with water"). There is a risk of electric shock! The steam brush does not heat itself up: the appliance is not connected to mains power. Insert the plug 7 into a wall power socket and set the desired temperature with the temperature regulator 3. Clean the housing with a soft, dry cloth only.

Clean the metal components with a lightly watermoistened cloth and a mild, non-aggressive cleaning agent. Should the steam output diminish over a period of time, decalcify the steam brush. Do not dispose of the appliance in your normal domestic waste. This product is subject to the European guideline 2002/96/EC. Dispose of the appliance through an approved disposal centre or at your community waste facility.

observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre. @@@@Please retain your receipt as proof of purchase. @@Only in this way can a post-free despatch for your goods be assured. @@This product is for private use only and is not intended for commercial use. The warranty is void in the case of abusive and improper handling, use of force and internal tampering not carried out by our authorized service branch. Your statutory rights are not restricted in any way by this warranty. The warranty period will not be extended by repairs made under warranty. this applies also to replaced and repaired parts. Any damage and defects extant on purchase must be reported immediately after unpacking the appliance, at the latest, two days after the purchase date.

Repairs made after the expiration of the warranty period are subject to payment. Lämna in den till ett företag som har tillstånd att ta hand o.



[You're reading an excerpt. Click here to read official SILVERCREST SDRB 1000 A1 STEAM BRUSH user guide](http://yourpdfguides.com/dref/3624251)
<http://yourpdfguides.com/dref/3624251>