



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST SEM 1100 A2. You'll find the answers to all your questions on the SILVERCREST SEM 1100 A2 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SILVERCREST SEM 1100 A2
User guide SILVERCREST SEM 1100 A2
Operating instructions SILVERCREST SEM 1100 A2
Instructions for use SILVERCREST SEM 1100 A2
Instruction manual SILVERCREST SEM 1100 A2

SILVERCREST®

KITCHEN TOOLS

Espresso Machine SEM 1100 A2



Espresso Machine
Operating instructions

Espressomaskin
Bruksanvisning

Espressomaschine
Bedienungsanleitung

Espressokeitin
Käyttöohje

Espressomaskine
Betjeningsvejledning

KOMPENASS GMBH
BURGSTRASSE 21 · D-44867 BOCHUM
www.kompennass.com
ID-Nr.: SEM 1100 A2-06/11-V2
IAN: 66926



[You're reading an excerpt. Click here to read official SILVERCREST SEM 1100 A2 user guide](http://yourpdfguides.com/dref/4124419)
<http://yourpdfguides.com/dref/4124419>

Manual abstract:

Dear customer, with the purchase of this appliance you have decided on a quality product from SilverCrest, which, in terms of technology and functionality, meets the most up-to-date development standards. Read the information included here so that you can quickly familiarize yourself with your appliance and thus make full use of its functions. We wish you a great deal of enjoyable use. These operating instructions are a component of the Espresso Machine SEM 1100 A2 (henceforth designated as the appliance) and they supply you with important information about the intended use, safety, installation and connection as well as operation of the appliance. The operating instructions must be constantly kept available close to the appliance. They are to be read and applied by every person charged with the operation of the appliance. Keep these operating instructions and hand them over with the appliance to any future owners. All rights, including those of photographic reproduction, duplication and distribution by means of particular methods (for example data processing, data carriers and data networks), wholly or partially, as well as substantive and technical changes, are reserved. All technical information, data and information for installation and operation contained in these operating instructions corresponds to the latest available at the time of printing and, to the best of our knowledge, take into account our previous experience and know-how. No claims can be derived from the details, illustrations and descriptions in these instructions.

The manufacturer assumes no responsibility for damage caused by failure to observe these instructions, improper use, inappropriate repairs, making unauthorized modifications or for using unapproved replacement parts. @@If the risk situation is not avoided it can lead to injuries. The directives in this warning are there to avoid personal injuries. @@If the situation is not avoided it can lead to property damage. The directives in this warning are there to avoid property damage.

@@@ @WARNING Risk from unintended use! Risks can come from the appliance if it is used for unintended purposes and/ or other types of use. Use this appliance exclusively for its intended purposes. observe the procedures described in these operating instructions. Claims of any kind for damage resulting from unintended use will not be accepted. In the chapter "Safety Notices" you will receive important safety information regarding the handling of the appliance.

This appliance complies with the statutory safety regulations. Incorrect usage can, however, lead to personal injury and property damage. For safe handling of the appliance observe the following safety information: WARNING - RISK OF INJURY! before use check the appliance for visible external damage. Do not put into operation an appliance that is damaged or has been dropped. This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used. Children should be supervised to ensure that they do not play with the appliance. Repairs should only be carried out by authorized specialist companies or by the Customer Service Department. Never touch the appliance with wet or moist hands. To avoid risks, arrange for defective plugs and/or cables to be replaced at once by qualified technicians or our Customer Service Department. risk of Burns! During use, some parts become very hot! Hot vapour plumes are formed when the product is in use.

Take care to ensure that you do not scald yourself! Keep a safe distance away from the steam. Connect the appliance only to correctly installed and earthed mains power sockets. ATTENTION - PROPERTY DAMAGE Defective components may only be replaced with original replacement parts. Compliance with the safety requirements can only be assured by using original replacement parts. Protect the appliance from moisture and liquid penetration. Protect the appliance against shock, moisture, dust, chemicals, extremes of temperature and from being too close to sources of heat (ovens, radiators). nEVER submerge the appliance in water or other liquids. Always pull the plug from the mains power socket; never pull on the cable. Do not operate the appliance in rooms where the temperatures are below or around 0° C. Should the water in the pipes or the water tank freeze, the appliance could be damaged.

never operate the appliance outdoors. This appliance is intended only for indoor use. NOTICE A repair to the appliance during the warranty period may only be carried out by a customer service department authorized by the manufacturer otherwise no additional warranty claims can be considered for subsequent damages. Packaging material should not be used as a play thing. There is a risk of suffocation! The appliance is delivered with the following components as standard: Espresso Machine Sieve carrier large espresso sieve small espresso sieve Measuring spoon with compactor Operating Instructions NOTICE Check the contents to make sure everything is available and there are no signs of visible damage.

If the contents are not complete, or are damaged due to defective packaging or transportation, contact the service hotline. The packaging materials are selected from the point of view of their environmental friendliness and disposal technology and are therefore recyclable. the recirculation of packaging into the material circuit saves on raw material and reduces generated waste. Dispose of packaging material that is no longer needed according to the regionally established regulations. NOTICE If possible preserve the appliance's original packaging during the warranty period so that in the case of a warranty claim you can package the appliance properly for return.

1 Water tank 2 Steam regulation knob 3 On/Off switch 4 Green heating-up control lamp 5 Rotary switch 6 Compactor 7 Recess for the red float 8 Drip grill 9 Measuring spoon with compactor 0 small espresso sieve q large espresso sieve w Sieve carrier e Sieve blocker r Drip tray t Hot water shower z Milk foamer u Grip i Red heating-up control lamp Voltage Nominal performance Pump pressure Water tank (Max) Energy consumption in standby mode until automatic switch-off Energy consumption in off-mode 220 - 240 V ~ 50 Hz 1100 W approx. 3) Insert the drip grill 8 so that the red float can protrude through the recess 7 in the drip grill 8. 4) Insert the plug into a mains power socket. 5) Proceed as follows before the first use, so as to clean the internal pipelines: 6) Allow sufficient water for about 5 cups of coffee to flow through the appliance. NOTICE On the first use it may be that the pump is already audibly working, noises occur, but still no water is coming out of the appliance. In this case, turn the steam control switch 2 in the direction "+" so that air can escape from the pipelines of the appliance (the function rotary switch 5 stands at the ").



[You're reading an excerpt. Click here to read official SILVERCREST SEM 1100 A2 user guide](http://yourpdfguides.com/dref/4124419)
<http://yourpdfguides.com/dref/4124419>

after approx. 20 seconds the air will have escaped, the position ,, noises disappear and water flows from the appliance. **NOTICE** Use only fresh drinking water for making espresso/cappuccino. 1) Pull the water tank 1 upward and out, open the lid and fill it with water: Fill it with water to at least the Min.

marking. Never fill it with more water than up to the Max marking. 2) Push the water tank 1 back into the appliance so that it slides into the appliance on the rails and sits firmly. You can also fill the water tank 1 without having to remove it from the appliance. Simply open the water tank lid and fill it with water from a bottle etc. Heating up before every use Before you can prepare an espresso or cappuccino, the appliance must be heated up. 3) Wait until the green heating-up control lamp 4 glows. You can now make an espresso / cappuccino. If you have not used it for some time, preheat the appliance as follows: 1) Fill the water tank 1 with water. 2) Place either the large q or the small espresso sieve 0 in the sieve carrier w.

3) Insert the sieve carrier w into the appliance by placing it at the marking "INSERT" and then turning it anticlockwise to the marking "LOCK". As soon as water flows from the sieve carrier opening, turn ". @@Allow the water to flow for about 1 minute. It may be that you need to empty the cup in between. 1 minute turn the rotary switch back to the position " " .

11) Wait until the green heating-up control lamp 4 glows again. the warming-up is concluded. You can now prepare espresso. @@If you do not, it may be that the coffee tastes burnt. Hold an empty cup under the milk frother z.

turn the steam control knob 2 in the direction "+". @@@@ 3) Compress the espresso powder using the tamper on the appliance 6. @@Tamp the coffee powder down once again. @@@@ 5) Place one (or two) cup(s) under the sieve carrier openings. @@@@ this refines the aroma of the espresso. @@You can now drink the espresso. @@ remove the sieve holder w from the appliance. @@ now empty the espresso sieve 0 q. Always dispose of the espresso powder or espresso pads in an environmentally friendly manner, for example, with the organic waste. **NOTICE** Absolutely clean the hot water shower t after every use.

NOTICE Regularly empty the drip tray r, at the latest when the red float in the recess 7 of the drip grill 8 is visible. **NOTICE** You can also use espresso pads for the preparation of espresso. use only espresso pads that correspond to the ESE standard. The ESE standard is a system accepted by the leading manufacturers of espresso pads, which makes possible the simple and clean preparation of espresso. **WARNING** Be careful when working with steam for the milk foam production! 1) Fill a container for frothing (preferably made of stainless steel) to third with cold milk. 2) Ensure that the steam regulation knob 2 is closed (turn it as far as it will with a needle. 7) Clean the steam delivery tube of the milk frother z with a damp cloth. Clean the hot water shower t after each use: 1) After you have prepared the espresso/cappuccino and removed the sieve holder w, wipe the entire surface of the hot water shower t with a moist cloth so that all powder residues are removed. 2) Then place an empty cup under the hot water shower t and turn the function rotary knob 5 to the position ,, . Water flows from the hot water shower t and it flushes the last remaining powder residues out.

With this, the water can spray a little. 3) After about 20 seconds place the function rotary knob 5 back to the position ,, " and switch the appliance off with the On/Off switch 3. **NOTICE** If you put detergent into the water, it may have a negative effect on the taste of the espresso. If the stains can only be removed with detergent, always rinse the items afterwards with lots of clean water. Clean the housing with a moist cloth.

If necessary, use a little detergent on the cloth. The appliance should be descaled after about 200 espresso preparations. Depending on the hardness of the water in your area, this figure may differ. If you do not have a descaler, you can proceed as follows: 1) Fill the water tank 1 to the marking MAX. 5) Insert the sieve carrier w, WITHOUT espresso powder, into the appliance and place a cup under the sieve carrier w.

As soon as the green heating-up " . Control lamp 4 glows, turn the rotary switch 5 to the position " 6) Let about 2 cups (coffee cups) of water pass through and then stop the process. 7) Hold a container under the milk frother z. 8) Place the rotary switch 5 at the position " " and wait until the green heating-up control lamp 4 glows. slowly turn the steam control knob 2 to the position "+ " . Allow the appliance to create steam for about 2 minutes. 9) After 2 minutes close the steam control knob 2 , set the rotary switch 5 to the position " " and switch the appliance off. 10) Let the scaling agent take effect for about 15 minutes. 13) Rinse the water tank 1 with clean water and then fill it with clean water up to the Max marking. 17) Fill the water tank 1 with water once again.

18) Turn the rotary switch 5 to the position " " . 19) Hold a container under the milk frother z and slowly rotate the steam control knob 2 to the position "+ " as soon as the green heating-up control lamp 4 glows. 20) After about 1 minute close the steam control knob 2, set the rotary switch 5 to the position " " and switch the appliance off. **nOTICE** After 3 minutes the appliance will switch itself off automatically. " as soon as the green heating- The espresso powder is too moist and/or compressed too tight. The espresso no longer flows out · Reprepare the espresso, however, this time do not compress it so tightly, or exchange it completely. Fill the water tank 1 with water. The espresso drips over the edges of the sieve carrier w instead of from the openings. The green heating-up control lamp 4 has not yet glowed. Clean the espresso powder residues from the edges of the sieve carrier w.

Wait until the green heating-up control lamp 4 glows. Fill the water tank 1 with water. The water tank 1 is not properly inserted, meaning that water · correctly insert the water tank 1. Cannot enter into the appliance. The crema is too light (the espresso runs quickly out of the sieve carrier w) Use milk from the refrigerator.

Clean the milk foamer z. The crema is too dark (the espresso runs slowly out of the sieve carrier w) The powder is too finely ground or moist. The milk is not cold enough. The milk does not foam. Do not dispose of this appliance in your normal domestic waste.

This product is subject to the provisions of the European Directive 2002/96/EC-WEEE (Waste Electrical and Electronic Equipment). Dispose of this appliance through an approved waste disposal centre or at your community waste facility. observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre.



[You're reading an excerpt. Click here to read official SILVERCREST](http://yourpdfguides.com/dref/4124419)

[SEM 1100 A2 user guide](http://yourpdfguides.com/dref/4124419)

<http://yourpdfguides.com/dref/4124419>

The warranty for this appliance is for 3 years from the date of purchase. The appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase. In the case of a warranty claim, please make contact by telephone with our Customer Service Department. Only in this way can a post-free despatch for your goods be assured. @@@@Your statutory rights are not restricted in any way by this warranty.

@@ this applies also to replaced and repaired parts. Damages and defects extant at the time of purchase must be reported immediately after unpacking, resp. No later than two days after the date of purchase. Repairs made after the lapse of the warranty period are subject to charge. 3) Sätt in hållaren w i apparaten genom att föra den fram till markeringen INSERT på apparaten och sedan vrida motsols till LOCK-markeringen. 4) Sätt in hållaren w i apparaten genom att föra den fram till INSERT-markeringen på apparaten och sedan vrida motsols till LOCK-markeringen. Lämna in den till ett företag som har tillstånd att ta hand om kasserade apparater av den här typen eller till rätt återvinningsstation på din kommuns avfallsanläggning. .



[You're reading an excerpt. Click here to read official SILVERCREST SEM 1100 A2 user guide](http://yourpdfguides.com/dref/4124419)
<http://yourpdfguides.com/dref/4124419>