



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST SFB 10.1 A1 10-IN-1 REMOTE CONTROL. You'll find the answers to all your questions on the SILVERCREST SFB 10.1 A1 10-IN-1 REMOTE CONTROL in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SILVERCREST SFB 10.1 A1 10-IN-1 REMOTE CONTROL

User guide SILVERCREST SFB 10.1 A1 10-IN-1 REMOTE CONTROL

Operating instructions SILVERCREST SFB 10.1 A1 10-IN-1 REMOTE CONTROL


Instructions for use SILVERCREST SFB 10.1 A1 10-IN-1 REMOTE CONTROL

Instruction manual SILVERCREST SFB 10.1 A1 10-IN-1 REMOTE CONTROL

SILVERCREST
HOME TECH

PL
RO

10-in-1 Remote Control



SFB 10.1 A1

- 10-in-1 Remote Control
Operating manual
- Pilot uniwersalny
Instrukcja obsługi
- Telecomandă universală
Instrucțiuni de utilizare

KOMPERNASS GMBH
BURGSTRASSE 21 · D-44867 BOCHUM
www.kompernass.com
ID-Nr.: SFB 10.1 A1-12/10-V1



[You're reading an excerpt. Click here to read official SILVERCREST SFB 10.1 A1 10-IN-1 REMOTE CONTROL user guide](http://yourpdfguides.com/dref/3861538)
<http://yourpdfguides.com/dref/3861538>

Manual abstract:

It can only be used for entertainment electronics with infrared receivers. Any other use is considered improper use. The manufacturer accepts no responsibility for damage caused by improper handling or unauthorized reconstruction. Warning A warning of this danger level signifies a possible dangerous situation. If the dangerous situation is not avoided it can lead to injuries. The directives in this warning are there to avoid personal injuries. @@If the situation is not avoided it can lead to property damage. The directives in this warning are there to avoid property damage. Batteries must be handled with special care.

@@ Children can put batteries into their mouths and swallow them.

@@ â Do not throw batteries into a fire. In event of contact with the skin, rinse with large amounts of water. @@In order to avoid eye injuries do not look at the diode with optical devices. If liquid escapes from the device or if the device has been otherwise damaged, it must be inspected by the manufacturer or the manufacturer's service hotline. Take the batteries out of the battery compartment as soon as they are depleted.

â If you will not be using the device for a long period of time, remove the batteries to prevent them from discharging. â Always change all batteries at the same time and always use batteries of the same type. LCD display /ALL OFF button Device buttons S button Arrow buttons EXIT button P +/- buttons MACRO button Number buttons Button for one or two digit programme numbers Teletext function buttons Illumination button Record/Playback buttons AV button Mute switching VOL +/- buttons MENU button OK button FAV / EPG button Infrared sender/receiver Battery compartment cover The functions described here pertain to the theoretically ideal circumstance that the button structure of the respective original remote control is identical to this universal remote control. This only occurs, however, in rare cases. If, therefore, not all of the original remote control's functions can be reproduced it is not due to a deficiency in the Universal remote control.

â All the brand names used in these instructions or in the accompanying code list are trademarks of the corresponding companies. Keep the plastic packaging well away from small children. There is a risk of suffocation! Check the package contents - Universal remote control (URC), - Operating instructions, - Manufacturers directory with device code list: - 2 x 1,5 V Batteries, type AAA/LR03 (Micro) Note: Transport damage If you notice any transport damage contact the manufacturer or the manufacturer's Service-Hotline (see warranty information). The Universal remote control must only be operated with 1.5 Volt batteries (Type AAA, LR03). Carry out the battery change as quickly as possible. If new batteries have not been installed within this time all of the settings will have to be carried out again. The time of day and date will, however, be lost in either case. The following diagram shows the LCD display q after the batteries have been installed or changed. Text field 2@ Here is shown the currently selected device, for example DVD, TV VCR etc.

With the time of day indicator ":" the numbers blink in the middle. Day of the week field 2% Here you can read the English shortened form of the current day of the week after you have entered the date. The standard readout of the LCD display q consists of the details for the relevant device, for example, "TV", the initial for the day of the week and the time of day indicator. Note: All the functions described here can, of course, only be used if they are supported by the device being controlled. Device buttons e The device buttons are used to select the device that should be operated. Television Video recorder Accessory unit 1 Cable receiver CD player Analogue satellite receiver Audio amplifier DVD player Digital satellite receiver Accessory unit 2 The mentioned button allocation is not compulsory. You can, for example, also save the code for the video recorder on the TV slot. Hold down for 3 seconds to access the SETUP menu, press briefly to superimpose the date and/or to open access to additional functions such as EPG or PIP. Arrow buttons t Move up, right, left and down in menus.

MACRO button i MACRO button i followed by a number button o 1-6 activates a previously saved chain of commands.

Button for one/two digit programme numbers a For two digit programme numbers (depending on the device type) first press the a button then via the number buttons o enter the programme number. When pressed again the display becomes single digit once more. teletext function buttons s In teletext operation the buttons have the following functions: Access the teletext function. In normal TV operation first press the S button r followed by the button to control the "PIP" function (picture in picture) of your television set. stop automatic paging forward for multi-page teletexts.

Enlarge page presentation Screen text and TV image one upon the other To end the teletext function. The teletext function is only available in the European

TV mode and your TV device must have a teletext module. â In addition the P +/- buttons u control the following teletext functions: P + Leaf one page

forward P-- Leaf one page backwards Record/playback buttons f The playback buttons f control devices such as DVD/CD players and video recorders:

ASPECT Start playback Image format switching with TV operation. Record Stop Playback/Record/Wind Pause playback Rewind Wind forward AV button g

Switch to the AV input. OK button l You can confirm a menu selection with the OK button.

fAV/EPG button l (Press the FAV/EPG button to access your previously programmed favourite station. To access the electronic programme guide of the target device first press briefly the S button r and then the FAV/EPG button. Setting the time of day, date, display contrast, background illumination, volume, lock function as well as system reset. Assigning favourites On the following page you can see a summary of the menu structure. 3 Programming methods are available for the remote control: Programming by brand code search, by automatic code search and by direct code input (manual). First you should use the brand code search since this method is the fastest way of programming if the manufacturer of your device is itemized in the code list. As second is recommended the direct code input followed by the automatic code search. With this method you select the brand and code direct via the LCD display q. Hold down the S button r for a little longer than 3 seconds. Carry out entries in the menu quickly because after approx.

With the buttons t select "BRAND CODE" and confirm with the OK button l. 4. Now appears the alphabetical first brand name from the list of pre-programmed devices. To make access easier you can skip directly to specific letters of the alphabet with the number buttons o: 2 => A 3 => D 4 => G 5 => J 6 => M 7 => P 8 => T 9 => W Example With button number 5 the display skips to the letter "J".



[You're reading an excerpt. Click here to read official SILVERCREST](#)

[SFB 10.1 A1 10-IN-1 REMOTE CONTROL user guide](#)

<http://yourpdfguides.com/dref/3861538>

the first brand is "JVC". If, for example, you own a "Kenwood" brand device, continue leafing with the 4 button t until this brand name appears. (* All brand names used here are trademarks of the corresponding manufacturer.) 7. The majority of manufacturers use several different codes for the remote control. @@@@ 11.

With the EXIT button y you will move one level upwards in the menu. @@@@ Hold down the S button r for a little longer than 3 seconds. Now the first digit of the code blinks and waits for your code input. Enter the new four digit code via the number buttons o. @@@@ Then you repeat step 4.

6. With the EXIT button y you will move one level upwards in the menu. @@@@ Hold down the S button r for a little longer than 3 seconds.

@@@@ Check to see if the majority of your device's functions can now be controlled with the remote control. If yes you have most probably found the correct code.

In the event that a few functions are not working you can start the automatic code search again beginning with step 1. Note: However, with a renewed code search, point the URC first to the target device after the previously found inadequate code has run its course. 8. However if the device does not react any more you probably did not press the OK button l quick enough in step 6. Then press repeatedly the EXIT button y to exit the menu and return to the standard display. 9. Now hold down the device button e of the device for which you have just sought the relevant code. below on the right in the LCD display q will thereby be shown the relevant code. Make a note of this number. 10.

Then proceed as described in the preceding chapter "Programming by manual code entry" and check to see if the code with the next lowest number combination will function. tips: 1. When code search is activated all buttons except OK l and EXIT y are ignored. 2. If the automatic search has reached the end of the code list it stops there. You set this as follows: 1. Hold down the S button r for a little longer than 3 seconds. 15 seconds pass without an entry the device exits the menu and returns to the standard display. 2. With the or button t select "SYSTEM SETUP" and confirm with the OK button l.

With the or button t you can switch to the other time format (12 HR). After which the time display for the time of day will show an "A" or "P" before the time. „A" stands for "AM" = "ante meridiem" (Morning, 0:00 o'clock midnight to 12:00 o'clock midday). „P" stands for "PM" = "post meridiem" (Afternoon and evening, 12:00 o'clock midday to the or button t select "LOCK SETUP" and confirm with the OK button l. With the or button t now select between „LOCK" (Block) or „UNLOCK" (Unblock).

5. With the OK button l you save the setting. Via this function you can reset the URC to its factory default settings. Thereby all settings made by you will be deleted. 1.

Hold down the S button r for a little longer than 3 seconds. With the or button t select "SYSTEM SETUP" and confirm with the OK button l. 3. With the or button t select "SYSTEM RESET" and confirm with the OK button l. Then the LCD display q shows "SUCCESS RESET". Then the settings remain preserved. Hold down the S button r for a little longer than 3 seconds. Confirm the selection of this function with the OK button l. 4. Now, below to the right in the LCD display q blinks the minutes for the remaining time of the selected device.

Set with the or button t the desired value from 1 to 99 minutes. press the OK button l to confirm. With programmed sleep-timer the LCD display q shows "zz" on the right next to the time. 5. @@@@ The remote control has 4 event timers available via which you are allowed to send out specific series of button combinata pre-programmed Macro proceed as follows: 1. @@@@ Hold down the S button r for a little longer than 3 seconds. @@@@ 2.

Individual Macros can not be deleted they can only be overwritten. @@@@ 2. Hold down the S button r for a little longer than 3 seconds.

With the or button t select "FAV CH SETUP" and confirm with the OK button l. With the or button t select the memory slot to be programmed (FAV CH SETUP 1 - 4) and confirm with the OK button l. Now press, one after the other, the buttons (max. When the maximum number of button commands is reached the LCD display q shows "FULL". 7.

Save the entry with the S button r. If, with the selection of the favourites to be programmed (step 4), you select a memory slot that is already occupied the existing favourite will be overwritten. 9. Repeat the steps to apply further favourites. 10.

With the EXIT button y you move a level backwards in the menu except during the entry of the button commands. Note: The input of the channel numbers can vary according to the model and brand of the selected devices. If necessary, with multi-digit channel numbers you must first press the button a. To access favourites To access a pre-programmed favourite press the FAV/EPG button l (followed by the corresponding number button for the desired memory slot (1 - 4). delete All FAV channels To delete all pre-programmed favourites proceed as follows: 1. Hold down the S button r for a little longer than 3 seconds. 2.

With the or button t select "FAV CH SETUP" and confirm with the OK button l. With the or button t select "FAV CH CLEAR" and confirm with the OK button l. @ @ 2.

Individual favourites can not be deleted they can only be overwritten. With the "VOL --" button you reduce the volume. to mute the sound -button h. A further press of this button turns the sound back on. When you activate the VOL +/- buttons j on the URC basically the volume adjustment on the TV device is addressed, regardless thereof, which device button e was pressed previously. However, this does not apply to the following devices: "AMP", "DVD", "ASAT", and "DSAT" since it can be assumed that these devices are equipped with their own volume control. > To operate one of the programmed devices with the URC first press the corresponding device button e. Then point the URC to this device and press the desired button. > Put the number buttons o exactly as you do with the original remote control. Before you make a two digit button a.

Entry press, if necessary, the > Press the FAV/EPG button l (to start the electronic programme guide of a device equipped with this function. > If you press the S button r the date is superimposed for 10 seconds in the LCD display q below and on the right. > Whilst you hold down one of the device buttons e the active code for this device will be superimposed below to the right in the LCD display q. > Via the MENU button k you access the dialogue for the setting of the respective target device. @@@@ For this hold down the ALL OFF button w for approx.

5 seconds. This will only function under the following circumstances: 1.



[You're reading an excerpt. Click here to read official SILVERCREST SFB 10.1 A1 10-IN-1 REMOTE CONTROL user guide](http://yourpdfguides.com/dref/3861538)
<http://yourpdfguides.com/dref/3861538>

@@ 3. All target devices must be suitable for remote control switch off. @@Ensure that moisture cannot permeate into the device during cleaning! otherwise there is the danger of causing irreparable damage to the device! > Clean the housing of the device exclusively with a soft moist cloth and a mild dishwashing detergent.

> Store the device exclusively in an environment that complies with the specifications given in the technical data. > Before storing remove the batteries so that they will not cause damage to the device if, during storage, they happen to leak. Your device does not react to the URC. > Check the batteries. They must have enough voltage and be properly installed. > Firstly have you pressed the correct device button e for the desired target device? > Check to see that the correct code is programmed in for the target device (see section "Code Setup"). @@> It is possible that you are using the wrong code. @@@@Some buttons on the URC do not function properly. > It is possible that your URC does not have all of the functions that are on the device's original remote control. > It is possible that you have not programmed in the optimal code.

Search for a code that supports more of the target device's functions. The URC stops reacting after a button is pressed. @@@@> The contrast could be set too low. Do not dispose of the device in your normal domestic waste. This product is subject to the European directive 2002/96/EC. universal remote control
Â· Have the universal remote control or parts of it disposed of by a professional disposal company or by your communal disposal facility. In case of doubt contact your disposal facility. batteries/rechargeable batteries Â· Used batteries/rechargeable batteries may not be disposed of in household waste. â· Batteries can contain poisons which are damaging to the environment. Therefore, dispose of the batteries/rechargeable batteries in accordance with statutory regulations.

â· Every consumer is legally obliged to surrender batteries/ rechargeable batteries to a community collection centre in their district or to a dealer. The purpose of this obligation is to ensure that batteries are disposed of in a nonpolluting manner. â· Only dispose of batteries when they are fully discharged. This device satisfies the fundamental requirements and other relevant regulations of the EMC Directive 2004/108/EC. You receive a 3-year warranty for this appliance as of the purchase date.

This appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase. In the case of a warranty claim, please make contact by telephone with our service department. Only in this way can a post-free despatch for your goods be assured. The warranty covers only claims for material and manufacturing defects, but not for transport damage, wearing parts or for damage to fragile components, e. This product is for private use only and is not intended for commercial use. The warranty is void in the case of abusive and improper handling, use of force and internal modifications not carried out by our authorized Service Centre. Your statutory rights are not restricted in any way by this warranty. The warranty period is not extended through repairs made under warranty. this applies also for replaced or repaired parts. Any damages or deficiencies found on purchase must be reported as soon as possible after unpacking, at the latest two days after purchase. .



[You're reading an excerpt. Click here to read official SILVERCREST SFB 10.1 A1 10-IN-1 REMOTE CONTROL user guide](http://yourpdfguides.com/dref/3861538)
<http://yourpdfguides.com/dref/3861538>