



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST SFK 36 A1. You'll find the answers to all your questions on the SILVERCREST SFK 36 A1 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SILVERCREST SFK 36 A1
User guide SILVERCREST SFK 36 A1
Operating instructions SILVERCREST SFK 36 A1
Instructions for use SILVERCREST SFK 36 A1
Instruction manual SILVERCREST SFK 36 A1

SILVERCREST®

Wireless Doorbell SFK 36 A1



KOMPERNASS GMBH
BURGSTRASSE 21 · D-44867 BOCHUM
www.kompernass.com
ID-Nr.: SFK 36 A1-11/11-V2
IAN: 71244

- GR** **Wireless Doorbell**
- CY** Operating instructions
- GR** **Ασύρματο κουδούνι πόρτας**
- CY** Οδηγίες χρήσης
- BG** **Дръжка на врата с радиовръзка**
- Ръководство за експлоатация



[You're reading an excerpt. Click here to read official SILVERCREST SFK 36 A1 user guide](http://yourpdfguides.com/dref/4282576)
<http://yourpdfguides.com/dref/4282576>

Manual abstract:

Pass this booklet on to whoever might acquire the appliance at a future date. This appliance serves as a radio doorbell system for wireless visitor signalisation and thus makes possible the operation of a door bell without wiring. The appliance is intended for domestic use only, not for commercial or industrial applications. No warranty is provided for damages resulting from improper use of the appliance! @@@@ Children should be supervised to ensure that they do not play with the appliance. â· Keep batteries well away from children. Children can put batteries into their mouths and swallow them. If a battery is swallowed, medical assistance must be sought IMMEDIATELY. Do not throw batteries into a fire. Never open batteries, never solder or weld batteries. If you do not intend to use the appliance for an extended period, remove the batteries.

Do not use any aggressive chemical substances for cleaning. Protect the receiver against moisture. @@@@: Button for sound volume control y : Button for melody selection u : Synchronisation button, Receiver i Battery compartment - receiver o Stand a Battery compartment cover - receiver Transmitter (Fig.

Taking the appliance into use Take the appliance out of the carton and remove all packaging materials. The side marked with "+" must be facing up. replace the assembly plate h back onto the transmitter. Should the performance of the appliance diminish or fall away completely, it means the batteries are exhausted. @@@@ @@@@ Button t repeatedly until the desired volume level is set. @@ repeatedly press the button for melody selection y. When the desired melody sounds, stop the selection.

@@Synchronising the transmitter and receiver The transmitter and receiver of this doorbell system can communicate with each other on a variety of different frequencies. Consequently, up to 5 transmitters can be operated with one receiver. The precondition for this is that the transmitter and receiver within a system are working on the same frequency. For this, you must synchronise the appliances as follows: Press the synchronisation button on the receiver u. Now press the bell button s on the transmitter. If the synchronisation has been a success, the receiver notifies you of the programmed call signal. the appliances terminate the synchronisation mode and the signal indicator q goes out. Should the receiver not react as described, repeat the synchronisation. The transmitter shows, with a brief glowing of the indicator f when being activated, the transmission of the signal to the receiver. @@@@ (68 mm) and then bore the holes for the enclosed wallplugs.

Screw the assembly plate h onto the wall. @@@@ Bear in mind that the given range refers to the free-space range. @@@@ @@@@ If they do, there is a risk that the appliance could be damaged. @@ In the event of the batteries leaking acids, put on a pair of protective gloves. Then clean the battery compartment and the battery contacts with a dry cloth. Do not, under any circumstances, dispose of the appliance in your household refuse. @@@@ In case of doubt, please contact your waste disposal centre. @@@@ The purpose of this obligation is to ensure that batteries are disposed of in a non-polluting manner. This appliance conforms with the fundamental requirements and other relevant regulations of the R&TTE Directive 1999/5/EC. A complete copy of the original conformity declaration is available from the importer.

The warranty for this appliance is for 3 years from the date of purchase. @@ Please retain your receipt as proof of purchase. @@ Only in this way can a post-free despatch for your goods be assured. @@@@ The warranty is void in the case of abusive and improper handling, use of force and internal tampering not carried out by our authorized service branch. Your statutory rights are not restricted in any way by this warranty.

The warranty period will not be extended by repairs made under warranty. this applies also to replaced and repaired parts. Any damage and defects extant on purchase must be reported immediately after unpacking the appliance, at the latest, two days after the purchase date. Repairs made after the expiration of the warranty period are subject to payment. .



[You're reading an excerpt. Click here to read official SILVERCREST SFK 36 A1 user guide](http://yourpdfguides.com/dref/4282576)
<http://yourpdfguides.com/dref/4282576>