



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST SFS 150 A2 VACUUM SEALER. You'll find the answers to all your questions on the SILVERCREST SFS 150 A2 VACUUM SEALER in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SILVERCREST SFS 150 A2 VACUUM SEALER
User guide SILVERCREST SFS 150 A2 VACUUM SEALER
Operating instructions SILVERCREST SFS 150 A2 VACUUM SEALER
Instructions for use SILVERCREST SFS 150 A2 VACUUM SEALER
Instruction manual SILVERCREST SFS 150 A2 VACUUM SEALER

SILVERCREST®

KITCHEN TOOLS

Vacuum Sealer SFS 150 A2



Vacuum Sealer
Operating instructions

Vakuumilaite
Käyttöohje

Foliesvets
Bruksanvisning

Lamineringsapparat
Bejningsvejledning

KOMPERNASS GMBH
BURGSTRASSE 21 · D-44867 BOCHUM
www.kompernass.com
ID-Nr.: SFS150A2-09/10-V2
IAN: 61777



[You're reading an excerpt. Click here to read official SILVERCREST SFS 150 A2 VACUUM SEALER user guide](http://yourpdfguides.com/dref/3923730)
<http://yourpdfguides.com/dref/3923730>

Manual abstract:

This plastic film sealer is intended for the occasional vacuum-packing of food in typical household quantities and only for private household use. This product is not intended for commercial or industrial applications or for continuous operation. After use or during extended absences, ALWAYS remove the plug from the power socket. Never leave the appliance unsupervised when it is connected to mains power. The appliance is electrically "live" for as long as the plug is inserted into the wall socket. Use only the special plastic films that are suitable for a plastic film sealer. Allow the appliance to cool down after every sealing process before continuing to use it. NEVER position the appliance below inflammable objects, especially not below curtains or drapes. Do not use an external timing switch or a separate remote control system to operate this appliance. Protect the appliance against moisture.

Only use the device in dry rooms, not outdoors. @@Also, do not use the appliance if you have wet hands. @@@@In order to avoid potentially fatal risks, should the power cable and/or the plug become damaged, arrange for it/them to be replaced by Customer Services before continuing to use the appliance.

Should the appliance become damaged, immediately remove the power plug. Then arrange for the device to be checked by Customer Services.

During operation, both the sealing wire and the cutting wire heat up. NEVER touch them directly after a sealing process. This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used. Children should be supervised to ensure that they do not play with the device. 1 Plastic Film Sealer 1 Tube film made of PE-HD (Polyethylene of high density) Operating Instructions DVD with Product Video Collector receptacle Extraction supports Cutting wire Sealing wire Film compartment cover Seal/Cut button Appliance cover Control lamp Check to ensure that the appliance is undamaged and that all parts and remnants of the packaging are removed from it.

Mains voltage: 230-240 V ~ 50Hz Power consumption: 150 W Protection class: II / Recommended operating times: Vacuuming + Sealing: 20 Seconds After vacuuming and sealing allow a break of 80 seconds before continuing to seal further bags. Insert the power plug into a wall power socket. Fold the appliance cover u up and pull a piece of tube film through between the appliance lid u and the appliance. Close the appliance cover u and the cover of the film compartment t. Otherwise, the sealing seam will not be tight and the appliance could be damaged. You will recognise films of this type by the information on the packaging. Otherwise, the sealing and cutting will not function properly. Do not heat the supplied film, for example in a waterbath or similar. Pull out as much film as is required for the task at hand. Press and hold the Seal/Cut button y with both hands until the control lamp i lights up.

Hold the Seal/Cut button y pressed down until the control lamp down i goes out. Then close the appliance cover u. To achieve the best results, press the Seal/Cut button y down continuously, applying an even pressure and using both hands. @@Immediately remove the plug from the wall socket. For this you can lift them lightly. Open the appliance cover u again and remove the film. @@@@ be sure not to press on the Seal/Cut button y. Air is now sucked from the bag. Do NOT vacuum bags in which there are liquids. They will permeate into the appliance and damage it.

@@@@ Clean the appliance only with a dry or lightly moistened cloth. @@@@ nEVER submerge the appliance in fluids of any kind. Do not permit liquids to permeate into the appliance. If you do, you risk receiving a potentially fatal electric shock. @@Clean the collector receptacle q as soon as soiling is visible: Do not dispose of the appliance with your normal domestic waste.

This product is subject to the provisions of European Directive 2002/96/EC. Dispose of the appliance through an approved waste disposal centre or at your community waste facility. observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre. The warranty for this appliance is for 3 years from the date of purchase.

The appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase. In the event of a warranty claim, please make contact by telephone with our Service Department. Only in this way can a post-free despatch for your goods be assured. The warranty covers only claims for material and manufacturing defects, but not for transport damage, for wearing parts or for damage to fragile components, e. This product is for private use only and is not intended for commercial use. The warranty is void in the case of abusive and improper handling, use of force and internal tampering not carried out by our authorized service branch. Your statutory rights are not restricted in any way by this warranty. The warranty period will not be extended by repairs made under warranty. this applies also to replaced and repaired parts.

@@@@ 2. Please tick your preferred payment method on the order card. You have got three options: Bank Transfer (BACS): Please transfer the complete amount to our account below: Natwest Bank Plc Hammersmith Branch Sort Code: 60-50-06 Account No: 37758829 Account Name: Domestic Electrical Solutions UK Limited Sender / Orderer On your transfer, please provide the article(s) you ordered as well as your complete name (please complete in block capitals) and address. Then post your completed order card to our postal address below. Enter under "Sender/orderer" your name, address and telephone number (for possible queries) in block capitals. A: By cheque: Please place a cheque made payable to Irish Connection together with your completed order card into an envelope and post to our postal address below. (please complete in block capitals) Stäng apparatens lock u och locket till foliefacket t. Lämna in den till ett företag som har tillstånd att ta hand om den här typen av uttjänta apparater eller till din kommunala avfallsanläggning. .



[You're reading an excerpt. Click here to read official SILVERCREST SFS 150 A2 VACUUM SEALER user guide](http://yourpdfguides.com/dref/3923730)
<http://yourpdfguides.com/dref/3923730>