



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST SFW 250 A1 ELECTRIC MINCER. You'll find the answers to all your questions on the SILVERCREST SFW 250 A1 ELECTRIC MINCER in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SILVERCREST SFW 250 A1 ELECTRIC MINCER
User guide SILVERCREST SFW 250 A1 ELECTRIC MINCER
Operating instructions SILVERCREST SFW 250 A1 ELECTRIC MINCER
Instructions for use SILVERCREST SFW 250 A1 ELECTRIC MINCER
Instruction manual SILVERCREST SFW 250 A1 ELECTRIC MINCER

SILVERCREST®

KITCHEN TOOLS

3

Electric Mincer SFW 250 A1



Electric Mincer
Operating instructions

Κόπτικvαrη
Bruksanvisning

Κρεατομηχανή
Οδηγίες χρήσης

Lihamyly
Käyttöohje

Kødhakker
Betjeningsvejledning

Fleischwolf
Bedienungsanleitung

KOMPERNASS GMBH
BURGSTRASSE 21 · D-44867 BOCHUM
www.kompernass.com
ID-Nr.: SFW 250 A1-01/10-V2



You're reading an excerpt. Click here to read official SILVERCREST SFW 250 A1 ELECTRIC MINCER user guide
<http://yourpdfguides.com/dref/3035906>

When the drive runs smoothly again, release the REV button. If you do not succeed in getting the drive free with this, clean the appliance as described in chapter "8. cleaning". Should the motor suddenly stop, it could be due to automatic activation of the internal overload device.

This is intended to protect the motor. Switch the appliance off and allow it cool down for approximately 30 minutes before continuing to use it. Should this time period not be sufficient, wait for a further 15 minutes. If it still does not function at the end of this period, this indicates a technical problem. In this case, contact the Service Centre.

If the power cable is damaged or the accessories are visibly damaged: · Immediately switch the appliance off by pressing the OFF button! If there is no risk to personal safety, unplug the appliance. Arrange for the defective parts to be repaired by Customer Services before re-using the appliance. Pull out the plug from the socket, before cleaning the appliance. @@@@Dry the appliance well before re-using it. Never immerse the motor block in water or any other liquid!

@@@Clean the accessories that could come in contact with foodstuffs, · - by hand only, the accessories are not dishwasher safe. - with hot water and a household detergent suitable for use with foods. The cross blade is very sharp! Dry all parts thoroughly, before re-using the appliance. After every cleaning, apply a light coating of cooking oil to all metallic components. The warranty for this appliance is for 3 years from the date of purchase.

The appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase. In the event of a warranty claim, please make contact by telephone with our Service Department. Only in this way can a post-free despatch for your goods be assured. The warova och sedan med den fina hålskivan o) och blanda ihop massan med resten av ingredienserna. .



[You're reading an excerpt. Click here to read official SILVERCREST SFW 250 A1 ELECTRIC MINCER user guide](http://yourpdfguides.com/dref/3035906)
<http://yourpdfguides.com/dref/3035906>