



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST SGB 1380 B2 ELECTRIC OVEN WITH GRILL. You'll find the answers to all your questions on the SILVERCREST SGB 1380 B2 ELECTRIC OVEN WITH GRILL in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SILVERCREST SGB 1380 B2 ELECTRIC OVEN WITH GRILL  
User guide SILVERCREST SGB 1380 B2 ELECTRIC OVEN WITH GRILL  
Operating instructions SILVERCREST SGB 1380 B2 ELECTRIC OVEN WITH GRILL  
Instructions for use SILVERCREST SGB 1380 B2 ELECTRIC OVEN WITH GRILL  
Instruction manual SILVERCREST SGB 1380 B2 ELECTRIC OVEN WITH GRILL

**SILVERCREST®**

KITCHEN TOOLS

Electric Oven with Grill SGB 1380 B2



Electric Oven with Grill  
Operating instructions

Grill- och bakugn  
Bruksanvisning

Grill- und Backautomat  
Bedienungsanleitung

Miniuuni ja grilli  
Käyttöohje

Grill- og bageovn  
Betjeningsvejledning

KOMPERNASS GMBH  
BURGSTRASSE 21 · D-44867 BOCHUM  
www.kompernass.com  
ID-Nr.: SGB 1380 B2-02/11-V2  
IAN: 63914/63915



[You're reading an excerpt. Click here to read official SILVERCREST SGB 1380 B2 ELECTRIC OVEN WITH GRILL user guide](http://yourpdfguides.com/dref/3949586)  
<http://yourpdfguides.com/dref/3949586>

**Manual abstract:**

Pass this manual on to whoever might acquire the device at a future date. Do not leave the appliance unattended when it is in use. This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used. Children should be supervised in order to make sure that they do not play with the device. You may not open the housing of the appliance or carry out any repairs. Should you do so, the safety concept of the device may be compromised and the warranty becomes void. Arrange for defects on the appliance to be repaired only by the dealer or authorised specialists. Arrange for defective power plugs and/or cables to be replaced at once by qualified technicians or our Customer Service Department. Ensure that fluids cannot permeate into the housing of the appliance. Do not expose the appliance to humidity and do not use it outdoors.

Additionally, DO NOT place fluid-filled receptacles such as flower vases on the appliance. This would increase the risk of fire and of receiving an electric shock! @@@@NEVER dry out textiles or other objects on or above the appliance. This would increase the risk of fire! @@Do not reach in to the cooking area when the appliance is in use. Wait until the appliance has cooled down. Otherwise, you could be burnt.

@@Otherwise, you could be burnt. After use, allow the appliance to cool down completely before transporting it. NEVER grasp the appliance, power cable or power plug with wet hands. There is the risk of receiving an electric shock. To disconnect, always pull out the plug itself out of the power socket, do not pull the power cable.

Do not fold or crush the power cable. Lay the power cable in such a way that no one can tread on or trip over it. Do not use extension cables. If you do not intend to use the appliance for an extended period, you must disconnect it from the power source. The appliance is completely free of electrical power only when you unplug it. Clarification of the safety warnings In the operating instructions there are the following categories of safety warning: Ensure there is sufficient ventilation around the appliance. The distance between the appliance rear side and the wall should be at least 10 cm, with at least a clear 10 cm above the appliance and 5 cm to each side. For this reason the appliance may not be used, for example, in cupboards or similar. Should it be so used, there is likely to be insufficient ventilation for the appliance, increasing both the risk of fire or of it being damaged. A warning with the word CAUTION refers to possible property or environmental damage.

These warnings contain specific indications for the economic use of the appliance. It is intended exclusively for these purposes and may only be used for them. The user is also required to pay heed to all of the information in these operating instructions, especially the safety instructions. All other uses are deemed to be improper and may result in property damage or even in personal injury. Failure to do so increases the risk of fire or of it being damaged. The area under the base of the appliance could become discoloured and damaged. Additionally, if placed on a soft upper surface, the appliance could cause permanent damage to it due to pressure indentations. Do not place the appliance immediately adjacent to sources of water, e. Otherwise, there is a risk of receiving an electric shock. Operating Elements 1 Control lamp (Power) Glows during operation 2 Temperature regulator Stepless adjustment of the temperature from 100° C to 230° C 3 Function switch for OFF, Upper heat, Lower heat, Upper and lower heat 4 Rocker switch for air circulation 5 Timer switch Adjustment of the required baking/grilling time from 0 to 60 min.

Before using the appliance for the first time, it and all of the accessories must be cleaned free of possible packaging residues. Clean the accessories with a handwarm and mild detergent solution and then dry them ab. Wipe the appliance housing with a cloth lightly moistened with water and then dry it carefully. When the appliance is completely dry inside and out, insert the plug into a suitable power socket (220 - 240 V~/50 Hz). Now switch the appliance on, without the accessories and without foodstuffs.

Leave the appliance door completely open. The appliance allows itself to be switched on with the time switch 5. As soon as the time switch 5 is set the control lamp 1 glows. As the heating elements are lightly greased, a slight smell may occur when first putting them into operation. This is harmless and stops after a short time.

<sup>3</sup>Take the electrical Oven with Grill and all accessories from the packaging. When opening and closing the door, do not place your fingers/hand between the door hinges. @@@@Unplug the power plug from the socket. @@@@Remove the plug from the power socket. @@If required, cover these with baking paper resp. smear the baking tray 8 with butter or oil. Allow the appliance to heat up for ca. @@@@- Then, select with the function switch 3 either upper heat (e. @@@@ the baking tray 8 and slide it in on one of the runners. @@@@The cooking and browning results are more even with the use of circulating air.

Take note of the instructions given in the recipes when using air circulation. You will hear a signal sound and the control lamp 1 extinguishes. After the appliance has switched itself off, the time switch 5 can continue to run for a short period. To lift the roasting grill 7 out, you must engage the small hook of the handle 9 in the grill from above. To lift the baking tray 8 out of the appliance, the large hooks of the handle 9 must engage with the front edge of the baking tray 8. The methods of operation are then the same as for grilling and baking without air circulation. In this chapter we provide you with various examples for the preparation of foods. These examples are recommendations. the preparation periods can vary. Take note of the preparation details given on the packaging of the foodstuff.

Remove the plug from the power socket. Allow the appliance to cool down before cleaning it or switching it back on. Preparation: <sup>3</sup>Mix together in a bowl, slowly and one after the other, the flour, baking powder, egg, milk, salt and sugar. Melt the butter in a pan and mix it into the pastry. <sup>3</sup>Subject to taste, blend in the nuts, chocolate flakes or chopped bananas.

<sup>3</sup>Place the mixture into typical muffin moulds and bake at 200° C with upper heat and air circulation for about 15 minutes. <sup>3</sup>Add the sugar, vanilla sugar, lemon peel and the eggs. <sup>3</sup>Mix together the flour, baking powder and salt, then blend them into the mixture with a mixing spoon. With the assistance of a mincer, biscuit shaper or a shaping bag with nozzle. <sup>3</sup>Place the biscuits onto the baking tray 8, this being first covered with baking paper.



[You're reading an excerpt. Click here to read official SILVERCREST SGB 1380 B2 ELECTRIC OVEN WITH GRILL user guide](http://yourpdfguides.com/dref/3949586)  
<http://yourpdfguides.com/dref/3949586>

<sup>3</sup>Then place a slice of cheese over each of the pineapple slices. <sup>3</sup>Lay the Hawaiian toasts on the grill 7 and then bake them for about 8 minutes on the middle level of the grill and baking machine, at approx. 180°C with upper heat and air circulation. <sup>3</sup>Lay the deep-frozen pizza without packaging onto the roasting grill 7. <sup>3</sup>Bake the pizza with upper and lower heating and switched on air circulation for ca. Subject to taste, caraway seeds, onions, cubed bacon .  
Preparation: <sup>3</sup>Knead everything together well and then shape it into small rolls. <sup>3</sup>Place the biscuits onto the baking tray 8 this being first covered with baking paper. These recipes are provided without guarantee. all ingredients and preparation information are guiding values.

Expand these recipe suggestions based on your personal experiences. We hope you enjoy the recipes and wish you "bon appetit". Always wait until until the appliance has cooled down before changing the bulb. Otherwise, there is a risk of being burnt! Unscrew the glass cover of the light bulb located at the right rear of the interior. Unscrew the defective bulb and replace it with the new bulb. Screw the glass cover back on hand-tight. It may not contain any egg yolk, otherwise the meringue will not be firm. <sup>3</sup>Beat the egg white at a slow speed, so that the bubbles formed in the meringue are not too large. Add a pinch of salt to taste. @@<sup>3</sup>Then beat it at the highest speed until stiff.

@@@There is a risk of receiving an electric shock! @@There is a risk of receiving an electric shock! They could damage the special coatings on the inner walls of the Oven with Grill. <sup>3</sup>Should soiling occur, the Oven with Grill can be cleaned with a soft cloth lightly moistened with a mild soapy solution. for stubborn staining or baked-on soiling , place a cloth soaked with a mild detergent on the contamination. Wait until the contamination has softened and then remove it! Rinse them off with clear water. The Oven with Grill must be completely dry before using it again after cleaning.

Therefore, after cleaning leave the appliance door open. Remove the plug from the wall socket and arrange for the appliance to be checked by specialists. Do not dispose of the appliance in your normal domestic waste. This product is subject to the European .



[You're reading an excerpt. Click here to read official SILVERCREST SGB 1380 B2 ELECTRIC OVEN WITH GRILL user guide](http://yourpdfguides.com/dref/3949586)  
<http://yourpdfguides.com/dref/3949586>