



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST SIKP 2000 B2. You'll find the answers to all your questions on the SILVERCREST SIKP 2000 B2 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SILVERCREST SIKP 2000 B2
User guide SILVERCREST SIKP 2000 B2
Operating instructions SILVERCREST SIKP 2000 B2
Instructions for use SILVERCREST SIKP 2000 B2
Instruction manual SILVERCREST SIKP 2000 B2

SILVERCREST®

KITCHEN TOOLS

Induction Hob SIKP 2000 B2



Induction Hob
Operating instructions

Induktiokaittolevy
Käyttöohje

Induktionskokplatta
Bruksanvisning

Induktionskogeplade
Betjeningsvejledning

Induktionskochplatte
Bedienungsanleitung

KOMPERNASS GMBH
BURGSTRASSE 21 · D-44867 BOCHUM
www.kompernass.com
ID-Nr.: SIKP 2000 B2.04/11-V2
IAN: 66570



[You're reading an excerpt. Click here to read official SILVERCREST SIKP 2000 B2 user guide](http://yourpdfguides.com/dref/4121990)
<http://yourpdfguides.com/dref/4121990>

Manual abstract:

These operating instructions are a component of this product. They contain important information about the safety, operation and disposal of the appliance.

*Before using this product familiarise yourself with all of these operating and safety instructions. Use this appliance only as described and only for the specified areas of application. Also, pass them on to whoever might acquire the appliance at a future date. Any copying or reproduction of it, including as extracts, as well as the reproduction of images, also in an altered state, is only permitted with the written authorisation of the manufacturer. This appliance is intended for the heating up or keeping warm of foods in domestic households and ONLY for use in dry accommodation. It is NOT intended for the warming or heating of other materials, for industrial or commercial applications or for use outdoors. **wARNING** Risks from unintended use! Risks can be engendered by the appliance if it is used for purposes not intended for it and/or for other types of use. Use the appliance exclusively for its intended purposes. observe the procedures described in these operating instructions. **NOTICE** Risks can be engendered by the appliance if it is used for purposes not intended for it and/or for other types of use. Use the appliance exclusively for its intended purposes. observe the procedures described in these operating instructions.*

@@@Lay the cable such that it cannot be pinched or otherwise damaged.

@@Always remove the plug from the mains power socket after use. @@Protect the cooking plate from damages: Do not burden it irregularly and do not allow objects to fall onto it. The appliance may not be taken into use if either the cooking plate or the housing is damaged. In this case, immediately remove the plug from the mains power socket and arrange for the appliance to be repaired. To avoid risks, arrange for defective plugs and/or cables to be replaced at once by qualified technicians or our Customer Services Department.

*if the surface is cracked, switch off the appliance to avoid the possibility of electric shock. **RISK OF ELECTRIC SHOCK** Ensure that the appliance, the cable and the plug are NEVER submersed in water or other fluids. Do not touch the area on which hot cookware has just been standing. Directly after cooking, this area could be very hot. This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used. Children should be supervised to ensure that they do not play with the appliance. This symbol warns you not to touch the cooking area directly after use. Never let the appliance be in use without supervision. Additionally, NEVER position the appliance below inflammable objects, especially not below curtains or drapes. NEVER heat up a securely closed container.*

Through heat expansion it could quickly cause an explosion. NEVER heat up an empty container. This would very quickly overheat - presenting both the risk of fire and of serious damage to the cooking area. Do not place any metallic objects on the cooking area, such as kitchen utensils or items of cutlery. They can become very hot in the energy area. Be careful when heating small amounts of oil - do not set a high performance level. If you do, the oil could ignite and catch fire! NEVER operate the appliance on a metal table or other metallic surface. This may heat up and thereby lead to a fire or the appliance itself could be damaged beyond repair. do not operate the appliance via an external time-switch or a separate remote control system. To avoid the risks and dangers presented by electromagnetic fields: Maintain a minimum distance of 1 meter to appliances that are sensitive to electromagnetic fields (e.

*Medical-technical devices such as heart pacemakers, hearing aids and other appliances may possibly need to be kept at a greater distance. The appliance is delivered with the following components as standard: Induction cooker plate Operating Instructions 1) Remove all parts of the appliance and the operating instructions from the carton. 2) Remove all packing material. **NOTICE** Check the contents to make sure everything is there and for visible damage. If the delivery is not complete, or is damaged due to defective packaging or through transportation, contact the Service Hotline (see chapter Service).*

The packaging materials are selected from the point of view of their environmental friendliness and disposal technology and are therefore recyclable. @@@@ (Reverse heating). @@@@ the diameter. @@@@Only then can the induction cooker function perfectly. there is an all-round free space of minimum 10 cm, e.

*g. @@@@Place the cookware in the middle of the cooking area 1. this may not project beyond the edge of the cooking area 1. not weigh more than 10 kg (together with the content). @@@@ remove the cookware from the cooking area 1 for longer than 15 seconds, or do not place one there. Although the energy field is immediately switched off with short-term cookware removals - the selected function remains, however, active. Around every 3 seconds a signal tone issues a reminder that, in roughly 15 seconds, the appliance will switch itself off automatically. If you replace the cookware back onto the cooking area 1 within 15 seconds, the selected function will continue on the same settings. **NOTICE** As soon as you take the cookware from the cooking area, "Err" flashes in the display.*

*The cooking area 1 also switches itself off after 120 minutes of continuous use, should you not have entered in any new settings in the meantime. Using the buttons + 7 and --- 9 then select the desired temperature (60 - 240°C). the default setting is a temperature of 120°C. **NOTICE** If you are using the setting "Temperature" for cooking, the appliance heats the cookware to the selected temperature. With the setting "Power level", the cookware is heated at different rates. The higher the selected power level, the faster the cookware is heated. **NOTICE** Warming up starts as soon as one of these buttons is activated. The setting can be adjusted at any time during the current usage. You can pre-select a time period from 0 - 180 minutes after which the cooking area 1 should switch itself off. Using the buttons + 7 and --- 9 you can select the desired countdown time from 0 - 180 minutes.*

forward in 1-minute increments (if you press and hold the button + 7, the time runs forward in 5 minute increments), backward in 5 minute increments.

When you have set the countdown time, and press no other button, the countdown will start automatically. The set power level/temperature appears alternately with the remaining countdown time in the display 8. If you have set a countdown time of 0, the appliance switches off after 5 seconds.



[You're reading an excerpt. Click here to read official SILVERCREST](http://yourpdfguides.com/dref/4121990)

[SIKP 2000 B2 user guide](http://yourpdfguides.com/dref/4121990)

<http://yourpdfguides.com/dref/4121990>

To prevent unauthorised switching on or a changing of the settings, by children for example, this appliance is fitted with a childproof lock. In the standby mode press and hold the button Child Lock 6 until a signal tone is heard and the control lamp Child Lock 3 glows. Now all the buttons, except Child Lock 6, are blocked. To release the child safety block, once again press and hold the button Child Lock 6 until a signal tone is heard and the control lamp Child Lock 3 extinguishes. the buttons are now released. @@@@These could damage the cooking area 1 and the areas made of synthetic materials.

Clean all surfaces and the cable 2 only with a lightly moistened cloth. In all cases, dry the appliance well before using it again. Burnt-on soiling on the cooking area 1 can be removed with a scraper suitable for glass hobs, available in most household equipment shops. Should soiling be visible in the area of the ventilation slots, you can attempt to remove this from outside with a vacuum cleaner. There is no cookware on the cooking area 1. the cookware is not suitable for induction cooking areas. The appliance is not being supplied with enough voltage (<160 V). The appliance is being supplied with too much voltage (> 270 V). There is a short circuit inside the appliance! The appliance is too hot (in power levels mode)! The temperature sensor underneath the cooking area 1 is defective or there is a short circuit. Use suitable cookw.



[You're reading an excerpt. Click here to read official SILVERCREST
SIKP 2000 B2 user guide
http://yourpdfguides.com/dref/4121990](http://yourpdfguides.com/dref/4121990)