



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST SKAT 1000 EDS A1 COFFEE MACHINE. You'll find the answers to all your questions on the SILVERCREST SKAT 1000 EDS A1 COFFEE MACHINE in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SILVERCREST SKAT 1000 EDS A1 COFFEE MACHINE
User guide SILVERCREST SKAT 1000 EDS A1 COFFEE MACHINE
Operating instructions SILVERCREST SKAT 1000 EDS A1 COFFEE MACHINE
Instructions for use SILVERCREST SKAT 1000 EDS A1 COFFEE MACHINE
Instruction manual SILVERCREST SKAT 1000 EDS A1 COFFEE MACHINE

SILVERCREST®

KITCHEN TOOLS

3

Coffee Machine SKAT 1000 EDS A1



Coffee Machine
Operating instructions

Kaffebryggare
Bruksanvisning

Kaffeemaschine
Bedienungsanleitung

Kahvinkeitin
Käyttöohje

Kaffemaskine
Betjeningsvejledning

KOMPERNASS GMBH
BURGSTRASSE 21 · D-44847 BOCHUM
www.kompernass.com
ID-Nr.: SKAT1000EDSA1-09/10-V1
IAN: 61 663



[You're reading an excerpt. Click here to read official SILVERCREST SKAT 1000 EDS A1 COFFEE MACHINE user guide](http://yourpdfguides.com/dref/3923712)

<http://yourpdfguides.com/dref/3923712>

Manual abstract:

Pass this booklet on to whoever might acquire the appliance at a future date. Remove the plug from the wall socket when you move the appliance, fill it with water, if it malfunctions, before cleaning it and when it is not in use. Do not fold or crush the power cable. Always check the power cable and plug before use. This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used. Children should be supervised to ensure that they do not play with the appliance. Lay the power cable in such a way that no one can tread on or trip over it. Never open the lid of the coffee machine during the brewing process. Remove the filter bag first when the coffee has drained away and it has cooled down. Do not hold your hands in the rising steam.

Never move/transport the appliance during the brewing process. Remove the glass carafe first when the brewing process is complete and the filter has fully drained itself. Always close the lid before switching the coffee machine on, there exists a risk of scalds from steam and hot water. Do not leave the appliance unattended when in use. Never operate the appliance without water.

Never place the appliance near sources of heat. In the event of danger, the plug must be quickly and easily accessible. Fill the water tank of the appliance exclusively with freshly drawn mains water. Before the first usage important: Never fill the appliance with water beyond the maxmarking (12 cups). Before the first use, pass 12 cups of water through the appliance.

Do not insert a filter bag and do not use any coffee powder. Operating Instructions Before taking the appliance into use check to ensure that all of the items listed have been supplied and that there are no visible signs of damage. The button MIN 5 for minutes, until the correct time is programmed in. Press the button PROG 6 twice, so that only the time is to be seen in the display 8. This coffee machine is intended exclusively for use in private households. do not use it commercially. This appliance is intended only for indoor use. Using the measuring spoon w place coffee powder into the filter bag. Fill the water tank 3 with the required amount of water. For this, use the scale 9.

Never fill the appliance with water beyond the max-marking (12 cups). The keepwarm plate 0 will keep the coffee warm for 2 hours. After two hours the coffee machine switches itself off automatically. The coffee machine is now switched off. Ensure that the water tank 3 is not filled beyond the Max. The coffee machine starts the brewing process at the programmed time. Before cleaning, always remove the plug from the wall power socket. Never submerge the coffee machine in water or other fluids. Allow the coffee machine to cool down for approx. Rinse them off with clear water.

Repeat the steps 3 to 5 three times. 7. 8. Rinse the coffee machine through 3 times with fresh water. The coffee machine is not working: The plug is not inserted into a power socket.

connect the appliance with the mains. Push the power plug into the wall socket. The coffee is too strong/too weak: There is too little/too much water in the water tank 3. Fill it with the correct amount of water. It is filled with too much/too little coffee powder.

Fill it with less/more coffee powder. The coffee powder is too finely/too coarsely ground. Select a different grade of grinding for your coffee powder. Remove scale from the coffee machine at regular intervals. The required descaling intervals can, subject to water hardness, be very variable. Scale removal is already necessary after ca. 30 brewing processes with hard water, after ca. 60 brewing processes with soft water. Your local water supplier will inform you about the water hardness level in your locality. Use only scale removal products that are suitable for coffee makers and pay heed to the instructions for use.

2 cups has passed through and then stop the brewing process by pressing twice on the button ON/AUTO/OFF 7. The integrated blue indicator lamp glows constantly and goes out after approx. Do not dispose of the appliance in your normal domestic waste. This product is subject to the European directive 2002/96/EC. Dispose of the appliance through an approved disposal centre or at your community waste facility. observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre. This warranty does not affect your statutory rights. The warranty period is not extended by repairs effected under warranty. this applies also to replaced and repaired parts.

Damages or defects discovered after purchase are to be reported directly after unpacking, at the latest two days after the purchase date. Repairs carried out after lapse of the warranty period are subject to charge. With this appliance you receive a warranty of 3 years from the date of purchase. Please retain your receipt as proof of purchase. Only in this way can a post-free despatch for your goods be assured.

If this product has been subjected to improper or inappropriate handling, abuse, or modifications not carried out by one of our authorised service centres, the warranty will be considered void. Lämna in den till ett företag som har tillstånd att ta hand om kasserade apparater av den här typen eller till rätt återvinningsstation på din kommuns avfallsanläggning. .



[You're reading an excerpt. Click here to read official SILVERCREST SKAT 1000 EDS A1 COFFEE MACHINE user guide](http://yourpdfguides.com/dref/3923712)
<http://yourpdfguides.com/dref/3923712>