



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST SMW 800 A1 MICROWAVE. You'll find the answers to all your questions on the SILVERCREST SMW 800 A1 MICROWAVE in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SILVERCREST SMW 800 A1 MICROWAVE
User guide SILVERCREST SMW 800 A1 MICROWAVE
Operating instructions SILVERCREST SMW 800 A1 MICROWAVE
Instructions for use SILVERCREST SMW 800 A1 MICROWAVE
Instruction manual SILVERCREST SMW 800 A1 MICROWAVE

SILVERCREST®

KITCHEN TOOLS

5 ⚙

Microondas SMW 800 A1
Forno a microonde



ES **Microondas**
Instrucciones de uso

PT **Microondas**
Manual de instruções

SE **Mikrowelle**
DE **Bedienungsanleitung**

IT **Forno a microonde**
MT Istruzioni per l'uso

GB **Microwave**
MT Operating instructions

KOMPERNASS GMBH
BURGSTRASSE 21 · D-44867 BOCHUM
www.kompernass.com
ID-Nr.: SMW800 A1-05/10-V2



[You're reading an excerpt. Click here to read official SILVERCREST SMW 800 A1 MICROWAVE user guide](http://yourpdfguides.com/dref/3036116)
<http://yourpdfguides.com/dref/3036116>

Manual abstract:

Do not jam anything between the front of the appliance and the door, and make sure that there is no residual food or cleaning agent on the seals. If the door or the door seal is damaged, under no circumstances may you continue to use the appliance. Removal of the appliance housing could cause the release of microwave energy. This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used. Children should be supervised to ensure that they do not play with the appliance. â· Children may only be allowed to use the appliance without supervision if appropriate instructions have been given that have provided the child with the knowledge to use the cooker in a safe manner and to understand the risks of improper use. â· Only use this appliance for its intended purpose as described in this manual. Do not use any caustic chemicals or vapours in this appliance. This microwave oven is especially designed for heating, cooking, grilling, or drying foodstuffs. It is not intended for use in industrial applications or laboratories.

â· Do not operate the microwave oven if the power cable or plug are damaged. To avoid injury, arrange for damaged power cables or plugs to be exchanged by qualified specialists before re-using the appliance. â· Keep children well away from the microwave oven when it is in use. Safety precautions for the avoidance of excessive contact with microwave energy *â· Do not try to operate the appliance while the door is open, as this can lead to you coming into contact with a potentially harmful dose of microwave radiation. It is also important not to break open or manipulate the safety locks .*

Should the lamp in the interior of the microwave oven need replacing, arrange for this to be done by a qualified specialist. â· Never touch the microwave oven door, housing, ventilation openings, accessories or the dinnerware directly after the grill, combi or automatic menu process. The parts will be very hot. Allow them to cool down before cleaning them. â· Ensure that the plug is at all times easily accessible, so that it can be quickly removed in the event of an emergency.

â· People fitted with a heart pacemaker should consult their doctor about the possible risks of using a microwave oven before taking one into use. â· Do not allow the power cable to hang from a table or work surface. After they have been warmed up, always open containers, popcorn-bags etc. With the opening pointing away from your body. Never stand directly against the microwave oven when opening the door. Hot oil can damage parts of the appliance and utensils and even cause skin burns. â· Always shake-up or stir warmed up baby glasses or bottles! The contents could have heated up unevenly and the baby could be burned/scalded by them. At all events, check their temperature before feeding them to the baby! Maintenance and repairs requiring the removal of access covers, which are intended for protection against contact with microwave radiation, are to be carried out by trained specialists only. Cooking utensils may become hot from the heat emitted by the food, so that you may require oven gloves to touch them. In this case, a check should also be made to ensure that the cooking utensils are suitable for use with the microwave oven.

Never leave the microwave oven unattended if you are heating foodstuffs packed in plastics or paper. Never place flammable materials close to the microwave oven or the ventilation openings. Remove ALL metallic closures from the packaging of the foodstuff that you intend to warm up. When making popcorn, use only popcorn-bags suitable for microwave ovens. â· Do not use the microwave oven to warm up cushions filled with kernels, cherry stones or gels. Do not use the microwave oven for storing foodstuffs or other objects. â· Do not exceed the cooking times detailed by the manufacturer. â· Do not place any objects on the microwave oven when it is in use. Do not place the microwave oven adjacent to other appliances discharging heat, for example, an oven. Clean the microwave oven thoroughly after warming up greasy foods, especially if they were not covered.

Allow the appliance to cool down completely before cleaning it. Residues such as fat or grease cannot be allowed to collect on the heating elements of the grill. They could possibly ignite. â· Do not thaw frozen fat or oil in the microwave oven. Never submerge the appliance, the power cable or the plug in water or other fluids.

â· Keep the power cable away from hot surfaces. Do not lead it in front of the microwave oven door. Never pour fluids into the ventilation openings or the safety locks. Should fluids ever enter them, immediately switch the microwave oven off and remove the plug from the mains power socket. To minimize the risk of fire in the microwave: When heating food in plastic or paper containers, always keep an eye on the microwave when it is in operation, as these materials can catch fire.

â· When heating drinks in the microwave, bubbling may be delayed when the drink boils. Therefore, be careful when handling the container. To avoid sudden simmering: - If possible, place a glass rod in the fluid for as long as it is being heated. Otherwise, they could explode. â· Proceed with caution when warming up fluids. Use only open containers, so that any air bubbles produced can escape. â· Should you notice smoke, switch the appliance off or remove the plug from the socket and keep the door closed to suffocate any possible flames. Do not use the microwave oven when it is empty. Never insert foreign objects into the ventilation openings or the door safety locks. Do not use metallic utensils which reflect microwaves and lead to sparking.

Do not place plastic containers in the microwave oven immediately after a grill, combi or automatic menu process. This microwave oven may not be located in areas with high humidity or where moisture could collect. â· Liquids and other foods must not be heated in airtight containers, as these may explode and damage the appliance. Insufficient cleanliness of the appliance could lead to the destruction of the upper surfaces, which themselves influence its useful lifespan and could possibly also lead to dangerous situations. Eggs in their shells and hard-boiled eggs should not be heated in the microwave oven as they could explode, even on completion of the heating process. Food with thick skins, such as potatoes, whole pumpkins, apples and chestnuts must be pricked before cooking. Plug the microwave into another wall socket. The microwave and the receiver should be connected to different circuits.



[You're reading an excerpt. Click here to read official SILVERCREST SMW 800 A1 MICROWAVE user guide](http://yourpdfguides.com/dref/3036116)

<http://yourpdfguides.com/dref/3036116>

Do not transport the microwave oven when it is in use. earthing information/correct installation This appliance must be earthed.

This appliance is to be connected only to a correctly earthed power socket. an individual circuit , solely for the connection of the microwave oven , is recommended. Danger: Improper use of the earthing connector could increase the risk of an electric shock. Note: Should you have any questions about earthing or about the instructions on the use of this electrical appliance given here, please consult an electrician or a maintenance technician. Neither the manufacturer nor the dealer can accept liability for damage to the microwave oven or injury to persons resulting from failure to comply with the instructions for electrical connection.

Interference with other appliances The operation of the microwave may cause interference on your radio, television or similar appliances. If such interference should occur, they may be reduced or corrected by the following remedial measures: Â· Move the microwave away from the receiver. 230 - 240 V ~ 50 Hz Maximum power consumption: 1200 W Maximum power output Microwave: 800 W Maximum power consumption Grill: 1000 W Microwave frequency: 2450 MHz Power rating: Food that is cooked too long can begin to smoke or catch fire. Cover the food during cooking with a lid suitable for microwave cookery. the lid prevents splashing and helps in the even cooking of the food.

While cooking, turn the food in the microwave once so that items such as chicken or hamburgers are cooked more quickly. Large pieces of food, such as joints of meat, must be turned at least once. Completely re-arrange foods such as meatballs after half the cooking time. Turn them and move the meatballs from the middle of the cookware to the edge. We recommend the use of round/oval cookware instead of square or oblong containers, as food in corner areas tends to overcook. The following list provides general hints to assist you in selecting the correct cookware. The ideal material for a microwave oven is microwave-permeable, allowing the energy to penetrate the container to heat the food. microwaves cannot permeate metal. Therefore, metal containers and cookware should not be used. microwaves cannot permeate metal.

For this reason metal containers and cookware should not be used. When using the microwave for heating do not use products made of recycled paper. These can contain minute fragments of metal, which can generate sparks and/or fires. @@@@If you do, it could damage the appliance.

@@@@@Ensure that the door of the microwave oven can be opened easily. Maintain a gap of at least 20 cm above the microwave oven. @@ â· Insert the plug into a power socket. Use a 230 - 240 V, 50Hz, mains power socket with a 16A fuse. @@@@With this you select the Grill operation. @@@@When the correct time is programmed in, press the button Clock 9 .

@@@@@After 10 minutes, the appliance switches itself off automatically. Wait until it has cooled down completely. @@@@The microwave oven is provided with a kitchen timer which you can use independently of the microwave your food3 Fish 100 - 1000g stuff (1 to 9). The respective programme numbers are to be found on the appliance. @@@@Press, repeatedly if need be, the button Weight/ Amount 7 until the required weight resp.

After a cooking process, the Glass plate 3 is very hot! You should therefore always use an oven cloth or heat resistant oven gloves when removing it from the cooking area. In order to achieve an even cooking or warming, in the programmes 5, 8 and 9 the food should be turned over after about two thirds of the cooking time. The microwave automatically interrupts the programme after this time: "turn" appears in the display 1 and signal tones sound to remind you of the requirement for turning the food. â· Open the door and turn the food over. Proceed cautiously with the possibly already hot food.

Programme 1: Beverages This programme runs only with utilisation of microwave power. Subject to the number of portions, the programme runs for between 1:30 and 3:50 minutes. â· Place the beverage that you wish to heat up on the Glass plate 3 in the cooking area. If you wish to place several glasses or cups in the microwave oven, ensure that the receptacles do not touch each other. If you wish to dispense with turning, simply wait for the signal tones to finish. The microwave continues your programme automatically after approx. Programme 2: Noodles This programme runs only with utilisation of microwave power. Subject to the weight programmed in, this programme runs for between 25 and 35 minutes. â· When cooking noodles use a tall container, as there is a great risk of it boiling over. â· Use as much water as when cooking them conventionally.

â· First of all, boil the water up in the covered container. then add the noodles. After this, you can start the auto-menu for noodles. â· Finally, allow the noodles to stand for approx. Should the meal not be properly cooked on completion of the auto-menu, continue cooking for a couple of minutes with the Quick start programme. For programmes that continue with utilisation of the grill function (Programme numbers 5, 8 and 9), the food can be cooked further with the grill function. Extended cooking with the grill function also increases the browning level of the food. When using the programmes with incorporated grill function, under no circumstances should you use any form of covering or cookware that is not heat resistant, as these could melt or ignite themselves!

Programme 3: Fish This programme runs only with utilisation of microwave power. Subject to the weight programmed in, this programme runs for between approx 3:30 and 16 minutes. â· Lay the pieces of fish on a plate suitable for microwave ovens, add a little butter or an other fat, add flavouring to taste and then start the auto-menu for fish.

Programme 4: Rice This programme runs only with utilisation of microwave power. Subject to the weight programmed in, this programme runs for between 16 and 36 minutes. â· When cooking rice use a tall container, as there is a great risk of it boiling over. Use 400 ml water for, for example, 200 gr of rice. â· Place the rice in the container, fill it with the required volume of liquids and then allow the rice to swell for approx 3 minutes.

After this, you can start the auto-menu for rice. Programme 5: Chicken This programme runs over several cooking stages, using microwave power and the grill function. Subject to the weight programmed in, this programme runs for between 39 and 50 minutes. Season to taste and then start the auto-menu for chicken. â· A whole chicken must be turned, otherwise the side facing upwards could dry out.

For this reason the microwave oven automatically interrupts the programme after about 2/3 of the time has elapsed and a signal tone sounds. Turn the chicken and then press the button Start/ Quick start q once again to continue the programme.



[You're reading an excerpt. Click here to read official SILVERCREST](http://yourpdfguides.com/dref/3036116)

[SMW 800 A1 MICROWAVE user guide](http://yourpdfguides.com/dref/3036116)

<http://yourpdfguides.com/dref/3036116>

Programme 6: Warming This programme runs only with utilisation of microwave power. Subject to the weight programmed in, this programme runs for between approx 1:00 and 6:20 minutes. Place the receptacle with the foodstuff that you wish to warm up on the glass plate 3 in the cooking area and then start the auto-menu for warming. Programme 7: Potatoes This programme runs only with utilisation of microwave power. Subject to the weight programmed in, this programme runs for between 3:50 and 11 minutes. Place the unpeeled potatoes onto a plate suitable for microwave ovens or into a receptacle. as far as possible, use potatoes of the same size. If possible, the potatoes should not touch each other.

Programme 8: Roasting This programme runs over several cooking stages, using microwave power and the grill function. Subject to the weight programmed in, this programme runs for between 16 and 60 minutes. Season to taste and then start the auto-menu for roasting. A whole roast must be used, otherwise the side facing upwards could dry out. For this reason the microwave oven automatically interrupts the programme after about 2/3 of the time has elapsed and a signal tone sounds. Turn the roast and then press the button Start/ Quick start q once again to continue the programme. Programme 9:

Kebabs This programme runs over several cooking stages, using microwave power and the grill function. Subject to the weight programmed in, this programme runs for between 9 and 27 minutes. Season to taste and then start the auto-menu for kebabs. The kebabs must be turned to ensure even cooking. For this reason the microwave oven automatically interrupts the programme after about 2/3 of the time has elapsed and a signal tone sounds. Turn the kebabs and then press the button Start/ Quick start q once again to continue the programme. If you wish to dispense with turning, simply wait for the signal tones to finish. The microwave continues your programme automatically after approx. With this programme you can preset a specific start time for the cooking or grilling of the foodstuff.

If the programming is carried out correctly, the appliance starts automatically at the programmed time. The clock must be correctly set to be able to select the function " Presetting the start time". This function enables you to defrost meat, poultry and fish with ease. The defrosting time and the power level are calculated and set automatically once you have entered the weight. Using the control dial q enter in the weight of the foodstuff to be defrosted.

You can enter in a weight of between 100 g and 1800 g. Turn the food that is being defrosted and then press the button Start/Quick start q once again to continue the programme. This could result in you receiving a fatal electric shock and the appliance could be damaged. If splashes of food or spilt liquids stick to the walls of the microwave, wipe them off with a damp cloth. Use a mild detergent if the microwave is more heavily soiled. Avoid using cleaning sprays and other aggressive cleaning agents, as they can cause stains, stripes or a blurring of the door surface. Clean the external walls with a damp cloth. To avoid damage to the functional components in the interior of the microwave, do not let liquids seep in through the ventilation slits. Clean the door, both sides of the viewing window, the door seals and adjacent components with a damp cloth. do not use abrasive cleaning agents.

If steam should collect on or around the outside of the appliance door, wipe it off with a soft towel. This can happen if the microwave is operated in extremely humid conditions. Clean the grill stand in warm dishwater and dry it well. regularly eliminate odours. Put a deep microwave bowl with a cup of water, juice and peel of a lemon into the microwave. heat for 5 minutes. Wipe off thoroughly and rub dry with a cloth. Should replacement of the bulb in the microwave be necessary, arrange for it to be exchanged by a dealer or consult our Service Department. The plug is not inserted into a power socket. Try another mains power socket.

The Glass plate 3 generates loud noise when revolving. The star rotator 4 and/or the floor of the cooking area are unclean. Clean the star rotator 4 and the floor of the cooking area. Do not dispose of this appliance in your normal domestic waste. This product is subject to the provisions of European Directive 2002/96/EC.

Dispose of the appliance through an approved disposal centre or at your community waste facility. observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre. The warranty covers only claims for material and manufacturing defects, but not for transport damage, for wearing parts or for damage to fragile components, e. This product is for private use only and is not intended for commercial use.

The warranty is void in the case of abusive and improper handling, use of force and internal tampering not carried out by our authorized service branch. Your statutory rights are not restricted in any way by this warranty. The warranty period will not be extended by repairs made under warranty. this applies also to replaced and repaired parts. Any damage and defects extant on purchase must be reported immediately after unpacking the appliance, at the latest, two days after the purchase date. Repairs made after the expiration of the warranty period are subject to payment. The warranty for this appliance is for 3 years from the date of purchase. The appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase. In the event of a warranty claim, please make contact by telephone with our Service Department.

Only in this way can a post-free despatch for your goods be assured. .



[You're reading an excerpt. Click here to read official SILVERCREST SMW 800 A1 MICROWAVE user guide](http://yourpdfguides.com/dref/3036116)
<http://yourpdfguides.com/dref/3036116>