



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST SMW 800 A2. You'll find the answers to all your questions on the SILVERCREST SMW 800 A2 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SILVERCREST SMW 800 A2

User guide SILVERCREST SMW 800 A2

Operating instructions SILVERCREST SMW 800 A2

Instructions for use SILVERCREST SMW 800 A2

Instruction manual SILVERCREST SMW 800 A2

SILVERCREST®

KITCHEN TOOLS

Microwave SMW 800 A2



Microwave
Operating instructions

Mikrovågsugn
Bruksanvisning

Mikrowelle
Bedienungsanleitung

Mikroaaltouuni
Käyttöohje

Mikrobølgeovn
Betjeningsvejledning

KOMPERNASS GMBH
BURGSTRASSE 21 · D-44867 BOCHUM
www.kompernass.com
ID-Nr.: SMW 800 A2-09/11-V3
IAN: 71 492/71 493



[You're reading an excerpt. Click here to read official SILVERCREST SMW 800 A2 user guide](http://yourpdfguides.com/dref/4282544)

<http://yourpdfguides.com/dref/4282544>

Manual abstract:

Only use this appliance for its intended purpose as described in this manual. Do not use any caustic chemicals or vapours in this appliance. This microwave oven is especially designed for heating, cooking, grilling, or drying foodstuffs. It is not intended for use in industrial applications or laboratories. Do not operate the microwave oven if the power cable or plug are damaged. To avoid injury, arrange for damaged power cables or plugs to be exchanged by qualified specialists before re-using the appliance. Keep children well away from the microwave oven when it is in use. Should the lamp in the interior of the microwave oven need replacing, arrange for this to be done by a qualified specialist. Never touch the microwave oven door, housing, ventilation openings, accessories or the dinnerware directly after the grill, combi or automatic menu process. The parts will be very hot.

Allow them to cool down before cleaning them. Ensure that the plug is at all times easily accessible, so that it can be quickly removed in the event of an emergency. Safety precautions for the avoidance of excessive contact with microwave energy - Do not try to operate the appliance while the door is open, as this can lead to you coming into contact with a potentially harmful dose of microwave radiation. It is also important not to break open or manipulate the safety locks. Do not jam anything between the front of the appliance and the door, and make sure that there is no residual food or cleaning agent on the seals. If the door or the door seal is damaged, under no circumstances may you continue to use the appliance. Removal of the appliance housing could cause the release of microwave energy. @@ Do not allow the power cable to hang from a table or work surface. @@With the opening pointing away from your body. @@@@ Always shake-up or stir warmed up baby glasses or bottles! The contents could have heated up unevenly and the baby could be burned/scalded by them.

At all events, check their temperature before feeding them to the baby! Maintenance and repairs requiring the removal of access covers, which are intended for protection against contact with microwave radiation, are to be carried out by trained specialists only. Cooking utensils may become hot from the heat emitted by the food, so that you may require oven gloves to touch them. In this case, a check should also be made to ensure that the cooking utensils are suitable for use with the microwave oven. Never leave the microwave oven unattended if you are heating foodstuffs packed in plastics or paper. Never place flammable materials close to the microwave oven or the ventilation openings. Remove ALL metallic closures from the packaging of the foodstuff that you intend to warm up. When making popcorn, use only popcorn-bags suitable for microwave ovens. Do not use the microwave oven to warm up cushions filled with kernels, cherry stones or gels. Do not use the microwave oven for storing foodstuffs or other objects. Do not exceed the cooking times detailed by the manufacturer.

Do not place any objects on the microwave oven when it is in use. Do not place the microwave oven adjacent to other appliances discharging heat, for example, an oven. Clean the microwave oven thoroughly after warming up greasy foods, especially if they were not covered. Allow the appliance to cool down completely before cleaning it. Residues such as fat or grease cannot be allowed to collect on the heating elements of the grill. They could possibly ignite. Do not thaw frozen fat or oil in the microwave oven. Do not use the microwave oven when it is empty. Never insert foreign objects into the ventilation openings or the door safety locks. Do not use metallic utensils which reflect microwaves and lead to sparking.

To minimize the risk of fire in the microwave: When heating food in plastic or paper containers, always keep an eye on the microwave when it is in operation, as these materials can catch fire. When heating drinks in the microwave, bubbling may be delayed when the drink boils. Therefore, be careful when handling the container. To avoid sudden simmering: - If possible, place a glass rod in the fluid for as long as it is being heated. Otherwise, they could explode.

Proceed with caution when warming up fluids. Use only open containers, so that any air bubbles produced can escape. Should you notice smoke, switch the appliance off or remove the plug from the socket and keep the door closed to suffocate any possible flames. Eggs in their shells and hard-boiled eggs should not be heated in the microwave oven as they could explode, even on completion of the heating process. @@@@ Keep the power cable away from hot surfaces.

Do not lead it in front of the microwave oven door. Never pour fluids into the ventilation openings or the safety locks. @@Do not transport the microwave oven when it is in use. @@@@Neither the manufacturer nor the dealer can accept liability for damage to the microwave oven or injury to persons resulting from failure to comply with the instructions for electrical connection. Interference with other appliances The operation of the microwave may cause interference on your radio, television or similar appliances. If such interference should occur, they may be reduced or corrected by the following remedial measures: · Move the microwave away from the receiver. Plug the microwave into another wall socket. The microwave and the receiver should be connected to different circuits. This appliance is intended for the heating up and preparation of foodstuffs according to the described procedures. Any modifications to the appliance shall be deemed to be improper use and implies substantial risk of accidents.

The manufacturer declines to accept responsibility for damage(s) arising out of usage contrary to the instructions specified below. This appliance is intended exclusively for use in domestic households! 230 - 240 V ~ 50 Hz Maximum power consumption: 1200 W Maximum power output Microwave: 800 W Maximum power consumption Grill: 1000 W Microwave frequency: 2450 MHz Power rating: Food that is cooked too long can begin to smoke or catch fire. Cover the food during cooking with a lid suitable for microwave cookery. the lid prevents splashing and helps in the even cooking of the food. While cooking, turn the food in the microwave once so that items such as chicken or hamburgers are cooked more quickly. Large pieces of food, such as joints of meat, must be turned at least once. Completely re-arrange foods such as meatballs after half the cooking time. Turn them and move the meatballs from the middle of the cookware to the edge. We recommend the use of round/oval cookware instead of square or oblong containers, as food in corner areas tends to overcook. The following list provides general hints to assist you in selecting the correct cookware.

The ideal material for a microwave oven is microwave-permeable, allowing the energy to penetrate the container to heat the food. microwaves cannot permeate metal.



[You're reading an excerpt. Click here to read official SILVERCREST SMW 800 A2 user guide](http://yourpdfguides.com/dref/4282544)
<http://yourpdfguides.com/dref/4282544>

Therefore, metal containers and cookware should not be used. microwaves cannot permeate metal. For this reason metal containers and cookware should not be used.

When using the microwave for heating do not use products made of recycled paper. These can contain minute fragments of metal, which can generate sparks and/or fires. Never use the grill stand or other metallic objects when you are using the appliance in the microwave mode or in the combination cooking process. Ensure that the electrical plug is accessible without problem, so that in case of danger it can be easily reached and removed. If you do, it could damage the appliance.

Ensure that the door of the microwave oven can be opened easily. Maintain a gap of at least 20 cm above the microwave oven. Insert the plug into a power socket. Use a 230 - 240 V ~, 50 Hz, mains power socket with a 16A fuse. With this you select the Grill operation. After 10 minutes, the appliance switches itself off automatically. Wait until it has cooled down completely. Now set the desired time using the control dial q. You can select any time range from 10 seconds to 95 minutes. 3 seconds the current time is shown once again.

the cooking timer progresses further in the background. It appears for a brief period in the kitchen timer. Can drain from the food. 1. Turn the Control dial q slowly to the left. Now set by, by rotating the control knob q the desired weight resp. Open the door and turn the food over.

Proceed cautiously with the possibly already hot food. The microwave continues your programme automatically after approx.

Programme 2: Noodles This programme runs only with utilisation of microwave power.

Subject to the weight programmed in, this programme runs for between 25 and 35 minutes. When cooking noodles use a tall container, as there is a great risk of it boiling over. Use as much water as you would in conventional cooking. First bring the the water to the boil: Set the microwave to its highest performance level (P800) and then start it. For a liter of water you need about 10 minutes to bring the water to the boil.

After this, you can start the auto-menu for noodles. Finally, allow the noodles to stand for approx. When using the programmes with incorporated grill function, under no circumstances should you use any form of covering or cookware that is not heat resistant, as these could melt or ignite themselves! After a cooking process, the Glass plate 3 is very hot! You should therefore always use an oven cloth or heat resistant oven gloves when removing it from the cooking area.

Take note that size, shape and the type of foodstuff determines the result of the cooking process. Programme 3: Fish This programme runs only with utilisation of microwave power.

Subject to the weight programmed in, this programme runs for between approx 3:30 and 16 minutes. Lay the pieces Preset". Programme in the required microwave function (cooking, grilling or automatic-menu (except auto-programme 6): For microwave operation: Press the button Operation r the appropriate number of times to set the required power level. Now set by, by rotating the control knob q, the desired weight resp. Before cleaning, switch the microwave oven off and remove the plug from the mains power socket. Under no circumstances should you immerse the appliance in water or other liquids.

Use a mild detergent if the microwave is more heavily soiled. rinse detergent residues off with clear water. Clean the external walls with a damp cloth. regularly remove splashes or contaminants.

Clean the door, both sides of the viewing window, the door seals and adjacent components with a damp cloth. do not use abrasive cleaning agents. If steam should collect on or around the outside of the appliance door, wipe it off with a soft towel. This can happen if the microwave is operated in extremely humid conditions. To erase the saved start time and thus cancel the saved procedure, press the Stop 0 button. Clean the grill stand t in warm dishwater and dry it well. regularly eliminate odours. Put a deep microwave bowl with a cup of water, juice and peel of a lemon into the microwave. heat for 5 minutes. Wipe off thoroughly and rub dry with a cloth.

Should replacement of the bulb in the microwave be necessary, arrange for it to be exchanged by a dealer or consult our Service Department. Do not dispose of this appliance in your normal domestic waste. This product is subject to the provisions of European Directive 2002/96/EC. observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre.

The plug is not inserted into a power socket. Try another mains power socket. The Glass plate 3 generates loud noise when revolving. The star rotator 4 and/or the floor of the cooking area are unclean. Clean the star rotator 4 and the floor of the cooking area.

Please retain your receipt as proof of purchase. Only in this way can a post-free despatch for your goods be assured. The warranty covers only claims for material and manufacturing defects, but not for transport damage, for wearing parts or for damage to fragile components, e. This product is for private use only and is not intended for commercial use. The warranty is void in the case of abusive and improper handling, use of force and internal tampering not carried out by our authorized service branch. Your statutory rights are not restricted in any way by this warranty. The warranty period will not be extended by repairs made under warranty. this applies also to replaced and repaired parts. Any damage and defects extant on purchase must be reported immediately after unpacking the appliance, at the latest, two days after the purchase date. Repairs made after the expiration of the warranty period are subject to payment.

Tryck en gång till på knappen Klocka 9 om du vill växla till 24-timmarsläget. Välj den automeny som passar till den mat som ska tillagas (1 till 9). Lämna in den till ett företag som har tillstånd att ta hand om den här typen av uttjänta apparater eller till din kommunala avfallsanläggning. .



[You're reading an excerpt. Click here to read official SILVERCREST SMW 800 A2 user guide](http://yourpdfguides.com/dref/4282544)
<http://yourpdfguides.com/dref/4282544>