



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST SMW 900 EDS A1. You'll find the answers to all your questions on the SILVERCREST SMW 900 EDS A1 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SILVERCREST SMW 900 EDS A1
User guide SILVERCREST SMW 900 EDS A1
Operating instructions SILVERCREST SMW 900 EDS A1
Instructions for use SILVERCREST SMW 900 EDS A1
Instruction manual SILVERCREST SMW 900 EDS A1

SILVERCREST®

KITCHEN TOOLS

5 ☆

Microondas de acero inoxidable SMW 900 EDS A1
Forno microonde in acciaio



ES Microondas de acero inoxidable
Instrucciones de uso

PT Microondas em aço fino
Manual de instruções

DE Edelstahl-Mikrowelle
Bedienungsanleitung

FR Forno microonde in acciaio
Istruzioni per l'uso

GB Stainless Steel Microwave
Operating instructions

KOMPERNASS GMBH
BURGSTRASSE 21 · D-44867 BOCHUM
www.kompernass.com
ID-Nr.: SMW 900 EDS A1-01/11-V2
IAN: 64337



[You're reading an excerpt. Click here to read official SILVERCREST SMW 900 EDS A1 user guide](http://yourpdfguides.com/dref/3971009)
<http://yourpdfguides.com/dref/3971009>

Manual abstract:

This appliance is not intended for commercial use. Safety precautions for the avoidance of excessive contact with microwave energy • Do not try to operate the appliance while the door is open, as this can lead to you coming into contact with a potentially harmful dose of microwave radiation. It is also important not to break open or manipulate the safety locks . • Do not jam anything between the front of the appliance and the door, and make sure that there is no residual food or cleaning agent on the seals. If the door or the door seal is damaged, **UNDER NO CIRCUMSTANCES** may you continue to use the appliance. Removal of the appliance housing could cause the release of microwave energy. This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used. Children should be supervised to ensure that they do not play with the appliance. • Children may only be allowed to use the appliance without supervision if appropriate instructions have been given that have provided the child with the knowledge to use the cooker in a safe manner and to understand the risks of improper use. Carefully read these safety and operating instructions before the first use and preserve them for future reference.

Only use this appliance for its intended purpose as described in this manual. Do not use any caustic chemicals or vapours in this appliance. This microwave oven is especially designed for the heating, cooking, grilling or drying of foodstuffs. It is not designed for use in industrial or laboratory areas. • Do not operate the microwave oven if the power cable or plug are damaged.

To avoid the risk of injury, arrange for damaged power cables or plugs to be exchanged by qualified specialists. • Keep children well away from the microwave oven when it is in use. Should the lamp in the interior of the microwave oven need replacing, arrange for this to be done by a qualified specialist. • NEVER touch the microwave oven door, housing, ventilation openings, accessories or the dinner ware directly after the grill, combi or automatic menu process. The parts will be very hot.

Allow them to cool down before cleaning them. • Ensure that the plug is at all times easily accessible, so that it can be quickly removed in the event of an emergency. • People fitted with a heart pacemaker should consult their doctor about the possible risks of using a microwave oven before taking one into use. • Do not allow the power cable to hang from a table or work surface. After they have been warmed up, always open containers, popcorn bags etc. With the opening pointing away from your body. NEVER stand directly against the microwave oven when opening the door. Hot oil can damage parts of the appliance and utensils and even cause skin burns. • ALWAYS shake up or stir warmed up baby glasses or bottles! The contents could have heated up unevenly and the baby could be burned/scalded by them. **AT ALL EVENTS**, check their temperature **BEFORE** feeding them to the baby! Maintenance and repairs requiring the removal of access covers, which are intended for protection against contact with microwave radiation, are to be carried out by trained specialists only.

Cooking utensils may become hot from the heat emitted by the food, therefore you may require oven gloves to touch them. In this case, a check should also be made to ensure that the cooking utensils are suitable for use with the microwave oven. NEVER leave the microwave oven unattended if you are heating foodstuffs packed in plastics or paper. Remove ALL metallic closures from the packaging of the foodstuff that you intend to warm up. When making popcorn, use only popcorn bags suitable for microwave ovens. Do not use the microwave oven to warm up cushions filled with kernels, cherry stones or gels. Do not use the microwave oven for storing food stuffs or other objects. • Do not exceed the cooking times detailed by the manufacturer. • Do not place any objects on the microwave oven when it is in use. Do not place the microwave oven adjacent to other appliances discharging heat, for example, an oven.

• Clean the microwave oven thoroughly after warming up greasy foods, especially if they were not covered. Allow the appliance to cool down completely before cleaning it. Residues such as fat or grease cannot be allowed to collect on the heating elements of the grill. They could possibly ignite. • Do not thaw frozen fat or oil in the microwave oven.

This microwave oven may not be located in areas with high humidity or where moisture could collect. Liquids and other foods must not be heated in airtight containers, as these may explode and damage the appliance. Insufficient cleanliness of the appliance could lead to the destruction of the upper surfaces, which themselves influence its useful lifespan and could possibly also lead to dangerous situations. NEVER submerge the appliance, the power cable or the plug in water or other fluids. • Keep the power cable away from hot surfaces.

Do not lead it in front of the microwave oven door. NEVER pour fluids into the ventilation openings or the safety locks. Should fluids ever enter them, IMMEDIATELY switch the microwave oven off and remove the plug from the mains power socket. To minimize the risk of fire in the microwave: When heating food in plastic or paper containers, always keep an eye on the microwave oven when it is in operation, as these materials can easily catch fire. When heating drinks in the microwave, bubbling may be delayed when the drink boils. Therefore, be careful when handling the container. Do not use the microwave oven when it is empty. NEVER insert foreign objects into the ventilation openings or the door safety locks. • Do not use metallic utensils which reflect microwaves and lead to sparking. Do not place plastic containers in the microwave oven immediately after a grill, combi or automatic menu process.

Otherwise, they could explode. • Proceed with caution when warming up fluids. Use only open containers, so that any air bubbles produced can escape. • Should you notice smoke, switch the appliance off or remove the plug from the socket and keep the door closed to suffocate any possible flames. • Eggs in their shells and hard boiled eggs should not be heated in the microwave oven as they could explode, even on completion of the heating process. Food with thick skins, such as potatoes, whole pumpkins, apples and chestnuts must be pricked before cooking. • Do not transport the microwave oven when it is in use. earthing information/correct installation This appliance must be earthed.



[You're reading an excerpt. Click here to read official SILVERCREST SMW 900 EDS A1 user guide](http://yourpdfguides.com/dref/3971009)
<http://yourpdfguides.com/dref/3971009>

This appliance is to be connected only to a correctly earthed power socket. an individual circuit , solely for the connection of the microwave oven , is recommended.

Danger: Improper use of the earthing connector could increase the risk of an electric shock. Take note: Should have any questions about earthing or the instructions on the use of this electrical appliance, please consult an electrician or a maintenance technician. Neither the manufacturer nor the dealer can accept liability for damage to the microwave oven or injury to persons resulting from failure to comply with the instructions for electrical connection.

Interference with other appliances The operation of the microwave may cause interference on your radio, television or similar appliances. If such interferences should occur, they may be reduced or corrected by the following remedial measures: A· Move the microwave away from the receiver.

â· Plug the microwave into another wall socket. The microwave and the receiver should be connected to different circuits. 230 240 V ~ 50 Hz Maximum power consumption: 2000 W Microwave: 1400 W Double Grill: 1700 W Top Grill: 1200 W Convection: 2000 W Maximum power output Microwave: 900 W Microwave frequency: 2450 MHz Power rating: Food that is cooked too long can begin to smoke or catch fire. Cover the food during cooking with a lid suitable for microwave cookery. the lid prevents splashing and helps in the even cooking of the food.

While cooking, turn the food in the microwave once so that items such as chicken or hamburgers are cooked more quickly. Large pieces of food, such as joints of meat, must be turned at least once. Completely rearrange foods such as meatballs after half the cooking time. Turn them and move the meatballs from the middle of the cookware to the edge. When using the microwave for heating do not use products made of recycled paper. These can contain minute fragments of metal, which can generate sparks and/or fires. We recommend the use of round/oval cookware instead of square or oblong containers, as food in corner areas tends to overcook. The following list provides general hints to assist you in selecting the correct cookware. Heat resistant glass Non heat resistant glass Heat resistant ceramics The ideal material for a microwave oven is microwave permeable, allowing the energy to penetrate the container to heat the food. microwaves cannot permeate metal.

For this reason metal containers and cookware may not be used. NEVER use the grill stand or other metallic objects when you are using the appliance in the microwave mode or in the combination cooking process. Select an even surface offering sufficient space for the adequate ventilation of the appliance: Ensure that you maintain a minimum distance of 10 cm from neighbouring walls/surfaces. Make sure that the door of the microwave oven can be opened easily. Maintain a gap of at least 20 cm above the microwave oven. Ensure that the electrical plug is accessible without problem, so that in case of danger it can be easily reached and removed. If you do, it could cause damage to the appliance. Install the appliance as far away as possible from radios and televisions. Do not install the microwave above a cooker or any other appliance generating heat. This microwave oven is not suitable for installation in a kitchen cabinet. In closed cabinets sufficient ventilation for the appliance cannot be assured. The appliance could be damaged and there would be the additional risk of a fire! Insert the plug into a mains power socket. Use a 230 240 V, 50 Hz mains power socket with a 16 A fuse. @@@@With this, you have chosen to use the grill with top and bottom heat. @@@@When the correct time is programmed in, press the button Clock 8 .

the colon blinks to indicate that the clock is running. @@@@After 10 minutes, the appliance switches itself off automatically. Wait until it has cooled down completely. @@@@ the display lighting is first dimmed slightly. @@The microwave oven is pable for, for example potatoes.

@@When cooking with convection, hot air circulates in the oven. @@@@Open the door and insert the food to be cooked into the microwave.

@@With this, for example, meat is juicy and tender but still crisp. @@@@Never directly onto the turntable 3! @@The defrosting time and the power level are calculated and set automatically once you have entered the weight. 1. In standby mode turn the control dial 0 anti clockwise until "A 12" and appear in the display 1. Now select the food to be defrosted by turning the control dial 0. When the required weight appears in the display 1, press the button Start/Quickstart 0 . To ensure optimum defrosting, it is necessary to turn the food during the thawing process. The appliance reminds you of the need to turn by sounding signal tones and "turn" appears on the display 1.

Open the appliance door, turn the foodstuff and then re close the door. press the button Start/Quickstart 0 to continue the thawing process. If you do not want to turn the foodstuff, just wait for the signal tones to stop. the appliance will automatically continue the thawing process. We recommend that you do turn the food. For foods that are intended to be prepared in the Auto Menu modus it is not necessary to programme in the period of the cooking process and the power level. It is quite sufficient to enter which type of food is to be cooked/boiled, and its weight. Always place the food to be defrosted on dishes suitable for use in a microwave oven. Never directly onto the turntable 3! 1. In standby mode turn the control dial 0 anti clockwise until "A 13" and appear in the display 1. The microwave calculates the time/operational level for fresh foods. Frozen foods are not cooked with the timings set by the microwave (except for automatic programme "Pizza"). If needs be, defrost frozen foods with the defrost programme beforehand (see section "Defrosting"). To ensure optimum defrosting, it is necessary to turn the food during the thawing process. The appliance reminds you of the need to turn by sounding signal tones and "turn" appears on the display 1.

Open the appliance door, turn the foodstuff and then re close the door. press the button Start/Quickstart 0 to continue the thawing process. If you do not want to turn the foodstuff, just wait for the signal tones to stop. the appliance will automatically continue the thawing process. We recommend that you do turn the food.

Turn the control dial 0 (in standby operation) slowly to the left to call up the automatic menu mode. By turning the control dial 0 select the automatic menu appropriate for your food. When, by turning the control knob 0 to the left you have reached the automatic menu mode, you can, by then turning it to the right, make your selection from the automatic menus in the running order A01, A02, A03 etc. Press, if necessary repeatedly, the button Weight/Kitchen Timer w until the desired weight appears in the display 1.



[You're reading an excerpt. Click here to read official SILVERCREST](http://yourpdfguides.com/dref/3971009)

[SMW 900 EDS A1 user guide](http://yourpdfguides.com/dref/3971009)

<http://yourpdfguides.com/dref/3971009>

To obtain uniform warming or cooking, some food stuffs should be turned after 1/2 2/3 of the period of the cooking process. The microwave oven will stop automatically after this time, four signal tones sound and "Turn" appears on the display 1. Proceed cautiously with the possibly already hot food. If you do not want to turn the foodstuff, just wait for the signal tones to stop. The appliance will automatically continue the cooking process. We recommend that you do turn the food. Should the meal not be properly cooked on completion of the auto menu, continue cooking for a couple of minutes with the Quick start programme.

For the programmes with enabled Grill function (A 01, A 02, A 03, A 05, A 06, A 09), under NO circumstances may you use covers or non heat resistant dishes, as they can melt or catch fire! Example 3: To heat 300 g of appetizers, proceed as follows: 1. In standby mode turn the control dial 0 slowly to the left until "A 07" appears in the display 1. Baking Pizza With the automatic programme "Pizza" you can prepare delicious pizza in the microwave. 1. In standby mode turn the control dial 0 slowly to the left until "A 03" appears in the display 1. Repeatedly press the button Weight/Kitchen Timer w until the desired weight appears in the display 1. After a cooking process, the turntable 3 is very hot! You should therefore always use an oven cloth or heat resistant oven gloves when removing it from the cooking area. Take note that size, shape and the type of foodstuff help determine the result of the cooking process. Example 1: Proceed as follows to cook 400 g of vegetables or fruit: 1. In standby mode turn the control dial 0 slowly to the left until "A 10" appears in the display 1. Example 2: To heat 300 ml water, proceed as follows: 1. In standby mode turn the control dial 0 slowly to the left until "A 04" appears in the display 1. Use the memory function if you wish to carry out up to 3 processes, one after the other. After finishing a process, the acoustic signal sounds once and the next process starts immediately.

If you are preparing pizza, you can place it directly on the turntable 3. It will be very crispy. Ensure that the edge of the pizza does not extend to the walls of the cooking area during preparation. Example: Proceed as follows to cook a deep frozen, 450 g heavy pizza: 1. In standby mode turn the control dial 0 slowly to the left until "A 03" appears in the display 1.

For example, a grilling, with bottom heat, for 3 minutes. The microwave starts the first operation. When an operation is completed, you will hear a signal tone and the oven automatically starts the next operation. With this programme you can preset a specific start time for the cooking or grilling of the foodstuff. If the programming is carried out correctly, the appliance starts automatically at the programmed time. Take note: The clock must be correctly set to be able to select the function "Selecting the start time". Enter the desired cooking program: For microwave operation: Press the button Operation r the appropriate number of times to set the required power level. For convection operation: Press the button Convection 9 the appropriate number of times to set the required temperature. Repeatedly press the button Weight/Kitchen Timer w until the desired weight appears in the display 1. Press the button Clock/Timer 8.

The display 1 shows the currently set time and the hour digit flashes. Press the button Clock/Timer 8, now the minute figure flashes. Then, while the start time is to be seen in the display 1, press the button Stop/Child safety q. Locate the meat patties evenly on a plate suitable for microwave ovens and then place it on the turntable 3. 100 g grated cheese with a fat content of 25% to 30% fat in dry matter, salt/pepper) Use a microwave proof, round dish with a lid, height 5.6 cm and a diameter of about 22 cm. Preparation: Cut the potatoes into slices approximately 3-4 mm thick. Lay about half of the potatoes in the casserole dish in the style of roof tiles. Then add half of the spices, and about 150 g of cream. Lay the rest of the sliced potatoes on it, also in the style of roof tiles. Sprinkle the remaining cheese over the potatoes and pour the remaining cream over them. Cover the dish with the lid and place it in the centre of the turntable 3. The best results are achieved with the following self programmed combination: Preparation The best results are achieved with the following self programmed combination (See also the chapter memory function): Process 3: Convection 230°C, 2:00 Mins (depending on personal taste, a time of up to 4:00 min can also be possible). Convection 170°C, Duration: 12 Minutes If you wish to bake additional rolls directly afterwards, shorten the baking time for these by about 1-2 minutes, as the appliance is now already pre heated. 3 eggs (55-60 g with shell/Size M) Fill the muffin pastry into commercial paper baking cases (diameter 45 mm, height 28 mm) Before cleaning, switch the microwave oven off and remove the plug from the mains power socket.

Otherwise, there is the great risk of receiving an electric shock! UNDER NO CIRCUMSTANCES should you immerse the appliance in water or other liquids. This could result in you receiving a fatal electric shock and the appliance could be damaged. Clean the external walls with a damp cloth. Clean the door, both sides of the viewing window, door seals and adjacent components with a damp cloth. Should, due to the number of muffins, multiple baking operations be necessary, preheating is required only once.

Should steam collect on or around the outside of the appliance door, wipe it off with a soft towel. This can happen if the microwave is operated in extremely humid conditions. Clean the grill stand in warm dishwater and dry it well. Regularly eliminate odours. Place a deep microwave bowl with a cup of water and the juice and peel of a lemon into the microwave oven. Heat it up for 5 minutes. Wipe off thoroughly and rub dry with a cloth. Should replacement of the bulb in the microwave be necessary, arrange for it to be exchanged by a dealer or consult our Service Department. The turntable 3 generates loud noise when revolving. The small rollers 4 and/or the floor of the cooking area are unclean.

Clean the rollers 4 and the floor of the cooking area. Remove the plug from the mains power socket, open the microwave door and allow the appliance to cool down. There is an error during the heating up of the appliance. Due to a short circuit or open circuit voltage, the microwave has switched into fault protection. Metals in the cooking area, which can lead to the above problem when using the microwave function. Otherwise, please contact our Customer Support. The plug is not inserted into a power socket. Try another mains power socket.



[You're reading an excerpt. Click here to read official SILVERCREST SMW 900 EDS A1 user guide](http://yourpdfguides.com/dref/3971009)
<http://yourpdfguides.com/dref/3971009>

Do not dispose of this appliance in your normal domestic waste. This product is subject to the provisions of European Directive 2002/96/EC. Dispose of the appliance through an approved disposal centre or at your community waste facility. observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre. The warranty period is not extended by repairs effected under warranty. this applies also to replaced and repaired parts.

Damages or defects discovered after purchase are to be reported directly after un packing, at the latest two days after the purchase date. Repairs carried out after lapse of the warranty period are subject to charge. You receive a 3 year warranty for this appliance as of the purchase date. This appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase.

In the case of a warranty claim, please make contact by telephone with our service department. Only in this way can a post free despatch for your goods be assured. The warranty covers only claims for material and manufacturing defects, not for transport damages, worn parts or for damage to fragile components, e. This product is for private use only and is not intended for commercial applications. In the event of misuse and improper handling, use of force and interference not carried out by our authorized service branch, the warranty will be come void. Your statutory rights are not restricted in any way by this warranty. .



**[You're reading an excerpt. Click here to read official SILVERCREST
SMW 900 EDS A1 user guide
http://yourpdfguides.com/dref/3971009](http://yourpdfguides.com/dref/3971009)**