



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST SND 3600 A1 SLIDE AND NEGATIVE SCANNER. You'll find the answers to all your questions on the SILVERCREST SND 3600 A1 SLIDE AND NEGATIVE SCANNER in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SILVERCREST SND 3600 A1 SLIDE AND NEGATIVE SCANNER
User guide SILVERCREST SND 3600 A1 SLIDE AND NEGATIVE SCANNER
Operating instructions SILVERCREST SND 3600 A1 SLIDE AND NEGATIVE SCANNER
Instructions for use SILVERCREST SND 3600 A1 SLIDE AND NEGATIVE SCANNER
Instruction manual SILVERCREST SND 3600 A1 SLIDE AND NEGATIVE SCANNER

SILVERCREST®

3  Slide & Negative Scanner SND 3600 A1



- ⑧ **Slide & Negative Scanner**
Operating instructions
- ⑨ **Negativien digitoinfillaite**
Käyttöohje
- ⑩ **Scanner för negativ**
Bruksanvisning
- ⑪ **Negativ scanner**
Betjeningsvejledning

KOMPERNASS GMBH
BURGSTRASSE 21 · D-44867 BOCHUM
www.kompernass.com
ID-Nr.: SND 3600 A1-12/10-V3
IAN: 55973



[You're reading an excerpt. Click here to read official SILVERCREST SND 3600 A1 SLIDE AND NEGATIVE SCANNER user guide](http://yourpdfguides.com/dref/3861510)
<http://yourpdfguides.com/dref/3861510>

Manual abstract:

The operating instructions must be constantly kept available close to the device. They are to be read and used by anyone assigned to the operation and repairing of the device. Keep these operating instructions and hand them over with the device to any future owners. Any copying and/or printing, including partial copying/printing, as well as reproductions of the diagrams, even in an altered state is only allowed with written permission from the manufacturer. All technical information, data and information for connection and operation, contained in these operating instructions correspond to the latest at the time of printing and, to the best of our knowledge, take into account our previous experience and know-how. No claims can be derived from the details, illustrations and descriptions in these instructions. The manufacturer assumes no responsibility for damage caused by failure to observe the instructions, improper use, inappropriate repairs, making unauthorized changes or for using unapproved replacement parts. In the current operation instructions the following warnings are used: **WARNING** A warning of this danger level signifies a possible dangerous situation. If the dangerous situation is not avoided it can lead to injuries.

The directives in this warning are there to avoid personal injuries.

IMPORTANT A warning of this danger level signifies possible property damage. If the situation is not avoided it can lead to property damage. The directives in this warning are there to avoid property damage. @@@@In this chapter you receive important safety information regarding handling of the device. This device complies with the statutory safety regulations.

Improper use can lead to personal injury and property damage. For safe handling of the device observe the following safety information: Before use check the device for visible external damage. Do not put into operation a device that is damaged or has been dropped. Damaged cables or connections should be replaced by authorized qualified persons or by the customer service department. Persons who, due to their physical, intellectual or motor abilities, are incapable of operating the device safely may only use the device under supervision or direction from a responsible person.

Only permit children to use the device under supervision. Repairs should only be carried out by authorized specialist companies or by the customer service department. A repair to the device during the warranty period may only be carried out by a customer service department authorized by the manufacturer otherwise no additional warranty claims can be considered for subsequent damages. Defective components may only be replaced with original replacement parts. Only by using original replacement parts can you guarantee that the safety requirements are complied with. Do not carry out any unauthorised reconstructions or alterations to the device. Protect the device from moisture and liquid penetration. **WARNING** Personal injury and property damage can occur during initial operation of the device! Observe the following safety information to avoid danger: Packaging material should not be used as a play thing. There is a risk of suffocation! The device is delivered with the following components as standard: Scanner 2 x Slide holder 2 x Negative holder Programme CD Cleaning brush Operating instructions **NOTICE** Check the contents to make sure everything is there and for visible damage. If the contents are not complete or are damaged due to defective packaging or through transportation contact the service hotline (see the section "Service").

The packaging materials are selected from the point of view of their environmental friendliness and disposal technology and are therefore recyclable. The recirculation of packaging into the material circuit saves on raw material and reduces generated waste. Dispose of packaging material that is no longer needed according to the regionally established regulations. @@@@ insert the film strip into the holder correctly orientated. Close the holder making sure that the cover locks into place. @@@@Close the holder making sure that the cover locks into place. @@You can find further information in the programme's online help. @@@@The window "Capture from scanner" will be displayed. @@@@ the scan motif will be displayed in the preview field. @@ adjust the holder , if required , until the scan motif is displayed optimally in the preview window.

If necessary, you can set the electrical balance (Balance), the exposure (Exposure), the brightness (Brightness), the contrast (Contrast) and the saturation (Saturation) by pressing on the button "Adjust". Click on the "OK" button to accept the setting and return to the "Capture" window. Remove the USB cable 4 from the USB port of your computer. Make sure when you are cleaning the device that no moisture gets inside in order to avoid irreparable damage to it.

Clean the housing exclusively with a soft damp cloth and a mild dishwashing liquid.

Clean the surface of the scanner lens inside of the device with a cleaning brush 7 . For this, push the cleaning brush with the cleaning surface facing downwards only into the right slot 3 . In this chapter you will receive important information for malfunction localization and remedies. **WARNING** Observe the following safety information to avoid danger and property damage: Repairs to electronic devices may only be carried out by specialists who have been trained by the manufacturer. The following table will help with localizing and remedying minor malfunctions: Malfunction LED does not light up Possible cause The device is not connected correctly.

NOTICE If you cannot solve the problem with the aforementioned methods please contact customer service. Do not dispose of the device in your normal domestic waste. This product is subject to the European directive 2002/96/EC-WEEE (Waste Electrical and Electronic Equipment). Dispose of the device through an approved disposal centre or at your community waste facility. observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre. This device complies regarding conformity with the basic requirements and other relevant provisions of the directive for electromagnetic compatibility 2004/108/EC. The complete original declaration of conformity can be obtained from the importer. You receive a 3-year warranty for this device as of the purchase date. @@Please retain your receipt as proof of purchase.

@@Only in this way can a post-free despatch for your goods be assured. @@@@In the event of misuse and improper handling, use of force and interference not carried out by our authorized service branch, the warranty will become void. Your statutory rights are not restricted in any way by this warranty. The guarantee period will not be extended by the warranty. Damages and defects possibly present at time of purchase must be reported immediately after unpacking or at the latest two days after the purchase date.



[You're reading an excerpt. Click here to read official SILVERCREST
SND 3600 A1 SLIDE AND NEGATIVE SCANNER user guide
http://yourpdfguides.com/dref/3861510](http://yourpdfguides.com/dref/3861510)

After expiration of the guarantee period incidental repairs are liable to costs. Diabilder USB-anslutningskabel Hållare till fotonegativ Hållare till diabilder Rengöringsborste Felaktigt utförda reparationer utgör en avsevärd risk för användaren och risk för skador på produkten. Lämna in den till ett företag som har tillstånd att ta hand om den här typen av uttjänta apparater eller till din kommunala avfallsanläggning. .



[You're reading an excerpt. Click here to read official SILVERCREST
SND 3600 A1 SLIDE AND NEGATIVE SCANNER user guide
http://yourpdfguides.com/dref/3861510](http://yourpdfguides.com/dref/3861510)