



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST SPU 900 A1. You'll find the answers to all your questions on the SILVERCREST SPU 900 A1 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SILVERCREST SPU 900 A1**  
**User guide SILVERCREST SPU 900 A1**  
**Operating instructions SILVERCREST SPU 900 A1**  
**Instructions for use SILVERCREST SPU 900 A1**  
**Instruction manual SILVERCREST SPU 900 A1**

**SILVERCREST®**  
HOME TECH

SE DK

Projection Alarm Clock SPU 900 A1



GB Projection Alarm Clock DE Projektionswecker  
IE Operating manual AT Bedienungsanleitung  
FI Projektiokello CH Käyttöohje  
SE Projektionsväckarklocka Bruksanvisning  
DK Projektionsvækkeur Betjeningsvejledning

KOMPERNASS GMBH  
BURGSTRASSE 21 · D-44867 BOCHUM  
www.kompernass.com  
ID-Nr.: SPU 900 A1-05/11-V6



[You're reading an excerpt. Click here to read official SILVERCREST SPU 900 A1 user guide](http://yourpdfguides.com/dref/4124361)  
<http://yourpdfguides.com/dref/4124361>

**Manual abstract:**

Pass this booklet on to whoever might acquire the appliance at a future date. All rights including those of photographic reproduction, duplication and distribution by means of particular methods (for example data processing, data carriers and data networks), wholly or partially as well as substantive and technical changes are reserved. Warning A warning of this danger level signifies a possible dangerous situation. If the dangerous situation is not avoided it can lead to injuries. Follow the directives in this warning notice, so as to avoid personal injuries. Important A warning of this danger level signifies possible property damage. If the situation is not avoided it can lead to property damage. The directives in this warning are there to avoid property damage. Notice A notice signifies additional information that assists in the handling of the appliance. warning: Risk of electric shocks.

Connect the appliance only to correctly installed and earthed mains power sockets. Ensure that the rating of the local power supply tallies completely with the details given on the rating plate of the appliance. arrange for Customer Services to repair or replace connecting cables and/or appliances that are not functioning properly or have been damaged. Keep the power cable and appliance away from children. @@@@ Always take hold of the power cable by the plug.

Do not pull on the cable itself and never touch the power cable with wet hands, this could result in either a short circuit or you receiving an electric shock. Do NOT place the appliance itself, furniture items or similar objects on the power cable and take steps to ensure it cannot become jammed or trapped in any way. Make sure that the power cable does not become wet during operation. You are not permitted to open the appliance housing or to repair or modify the appliance. If the housing is opened or irregular modifications are made, you run the risk of receiving a potentially fatal electric shock and the warranty lapses.

Protect the appliance against drip and spray water. Do not place any waterfilled vessels (e. The safety concept can work only if the appliance is in a faultless condition. Always remove the power plug before cleaning the appliance. NEVER make a knot in the power cable and do NOT bind it together with other cables. The power cable must be laid so that no one can step on or trip over it. The power plug must always be easily accessible, so that in the event of an emergency the appliance can be quickly disconnected from the mains power supply. This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intel-3- Lectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used. Children should be supervised to ensure that they do not play with the appliance. Arrange for the appliance to be checked and, if necessary, repaired by qualified technicians.

Keep batteries well away from children. Children could put batteries into their mouths and swallow them. Do not throw batteries into a fire. do not recharge the batteries. Never open batteries, never solder or weld batteries. Do not use the appliance near hot surfaces. Do not place the appliance in locations that are subject to direct sunlight. If you do, it may overheat and become irreparably damaged. Never cover the ventilation slots of the appliance while it is switched on. Do not place open fire sources, such as candles, on or near the appliance.

caution with thunderstorms! Equipment connected to a power supply can be damaged during a thunderstorm. You should therefore always pull the power plug from the power socket when there is a storm. Warnings about interaction with batteries The appliance uses batteries for memory storage. when handling batteries , please observe the following: · If you do not intend to use the appliance for an extended period, remove the batteries. Should the batteries leak, put on a pair of protective gloves and clean the battery compartment and terminals with a dry cloth.

caution! Never subject the batteries to excessive heat (i. There is a risk of explosion if the batteries are improperly replaced. Only replace with the same or equivalent types. Notice regarding separation from mains-power The button on this appliance does not completely disconnect it from the mains power network. additionally , the appliance consumes power when in standbymode.

To completely separate the appliance from mains power, the plug MUST be removed from the wall socket. Notice regarding electrical power surges (EFT / electrical fast transient) and electrostatic discharges: In a case of malfunction due to an electrical fast transient (power surge) and/ or electrostatic discharge, the appliance must be returned to default settings in order to re-establish normal operation. This could mean that it must be disconnected from the power supply and then reconnected. The batteries (if present) must be removed and then reinserted. Q VOL-- - Volume decrease - Volume increase w VOL + e

MODE/LOCK - Recalls the adjustable parameters/Button lock r Loudspeaker t Projektor - projects the time onto a wall - Snooze button,/ y SNOOZE/ DIMMER Brightness switch - Switches the radio waveu BAND band - Selector button downi DOWN wards - Selector button upo UP wards a PROJECTION - Time projection on/off switch s PRESET/ALARM + - Radio station/alarm memory upwards/ d PRESET/ALARM - Radio station/alarm memory downwards - switches the memory f PAGE/AL. 15 seconds, the appliance saves the adjustment and then leaves the programming mode. Pressing and holding down one of button changes the time in quick succession. Pressing and holding one of the buttons changes the date in a fast sequence. In the display g the indicator for the city sign blinks below the "LOCAL CITY" display. Pressing and holding one of the buttons changes the indicator faster.

First take all appliance components from the packaging and remove all packing foil and tape. check the appliance for signs of visble damage. Inserting the back-up batteries With the backup batteries all individual device settings are retained in the event of a power failure. For this you require two 1. Note: The back-up batteries must be checked at least once per year and, if necessary, exchanged for new ones. providing mains power · Insert the plug into a mains power socket. @@@@Should you wish to interrupt this process, press any button. @@@@ 3. @@@@ summer time. @@They have no summer time.

@@@Pressing and holding one of the buttons changes the indicator faster. 3. @@ 4. Should you wish to programme in further dates, press the PAGE/AL. SET button f to select a memory slot from 2-10.

@@@@@Press the button UP o to return to the 24 hour modus. @@@@Press the MODE/LOCK button eonce again to close adjustment.

@@@@@If a button is not pressed within approx. 15 seconds, the appliance saves the adjustment and then leaves the programming mode.



**[You're reading an excerpt. Click here to read official SILVERCREST SPU 900 A1 user guide](http://yourpdfguides.com/dref/4124361)**  
<http://yourpdfguides.com/dref/4124361>

1.

With the radio switched off, press the PAGE/AL. sET button f to call up the alarm function. Using the PRESET/ALARM +/- buttons s/d, select the desired alarm memory position. Ing down one of the buttons DOWN/UP i/o changes the alarm time in quick succession. Press the button SNOOZE/DIMMER y to set the weekdays on which you require the alarm function: You can choose between "workdays" (MON, TUE, WED, THU, FRI), "weekends" (SAT, SUN) and "every day" (MON, TUE, WED, THU, FRI, SAT, SUN). 5. Hold the button SNOOZE/DIMMER y pressed down for 2 seconds when you want to be woken on a specific weekday. To return to the selection of workdays, weekends or whole weeks, once again hold the SNOOZE/DIMMER button y pressed down for 2 seconds. If needed, programme the other memory positions for alarm times as detailed above. And the alarm function "Radio" is selected, the radio switches itself on with increasing sound volume and the last adjusted radio station for one hour.

To close the individual alarm function press any button except the SNOOZE/DIMMER button y. The Slumber function When you press the SNOOZE/DIMMER button y, the presently active alarm is cancelled for the time that is programmed for this function (see Section "Programme time for the slumber function", 1 - 59 min. The Reminder function The appliance will remind you of the dates that you have programmed in with the reminder function. In these cases and on these days, from 08:00 - 23:00 and on every full hour, the reminder alarm will sound for 10 minutes. The technical data of the appliance makes possible an adjustable frequency range wider than the permitted frequency ranges of 87,5 108 MHz resp. 526 ,5 - 1606 ,5 kHz. In some countries, different national regulations may apply to the assigned radio frequency ranges. Please note that information received outside of the assigned radio frequency ranges may not be used, passed on to third parties or otherwise misused. For VHF radio reception, completely unwind the wire aerial 2) and, with the radio switched on, determine the most favourable positioning for it. the appliance has a built-in aerial for MW reception.

To improve MW reception, if required, turn the radio until it is in the most favourable position. Next to it, the clock symbol blinks and thus indicates that the device is waiting for the reception of the current time from an RDS station. 2. Press the button lonce again to switch the radio function off and return the appliance to the standby mode. Press the button UP o to search for radio stations with a frequency higher than the one indicated in the display.

3. Press the button DOWN i to search for radio stations with a frequency lower than the one indicated in the display. Automatic station search You can also let the appliance search for radio stations. The radio alarm then searches there penetrating into the appliance creates the risk of electric shock! additionally , the appliance could become irreparably damaged! Clean the housing of the radio alarm only with a slightly moist cloth and a mild detergent. Ensure that moisture cannot permeate into the appliance during cleaning! Do not dispose of the appliance in your normal domestic waste.

This product is subject to the provisions of European Directive 2002/96/EC. disposing of the appliance · Arrange for the product, or parts of it, to be disposed of by a professional disposal company or by your communal waste facility. In case of doubt, please contact your waste disposal centre. disposal of batteries/accumulators · Used batteries/rechargeable batteries may not be disposed of in household waste. Batteries/rechargeable batteries can contain toxic substances which may damage the environment. Therefore, dispose of the batteries/rechargeable batteries in accordance with statutory regulations. Every consumer is legally obliged to surrender batteries/rechargeable batteries to a community collection centre in their district or to a dealer. Inserted firmly into the power socket? > Has the circuit breaker tripped? > Is there a power cut? If necessary, firmly position it with adhesive tape. Loss of all programming after a power cut. > Batteries were not inserted to retain the memory.

> The batteries inserted for memory retention are exhausted. This obligation is to ensure that batteries are disposed of in a non-polluting manner. Only dispose of batteries when they are fully discharged. You receive a 3-year warranty for this appliance as of the purchase date. This appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase. @@Only in this way can a post-free despatch for your goods be assured. @@@@Your statutory rights are not restricted in any way by this warranty. The warranty period is not extended through repairs made under warranty. this applies also for replaced or repaired parts.

Any damages or deficiencies found on purchase must be reported as soon as possible after unpacking, at the latest two days after purchase. Alla rättigheter förbehålles, inklusive rätten till fotomekanisk återgivning, mångfaldigande och distribuering med särskilda metoder (till exempel databearbetning, flyttbara lagringsmedia och datanät), även delvis, samt rätten till förändring av innehållet och tekniska ändringar. Lämna in produkten och dess delar till ett företag som har tillstånd att ta hand om den här typen av kasserade apparater eller till din kommunala avfallsanläggning. Den som använder någon typ av batterier (uppladdningsbara eller vanliga) är skyldig enligt lag att lämna in dem till ett speciellt insamlingsställe i sin kommun eller stadsdel eller att lämna tillbaka dem till återförsäljaren. .



[You're reading an excerpt. Click here to read official SILVERCREST SPU 900 A1 user guide](http://yourpdfguides.com/dref/4124361)  
<http://yourpdfguides.com/dref/4124361>