



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST SPWS 180 A1 TALKING SCALES. You'll find the answers to all your questions on the SILVERCREST SPWS 180 A1 TALKING SCALES in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SILVERCREST SPWS 180 A1 TALKING SCALES
User guide SILVERCREST SPWS 180 A1 TALKING SCALES
Operating instructions SILVERCREST SPWS 180 A1 TALKING SCALES
Instructions for use SILVERCREST SPWS 180 A1 TALKING SCALES
Instruction manual SILVERCREST SPWS 180 A1 TALKING SCALES

SILVERCREST®
PERSONAL CARE
Sprechende Personenwaage SPWS 180 A1

DE AT ES GR IE GR CY HR



DE Sprechende Personenwaage
Bedienungsanleitung

ES Báscula de baño con función voz
Instrucciones de uso

GR Talking Scales
IE Operating instructions

GR Φωνητική ζυγαριά
CY Οδηγίες χρήσης

HR Osobna vaga
Upute za upotrebu

KOMPENASS GMBH
BURGSTRASSE 21 · D-44867 BOCHUM
www.kompennass.com
ID-Nr.: SPWS180A1-09/10-V1
IAN: 61488



[You're reading an excerpt. Click here to read official SILVERCREST SPWS 180 A1 TALKING SCALES user guide](http://yourpdfguides.com/dref/3923574)
<http://yourpdfguides.com/dref/3923574>

Manual abstract:

Pass this manual on to whoever might acquire the appliance at a future date. For use as a bathroom scale in a domestic environment. This appliance is not intended for commercial or industrial use. Never open batteries, never solder or weld batteries. Keep batteries away from children.

Children can put batteries into their mouths and swallow them. If a battery is swallowed, medical assistance must be sought immediately. There is a risk of receiving an electric shock! This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used. Children should be supervised to ensure that they do not play with the appliance. The scale and the display may only be operated at temperatures between 10°C and 40°C.

Higher or lower temperatures can lead to malfunctions or to permanent damage. Never burden these bathroom scales with a weight of more than 180 kg / 396 lb! These can cause erroneous displays and/or the sudden deactivation of the scales. Ensure that neither the floor at the location of the scale nor the upper surface of the scale are wet, otherwise there is a risk of slipping! This scale contains sensitive electronic components and it should therefore NOT be located: Close to sources of heat Always step onto the scales in the middle and with both feet. Otherwise, the scales could tip and become irreparably damaged. Additionally, there is the risk of falling over! Never step onto the scale with wet or moist feet.

There would be a serious risk of slipping and personal injury! Scale 3 x Batteries Type AAA/Micro/LR03 Operating instructions Before using the appliance for the first time, check to ensure that the contents are complete and undamaged. NEVER jump onto the glass scale, this could irreparably damage it. Tap your foot in the middle of the scale. A signal tone sounds, in the display 2 an "8" appears which "runs" from left to right. In the left of the display 2 the selected language appears.

It sounds "This appliance is ready for use" and in the display appears "0". During the weighing process (about 5 seconds) the displayed value increases until your weight is determined. Stand with both feet on the scales. Stand as still as possible and without displacing your weight. Keep the scale at a clean and dry location. you could potentially damage the sensitive electronic components. It could be that the weight is displayed in the wrong unit (kg or lb). In cases when nothing is indicated in the display 2, please check to ensure the batteries are installed according to their polarities. If need be, correct the batteries insertions as appropriate.

If these measures do not correct the problem, please contact the appropriate service partner for your country. Do not dispose of the appliance in your normal domestic waste. This product is subject to the provisions of European Directive 2002/96/EC. Dispose of the appliance through an approved disposal centre or at your community waste facility. observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre. Used batteries/rechargeable batteries may not be disposed of in household waste. Every consumer is legally obliged to dispose of batteries at a collection site of his community/city district or at a retail store. The purpose of this obligation is to ensure that batteries are disposed of in a non-polluting manner. Only dispose of batteries/cells when they are fully discharged.

The warranty for this appliance is for 3 years from the date of purchase. The appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase. In the event of a warranty claim, please make contact by telephone with our Service Department. Only in this way can a post-free despatch for your goods be assured.

Your statutory rights are not restricted in any way by this warranty. this applies also to replaced and repaired parts. Any damage and defects extant on purchase must be reported immediately after unpacking the appliance, at the latest, two days after the purchase date. Repairs made after the expiration of the warranty period are subject to payment. .



[You're reading an excerpt. Click here to read official SILVERCREST SPWS 180 A1 TALKING SCALES user guide](http://yourpdfguides.com/dref/3923574)
<http://yourpdfguides.com/dref/3923574>