



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST SRK 700 A1. You'll find the answers to all your questions on the SILVERCREST SRK 700 A1 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SILVERCREST SRK 700 A1
User guide SILVERCREST SRK 700 A1
Operating instructions SILVERCREST SRK 700 A1
Instructions for use SILVERCREST SRK 700 A1
Instruction manual SILVERCREST SRK 700 A1

SILVERCREST®



RICE COOKER SRK 700 A1

GB Before reading, unfold the page containing the illustrations and familiarise yourself with all functions of the device.

HU Olvasás előtt kattintson az alábbi tartalmú oldalra és végezze fel ismerje meg a készülék mindegyik funkcióját.

CZ Před čtením si otevřete stranu s obrázky a potom se seznámte se všemi funkcemi přístroje.

SK Pred čítaním si odložte stranu s obrázkami a potom sa oboznámte so všetkými funkciami prístroja.

DE/AT/CH Klappen Sie vor dem Lesen die Seite mit den Abbildungen aus und machen Sie sich anschließend mit allen Funktionen des Gerätes vertraut.

GB	Operation and Safety Notes	Page	1
HU	Készletési és biztonsági utasítások	Oldal	9
CZ	Pokyny pro obsluhu a bezpečnostní pokyny	Strana	17
SK	Pokyny pre obsluhu a bezpečnostné pokyny	Strana	25
DE/AT/CH	Bedienungs- und Sicherheitshinweise	Seite	33

KOMPENASS GMBH
Burgstraße 21
D 44387 Soest
www.kompenass.com

Last Information Update: Információk állása
Sav információ: Stav informácií: Stand der Informationen
02/2012, Merk.Nr.: SRK700A1 | 120112

RICE COOKER
Operation and Safety Notes

VARÍČ RÝŽE
Pokyny pro obsluhu a bezpečnostní pokyny

REISKOCHEK
Bedienungs- und Sicherheitshinweise

RIZSFŐZŐ
Készletési és biztonsági utasítások

VARÍČ RÝŽE
Pokyny pre obsluhu a bezpečnostné pokyny

IAN 73271

4 ▲

IAN 73271



[You're reading an excerpt. Click here to read official SILVERCREST SRK 700 A1 user guide](http://yourpdfguides.com/dref/4454997)
<http://yourpdfguides.com/dref/4454997>

Manual abstract:

2012 13:42 Uhr Seite 1 CONTENT Safety information Intended use Technical Data Items supplied Appliance Overview Before the First Use Using the Rice Cooker PAGE 2 3 3 3 3 3 3 Cooking Rice . 5 Troubleshooting Cleaning and care Disposal Warranty and Service Importer 6 7 7 7 8 Read the operating instructions carefully before using the device for the first time and preserve this booklet for later reference. Pass this manual on to whoever might acquire the device at a future date. ⚠️ Connect the rice cooker only to correctly installed and earthed mains sockets supplying a voltage that tallies with the details given on the appliance identification plate. ⚠️ Always remove the plug from the mains power socket when you move or fill the device, in the event of problems, before cleaning the appliance and when the cooker is not in use! ⚠️ Never disconnect the appliance by pulling on the power cable. Always pull on the plug itself. ⚠️ Never touch the appliance plug with wet or moist hands. Never submerge the device in water or other liquids. ⚠️ Should the appliance ever fall into a liquid, IMMEDIATELY remove the plug from the mains power socket. Then, do not operate the appliance again until it has been inspected by an approved service company.

⚠️ Arrange for defective power plugs and/or cables to be replaced at once by qualified technicians or our Customer Service Department. risk of personal injury! ⚠️ Never leave the appliance unattended during operation. WARNING! Hot steam escapes from the steam hole and upon opening the cover! risk of scalding! ⚠️ Children should be supervised to ensure that they do not play with the appliance. ⚠️ Allow the appliance and accessories to cool completely before cleaning and storing them. ⚠️ Do not use an external timing switch or a separate remote control system to operate the appliance.

⚠️ When cooking, never cover the appliance lid with handtowels or anything similar. If you do, the safety concept of the appliance can no longer be assured and the warranty becomes void. ⚠️ Only use the accessory parts provided with the appliance and never use the appliance without first inserting the cooking bowl. 2012 13:42 Uhr Seite 3 Intended use Only use the rice cooker for cooking rice and steaming foods, such as vegetables or fish. This rice cooker is not intended for commercial use; it is intended exclusively for use in private households! ⚠️ Experiment with finding the right quantity of water and the right cooking time for the various combinations.

Cooking Rice Note: Coat the inside of the cooking bowl 4 evenly with a little grease or vegetable oil to achieve a better cooking result. 2012 13:42 Uhr Seite 4 Note: If the cooking bowl 4 is damaged, discontinue all further use! Due to the damage it may be that the safety shut-off of the appliance has triggered and the appliance does not allow itself to be switched on. 3. Measure the desired quantity of rice using the supplied measuring cup. As a general rule: A level measuring cup - filled with rice - yields a portion for one person. ⚠️ 4. Thoroughly wash and sieve the loose rice. ⚠️ 5. ⚠️ Note: If you use warm water the cooking time can be shortened. ⚠️ 7.

⚠️ If necessary, wipe the outside with a clean cloth. - . ⚠️ 10. Insert the power plug into a properly installed power socket. ⚠️ There is a risk of receiving severe scalds! ⚠️ Do not lift the steaming attachment 3 up during the steaming process - the escaping steam brings with it the real risk of scalding. The steaming attachment 3 becomes hot during the steaming process. When taking hold of the steaming attachment 3, use oven cloths or something similar to lift it from the cooking bowl 4. Note: Note: If the cooking bowl 4 is not correctly positioned, the function selector switch 7 cannot be moved to the setting "Cooking". As soon as the rice is cooked, the rice cooker switches itself automatically back to the keep-warm setting. The red control lamp 6 extinguishes and the yellow control lamp 5 starts to glow.

The rice is now ready for consumption. Ensure that the cooking bowl 4 is also inserted correctly when it is used for steaming. The cooking bowl 4 must not be damaged. ⚠️ 1. Pour the required amount of water into the cooking bowl 4.

The cooking time is dependant on the inserted volume of water. Take note of the examples given in the following table. ⚠️ attention! For removal of the rice use exclusively the supplied plastic spoon. If you do not, the non-stick coating could be damaged. ⚠️ Otherwise, there is a permanent risk of receiving an electric shock! ⚠️ Place the food to be steamed in the steaming attachment 3.

3. Place the container on the cooking bowl 4. Place the power plug in a wall socket. ⚠️ the steaming process begins. As soon as the added water has left the cooking bowl 4 by being completely turned to steam, the rice cooker automatically switches back to the "keeping warm" mode. The red control lamp 6 extinguishes and the yellow control lamp 5 starts to glow again. The food is now completely steamed and is ready to eat. 450 g The rice cooker Push the power is not plugged plug into the in. Use a different wall power socket. approx.

450 g The cooking The yellow indibowl 4 is empty cator light 5 Fill the cooking and, as such, switches on, but bowl 4 with the safety the cooking the foodstuffs to switch cannot process cannot be cooked. ⚠️ ALWAYS remove the plug from the wall socket before cleaning, and allow the appliance to cool completely before cleaning and storing it! ⚠️ Make certain that no liquid comes into contact with the heating plate and the insides of the rice cooker. ⚠️ Use a dry cloth to clean the rice cooker housing incl. These could damage the upper surfaces. ⚠️ Dry all parts before using the appliance again. ⚠️ The appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase. In the event of a warranty claim, please make contact by telephone with our Service Department. Only in this way can a post-free despatch for your goods be assured.

⚠️ Your statutory rights are not restricted in any way by this warranty.

⚠️ this applies also to replaced and repaired parts. Any damage and defects extant on purchase must be reported immediately after unpacking the appliance, at the latest, two days after the purchase date. Repairs made after the expiration of the warranty period are subject to payment. Ie IAN 73271 Disposal Do not dispose of the appliance in your normal domestic waste. This product is subject to the provisions of European Directive 2002/96/EC.

Dispose of the appliance through an approved disposal centre or at your community waste facility. o.



[You're reading an excerpt. Click here to read official SILVERCREST](http://yourpdfguides.com/dref/4454997)

[SRK 700 A1 user guide](http://yourpdfguides.com/dref/4454997)

<http://yourpdfguides.com/dref/4454997>