



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST STK 650 A1 ELECTRIC TEA MAKER. You'll find the answers to all your questions on the SILVERCREST STK 650 A1 ELECTRIC TEA MAKER in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SILVERCREST STK 650 A1 ELECTRIC TEA MAKER
User guide SILVERCREST STK 650 A1 ELECTRIC TEA MAKER
Operating instructions SILVERCREST STK 650 A1 ELECTRIC TEA MAKER
Instructions for use SILVERCREST STK 650 A1 ELECTRIC TEA MAKER
Instruction manual SILVERCREST STK 650 A1 ELECTRIC TEA MAKER

SILVERCREST®

KITCHEN TOOLS

3

Electric Tea Maker STK 650 A1



Ⓢ **Electric Tea Maker**
Ⓢ Operating instructions

Ⓢ **Elektrisk tekokare**
Bruksanvisning

Ⓢ **Elektrischer Teekochoer**
Ⓢ Bedienungsanleitung

Ⓢ **Sähköinen teenkeitin**
Käyttöohje

Ⓢ **Elektrisk tekoger**
Betjeningsvejledning

KOMPERNASS GMBH
BURGSTRASSE 21 · D-44867 BOCHUM
www.kompernass.com
ID-Nr.: STK650A1-06/10-V2



[You're reading an excerpt. Click here to read official SILVERCREST STK 650 A1 ELECTRIC TEA MAKER user guide](http://yourpdfguides.com/dref/3033310)
<http://yourpdfguides.com/dref/3033310>

Manual abstract:

Pass this manual on to whoever might acquire the device at a future date. This appliance is intended for brewing tea and then keeping it warm. This appliance is intended for domestic use only, it is not suitable for commercial or industrial applications. Always heat the water with a closed lid, otherwise the automatic cut-out may not work. Boiling water can then spray out over the edge. The glass pot also becomes very hot during use. Make certain that the appliance stands firmly and vertically before switching it on. Broken glass can cause serious cut wounds. Never fill it with more water than to the MAX marking. If you do, boiling water may spray out and lead to scalds.

This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used. Children should be supervised to ensure that they do not play with the appliance. Ensure that the base with the electrical connections does not come into contact with water! Ensure that the base is completely dry before use, especially if it has accidentally become wet. Use the appliance only with the supplied base. Ensure that the power cable never becomes wet or damp during operation.

Lay the cable so that it cannot be trapped or otherwise damaged. @@ Always remove the plug from the mains power socket after use. @@@@Proceed as follows before the first usage: 1. Take the glass pot 3 from the base 5 and place the brew system into the glass pot 3. 2.

Fill the glass pot 3 up to the MAX marking with water, then add a teaspoon of lemon juice (or lemon concentrate) to it. If lemon juice is not available, you could add a teabag (or a teaspoon of loose tea) directly into the water. 3. Close the lid 1 and replace the glass pot 3 onto the base auf 5. Wait until the control lamp 4 goes out. 5. Switch the appliance off with the On/Off switch 8 and then clean the appliance as described in "Cleaning and Care". DO NOT put any sugar into the Tea Automat. DO NOT heat milk or alcohol in the tea automat. Carefully rinse all parts of the brewing system (brew chamber 0, water riser pipe q, Sieve w) and the glass pot 3 (see chapter "Cleaning and Care").

Green tea is not suitable for brewing in the Tea Automat. The ideal brewing temperature for green teas lies at around 70°C. At higher brewing temperatures, such as those generated in the Tea Automat, tannic acids are released. The tea will taste bitter. NEVER fill it with more water than to the MAX marking, and never with less than to the MIN marking. As the water is fed back through the brewing system during the rewarming, after the first brewing process you should remove the brew system from the glass pot 3. To avoid scalds/burns and electric shocks, ensure that water does not overflow from the glass pot 3. 4.

Take hold of the brew system and pull the water riser pipe q with the sieve w upwards. 5.

Place the necessary amount of tea or number of teabags in the brew chamber 0. There is a risk of being burnt! Use oven gloves when you take hold of the brew system. The longer the brew is kept warm, the greater is the amount of fluid evaporated, and thus the brew becomes stronger. @@@@ the brew process is finished. @@@@@@ the control lamp 4 and the On/Off switch 8 light up.

@@@@@@As soon as the water cools, the Tea Automat warms the water back up. The control lamp 4 lights up again during this rewarming process.

@@@@@@The appliance can now be used again. @@Clean the water riser pipe q with warm water and some detergent. @@There is a risk of electric shock! There is a risk of electric shock! the appliance could also be irreparably damaged! @@@@Clean the glass pot 3 of the Tea Automat with a moist cloth.

for stubborn soiling use a mild detergent on the cloth. @@@@@@Enquire at your local waterworks about the hardness level of your mains water. The need for decalcification comes early in hard water areas, somewhat later in soft water areas. Use a decalcifier designed for household appliances and pay heed to the usage instructions. Wait for 10 minutes and then switch the appliance on. 5. Allow the solution to boil and wait until it has passed through the brew system. 6. Should it be necessary, repeat the process. You can use the descaler solution once again; however, first let it cool down.

When the scale has dissolved, allow 2-3 fillings of clear water to boil and then flow through the brewing system. The warranty for this appliance is for 3 years from the date of purchase. This appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase. In the case of a warranty claim, please make contact by telephone with our service department. Only in this way can a post-free despatch for your goods be assured. The warranty covers only claims for material and manufacturing defects, not for transport damages, worn parts or for damage to fragile components, e. If this product has been subjected to improper or inappropriate handling, abuse, or modifications not carried out by one of our authorised sales and service outlets, the warranty will be considered void. Your statutory rights are not restricted in any way by this warranty. @@ this applies also to replaced and repaired parts.

@@@@If you do not intend to use the appliance for a long time, wrap the power cable around the retainer on the underside of the base 5. Store the appliance in a dry and dust free location. Do not dispose of the appliance in your normal domestic waste. This product is subject to the provisions of European Directive 2002/96/EC. Dispose of the appliance through an approved disposal centre or at your community waste facility.

observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre. Fyll aldrig på mer vatten än upp till MAX-markeringen och aldrig mindre än till MIN-markeringen. Lämna in den till ett företag som har tillstånd att ta hand om den här typen av uttjanta apparater eller till din kommunala avfallsanläggning. .



[You're reading an excerpt. Click here to read official SILVERCREST
STK 650 A1 ELECTRIC TEA MAKER user guide
http://yourpdfguides.com/dref/3033310](http://yourpdfguides.com/dref/3033310)