



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST SWED 100 A1 MULTI-BAND RADIO. You'll find the answers to all your questions on the SILVERCREST SWED 100 A1 MULTI-BAND RADIO in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SILVERCREST SWED 100 A1 MULTI-BAND RADIO
User guide SILVERCREST SWED 100 A1 MULTI-BAND RADIO
Operating instructions SILVERCREST SWED 100 A1 MULTI-BAND RADIO
Instructions for use SILVERCREST SWED 100 A1 MULTI-BAND RADIO
Instruction manual SILVERCREST SWED 100 A1 MULTI-BAND RADIO

SILVERCREST®

3

Multi-Band Radio SWED 100 A1



- Multi-Band Radio**
- Operating instructions
- Maailmanradio**
Käyttöohje
- Satellitradio**
Bruksanvisning
- Radio**
Betjeningsvejledning

KOMPERNASS GMBH
BURGSTRASSE 21 · D-44867 BOCHUM
www.kompernass.com
ID-Nr.: SWED 100 A1-12/10-V3
IAN: 61893



[You're reading an excerpt. Click here to read official SILVERCREST SWED 100 A1 MULTI-BAND RADIO user guide](http://yourpdfguides.com/dref/3923675)
<http://yourpdfguides.com/dref/3923675>

Manual abstract:

Pass this booklet on to whoever might acquire the appliance at a future date. Every copying, also as extracts, as well as any reproduction of images, even in an altered state, is only permitted with the written consent of the manufacturer. This device is intended for receiving generally approved radio transmissions in all countries (world receiver) and only for household use. Utilisation other than as described here is not permitted and it could lead to damages and injuries. Check to ensure that the appliance is undamaged, all component parts are present and that all packaging remnants are removed from it. Note: An adaptor for mains operation is not supplied, but can be obtained from a specialist shop. Take note of the details listed for the mains power adaptor in the section "Technical data". CE- Conformity This device has been tested and approved in accordance with the basic requirements and other relevant regulations of the EMV directive 2004/108/EC. "LIGHT" button: Switch display lighting on » POWER LED: indicates that the device is switched on ; Waveband Selector Switch: Select FM, AM and SW reception ranges ; Display ; "MIN" button: Set the minutes ; "POWER OFF" button: Switch the device off ; "TIME" button: To set the time ; "POWER ON" Button: Switch the device on ; "HOUR" button: Set the hours ; "ALARM" button: Set the alarm ; "AL. @@@@@" electronic devices can be damaged by moisture.

Extremely dry air can initiate static charges that could lead to faulty functions. Transportable appliances are particularly at risk from accidental damage. Protect the appliance against heavy stresses, such as impacts and falls. Select a location in your travel luggage where it cannot be damaged, or switched on, by other hard objects. Protect the appliance against drip and spray water.

Do not place waterfilled receptacles, such as flower vases, on or next to the appliance. Never submerge the appliance in water or other liquids. Batteries may not be thrown into a fire, taken to pieces or short circuited. additionally , do not attempt to recharge batteries. There is a chance that they could explode.

Always store batteries at a location that is inaccessible for small children and infants. Should a battery be swallowed, seek medical attention IMMEDIATELY. Check to ensure that the appliance is in a serviceable condition before taking it into use. Should there be visible damage to the appliance, do not take it into use. Arrange for it to be checked for safety by Customer Services. Listening to music with earphones for long periods and at high volume levels can lead to hearing damage! When using headphones, the built-in loudspeakers are switched off. Open the battery compartment on the rear of the appliance and insert two batteries as shown on the markings next to the battery compartment. When a battery symbol appears in the display , always replace both batteries with the types detailed under Technical Data. @@@@ b) Connecting the mains adaptor: A mains adaptor is not supplied. @@@@The appliance can switch itself on under timed control, e.

@@@@Clean the appliance with a dry or lightly moistened cloth only. @@@@In the event of leaking batteries: Wear protective gloves and clean the battery compartment with a dry cloth. Should the appliance not function as expected, replace the batteries. If the malfunction is not eliminated with this measure, please make contact with Customer Services (see "Warranty and Service). Disposing of the appliance Do not dispose of the appliance in your normal domestic waste. Dispose of the appliance through an approved disposal centre or at your community waste facility. This appliance is subject to the provisions of European Directive 2002/96/EC. observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre. disposal of batteries/accumulators Used batteries/accumulators may not be disposed of in household waste.

Every consumer is legally obliged to dispose of batteries at a collection site of his community/city district or at a retail store. The purpose of this obligation is to ensure that batteries are disposed of in a non-polluting manner. Only dispose of batteries when they are fully discharged. The warranty for this appliance is for 3 years from the date of purchase. The appliance has been manufactured with care and meticulously examined before delivery.

Please retain your receipt as proof of purchase. In the event of a warranty claim, please make contact by telephone with our Service Department. Only in this way can a post-free despatch for your goods be assured. @@@@Your statutory rights are not restricted in any way by this warranty. @ this applies also to replaced and repaired parts.

Any damage and defects extant on purchase must be reported immediately after unpacking the appliance, at the latest, two days after the purchase date. Repairs made after the expiration of the warranty period are subject to payment. Extremit torr luft kan ge upphov till statisk laddning som i sin tur leder till funktionsstörningar. Lämna in den till ett företag som har tillstånd att ta hand om den här typen av utjänta apparater eller till din kommunala avfallsanläggning. Den som använder någon typ av batterier är skyldig enligt lag att lämna in dem till ett samlingsställe i sin kommun eller stadsdel eller lämna tillbaka dem till återförsäljaren. .



[You're reading an excerpt. Click here to read official SILVERCREST SWED 100 A1 MULTI-BAND RADIO user guide](http://yourpdfguides.com/dref/3923675)
<http://yourpdfguides.com/dref/3923675>