



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SILVERCREST URC 801. You'll find the answers to all your questions on the SILVERCREST URC 801 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SILVERCREST URC 801**  
**User guide SILVERCREST URC 801**  
**Operating instructions SILVERCREST URC 801**  
**Instructions for use SILVERCREST URC 801**  
**Instruction manual SILVERCREST URC 801**



[You're reading an excerpt. Click here to read official SILVERCREST URC 801 user guide](http://yourpdfguides.com/dref/5133537)  
<http://yourpdfguides.com/dref/5133537>

### Manual abstract:

@@@ g. Bathrooms), and must be kept free of dust. operating temperature and operating humidity: 5°C to 45°C , max. 90% RH Always make sure that: - no direct heat sources (e. g. Heating) can affect the device; - no direct sunlight or artificial light reaches the device; - contact with spray, dripping water and corrosive liquids must be avoided and the device should never be operated near water, and it must especially never be immersed (do not place any objects filled with liquids such as vases or drinks near the device); - the device is never placed in the immediate vicinity of magnetic fields (e. Burning candles) are placed on or near the device; - no foreign bodies are introduced into the device; - the device should not be subject to any sharp temperature changes; - the device is not subject to excessive shocks and vibrations; Maintenance and Care Servicing is required when this device has been damaged in any way, for example, when liquid has entered the product, when the product has been exposed to rain or moisture, when the product does not work normally or if the product has been dropped. If smoke, unusual noises or smells are noticed, power off the device immediately. @@ please contact qualified personnel when repair is needed. @@Only use a clean, dry cloth for cleaning.

Never use any corrosive liquids. @@@@Children may not comprehend the presence of potential risks. batteries and small parts represent potential choking hazards. Keep batteries out of reach of children. if a battery is swallowed , seek medical help immediately.

Keep the packaging away from children too as there is danger of suffocation. intended Use This remote control unit is an information technology device. The device may not be used outdoors or in tropical climates. This device fulfils all that relates to CE Conformity, relevant norms and standards. Any modifications to the equipment other than recommended changes by the manufacturer may result in these directives no longer being met.

If you are not using the device within the Republic of Germany, you must observe the regulations and laws in the country of use. Batteries Insert the batteries with the correct polarity. Never try to recharge the batteries and under no circumstances throw them into fire. Do not mix batteries (old and new or carbon and alkaline, etc. ). Remove batteries when the device is not to be used for a long time. Old batteries do not belong in with domestic waste. They must be handed in to a collection point for old batteries. 4 - English Universal Remote Control URC 801 Conformity This device fully complies with the basic and other relevant requirements of the EMC Directive 2004/108/EC and the Low-Voltage Directive 2006/95/EC. For more information about the Conformity of this product, please visit our website [www](http://www).

The Declaration of Conformity can also be found at the end of this User's Manual. Disposal of Old Devices Devices marked with this symbol are subject to the European Directive 2002/96/EC. All electric and electronic devices must be disposed of separately from household waste at established bodies. Avoid hazards to the environment and dangers to your personal health by disposing of the device properly. For further information about proper disposal, contact your local government, disposal bodies or the shop where you bought the device. respect the environment. Old rechargeable batteries do not belong in with domestic waste. They must be handed in to a collection point for old batteries. registered Trademarks All brand names respective owners. Are trademarks of their English - 5 Universal Remote Control URC 801 Introduction Firstly, many thanks for having chosen this universal remote control with display and extensive device support URC 801.

This remote control allows you to control up to eight different devices. Programming is done within a few minutes thanks to the built-in database. this User's Manual contains a list of all supported device codes. Please keep this User's Manual in a safe place in order to allow for easy reprogramming whenever necessary (for instance, when replacing any of your AV devices). The remote control features illuminated keys in order to make its operation easy even in dark environments.

Package Contents First check that the package contents are complete. Universal remote control URC 801 User manual with service information About this User's Manual In the following, the remote control keys are represented in capital letters. Behind them, you'll find a number in brackets that represents the key on the inner cover page of this manual. Key example: OK (27) Display messages are represented in squared brackets. display message example: [CODE SETUP] More detailed coloured.

Information or warnings are Information field example: Here you'll find more detailed information or warnings. 6 - English Universal Remote Control URC 801 Remote control keys 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 On/Standby button Source device selection keys (TV, SAT, AUDIO, PC, VCR, DVD, DVR, AUX) \* Numeric keys (0...9) and letters (A...Z) Shift button for one/two-digit input Mute button (MUTE) Electronic Program Guide (GUIDE) Increase audio volume (VOL+) Reduce audio volume (VOL-) Four-way directional control ( Information button (INFO) Red function button Green function button Undo Recording Rewind Stop Picture-in-Picture (PIP) Favourites (FAV) Swap between main and secondary PIP window (SWAP) Input selection (INPUT) Keypad illumination \* Last programme (RECALL) Programming (SET) Menu button (MENU) Next channel (CH+) Previous channel (CH-) Confirmation (OK) Quit the menu (EXIT) \* Blue function button Yellow function button Step Pause Fast forward Play Macro programming (MACRO) \* Sleep timer (SLEEP) Aspect ratio (ASPECT) Videotext (TX/MX) \*not programmable English - 7 , , ) Universal Remote Control URC 801 To improve readability, the letters are not printed onto the numeric keypad of the remote control. The described button functions are available only whenever the programmed device supports these functions. Inserting the Batteries Open the battery compartment cover on the back of the remote control. To do this, hold the device firmly with one hand. Then use a finger of the other hand to slide the battery compartment cover in the direction of the arrow. Insert any suitable batteries (size AAA, not supplied) into the remote control. Be sure to respect the polarity (see also the figure below). The polarity is indicated with the symbols + and - on the batteries and in the battery compartment on the remote control. Slide the battery compartment cover in the opposite direction onto the remote control until it clicks into place.

8 - English Universal Remote Control URC 801 Programming the Remote Control Programming Device Codes To be able to control a device with your universal remote control, you must first set up the corresponding device codes.



[You're reading an excerpt. Click here to read official SILVERCREST URC 801 user guide](http://yourpdfguides.com/dref/5133537)  
<http://yourpdfguides.com/dref/5133537>

For the PC device selection, please read the description starting from page 22. There are different ways to setup the device codes. The easiest method is to search by manufacturer. For a description, see below. You can also look for the device code in the list on page 97 of this User's Manual and program it manually. @@@@Point the remote control to the TV set while entering the commands. @@In this example, it is the TV button (2).

The display shows [TV]. Press and hold the SET button (23) for at least 3 seconds.

The display shows [CODE SETUP]. Then release the SET button (23). @@The display shows [BRAND SRCH]. press the OK button (27). The display shows the first preset manufacturer name, e.

@@The letter assignment is equivalent to the keypad on a mobile phone. @@The first available manufacturer name will appear on the display. Press the or button (9) to scroll through the alphabetical list of manufacturer names. Use this method to select the desired manufacturer name until it shows on the display. Point the remote control to the TV set and press any button to check if it works properly.

To verify functionality, do not use (9), OK (27), EXIT (28) or any numeric keys 0...9 (3). At this time, these buttons are reserved for programming only. If the device fails to respond as desired, press the button (9) to recall the next available device code. Then check its operation again. Repeat the above steps until you gain successful device control. If the most important device functions work correctly, press the OK button (27) to save the setting. The message [SUCCESS] will appear for a few seconds and the device returns to the previous menu [BRAND SRCH]. Quit the programming mode by pressing the EXIT button (28) twice. 10 - English Universal Remote Control URC 801 Entering Device Codes directly Power on the device for which you want to program the remote control. @@@@Proceed as follows to enter the device codes directly (this example refers to programming a TV set).

Search for the first available code by using the device type and manufacturer (see the list starting from page 97). Point the remote control to the TV set while entering the commands. @@In this example, it is the TV button (2). The display shows [TV]. Press and hold the SET button (23) for at least 3 seconds. The display shows [CODE SETUP]. Then release the SET button (23). press the OK button (27). The display shows [BRAND SRCH]. press (9).

The display shows [CODE SET]. press the OK button (27). The message [TV] will blink on the display. The current device code is the 3-digit code behind it. press the OK button (27) again.

The first digit of the current device code starts blinking. Enter the three digits of the device code that you have found on the list. To do this, press the numeric keys (3). English - 11 Universal Remote Control URC 801 After you have entered the information, the first digit will blink again. If you mistyped the code, you have the chance to enter it again at this time.

Only for the device type AUX, a fourth digit must be entered to set the device code. To do this, use the following list. 0 - TV 1 - VCR 2 - DVD, CD 3 - SAT, CBL 4 - DVR, PVR 5 - AUDIO Press the OK button (27) to confirm the entered device code. @@@@After a few seconds, the display will return to tn release the SET button (23). (9) twice. The display shows Press [LEARNING]. press the OK button (27). The display shows [LEARN KEY]. press the OK button (27) again. The display shows [SELECT KEY].

@@The display shows [WAITING]. @@@@If you see the message [FAILED], the command could not be programmed. Repeat these steps with the same button, but keep it pressed longer. @@@@Press and hold the SET button (23) for at least 3 seconds. The display shows [CODE SETUP]. Then release the SET button (23). (9) twice. The display shows Press [LEARNING]. press the OK button (27). The display shows [LEARN KEY].

(9). The display shows Press [DELETE KEY]. press the OK button (27). The display shows [SELECT KEY]. Press the button Press the OK button (27).

The display shows [SET UP]. press (9). The display shows [DELETE]. press the OK button (27). The display shows [SURE DELET].

Press the OK button (27) to confirm the deletion. @@Quit the process by pressing the EXIT button (28) two times. @@Your computer must feature a compatible infrared receiver. Press the source device selection button (2) and select the PC mode. The message [PC] will appear on the display. See the following list for the button functions. Any buttons that are not listed have no function. @@@@To quit PC mode, press any other source device selection button (2). @@@@You play a DVD and the remote control is set to the DVD (2) source. This allows you to control the DVD playback using the remote control.

@@The PC mode does not support consistent volume control. switching VPT between TV and AUDIO VPT is set to TV as default. @@@@ proceed as follows: Press the AUDIO source selection button (2). Press and hold the SET button (23) for at least 3 seconds. The display shows [CODE SETUP]. Then release the SET button (23). press (9). The display shows [BASIC VPT]. press the OK button (27). The message [SUCCESS] will appear for a few seconds on the display.

Quit the process by pressing the EXIT button (28). @@English - 23 Universal Remote Control URC 801 If you want to use the TV for sound output again, repeat the above steps by using the TV source selection button (2) in the first step. Programming VPT Manually If you want to control the volume of a specific device individually (not using VPT), this must be programmed manually. Example: You are using the remote control for a satellite receiver too. For all devices, VPT controls the volume via the TV set, but the sat receiver has its own volume control that you want to use.

For manual programming, proceed as follows: Press and hold the SET button (23) for at least 3 seconds. The display shows [CODE SETUP]. Then release the SET button (23). (9) twice. The display shows Press [VPT SETUP].

press the OK button (27). The display shows [TO DEV]. Press the source device selection button (2) of the device for which you want to override the volume control (e. The display shows [FROM DEV]. Press the source device selection button (2) of the device that you want to use for volume control (in this example also SAT). The message [SUCCESS] will appear for a few seconds and the device returns to the [VPT SETUP] level. Quit the process by pressing the EXIT button (28). Please note that using VPT overrides any manually-learned key functions. 24 - English Universal Remote Control URC 801 Favourite This function lets you program up to 15 channels from any channel presets of your receivers (TV or SAT) and easily recall them. programming Favourites This function supports the source device buttons TV and SAT only.

It is also possible to program favourites on the AUX button, but this will have to be configured first for TV or SAT mode. @@Press and hold the SET button (23) for at least 3 seconds. The display shows [CODE SETUP]. Then release the SET button (23).



[You're reading an excerpt. Click here to read official SILVERCREST URC 801 user guide](http://yourpdfguides.com/dref/5133537)  
<http://yourpdfguides.com/dref/5133537>

(9) three times. The display shows Press [FAV CH]. press the OK button (27). The display shows [SETUP]. press the OK button (27) again. The display shows [FAV-CH01].

@@ You can use the presets FAV-CH01 to FAV-CH015 for saving. press the OK button (27). The display shows [SELECT KEY]. @@@ If the preset requires more than one digit, use the toggle button (4) (depends on the target device operation). press the OK button (27).

The message [SUCCESS] will appear for a few seconds on the display. The device will switch to the enter mode for the next favourite, for example [FAVCH02]. Continue programming the next favourite or quit the process by pressing the EXIT button (28) three times. English - 25 Universal Remote Control URC 801 Using Favourites To use a programmed favourite, press the FAV button (18). @@@@ The display shows [CODE SETUP].

Then release the SET button (23). (9) three times. The display shows Press [FAV CH]. press the OK button (27). The display shows [SETUP]. press (9). The display shows [DEL ALL]. press the OK button (27). The display shows [SURE DELET]. press the OK button (27).

@@ Quit the process by pressing the EXIT button (28) twice. @@ The backlight illumination will switch off after approx. 5 seconds. Press the button once more to switch it on again. Press the LIGHT button (21) again to switch the backlight illumination back off. Contrast This function allows you to customise the display. Press and hold the SET button (23) for at least 3 seconds. The display shows [CODE SETUP]. Then release the SET button (23). press (9). The display shows [CONFIGUE]. This message represents the word "Configure". press the OK button (27). The display shows [TIME SETUP]. press (9). The display shows [CONTRAST]. press the OK button (27). The display shows the currently set contrast as a two-digit number, for instance [08]. press or [9] to increase or reduce contrast. You can set a value between "00" and "15".

press the OK button (27). The message [SUCCESS] will appear for a few seconds and the device returns to the [CONTRAST] level. Quit the process by pressing the EXIT button (28) twice. English - 27 Universal Remote Control URC 801 Battery Level Indicator When the batteries are exhausted, a battery icon will appear on the display (see figure). When this happens, replace the batteries by any new AAA-size batteries. Setting the Time The time is shown on the remote control display. You can set it as follows: Press and hold the SET button (23) for at least 3 seconds. The display shows [CODE SETUP]. Then release the SET button (23). press (9).

The display shows [CONFIGUE]. This message represents the word "Configure". press the OK button (27). The display shows [TIME SETUP]. press the OK button (27). The display shows [TIME]. The currently-set time will appear below, and the first digit blinks. Enter the time via the numeric keys (3). The message [SUCCESS] will appear for a few seconds and the device returns to the [TIME SETUP] level. Quit the process by pressing the EXIT button (28) twice.

28 - English Universal Remote Control URC 801 Teletext Mode Use the TTX/MX button (38) to switch to Teletext mode. Press the TTX/MX button (38) again to exit Teletext mode. Depending on the device that you use for Teletext reception, the mixed mode will appear first. In this case you must press the TTX/MX button (38) a third time to switch Teletext off. The following buttons are available for Teletext control: (3) Direct input of the Teletext page via numeric buttons (25) Toggle to the next Teletext page (26) Toggle to the previous Teletext page Child lock The child lock function lets you block the numeric keypad (3) and the buttons CH+ (25) and CH- (26).

This will avoid that channels can be switched. The child lock can be enabled and disabled for each source device selection button individually. Proceed as follows to enable or disable child lock: Press and hold the SET button (23) for at least 3 seconds. The display shows [CODE SETUP]. Then release the SET button (23).

press (9). The display shows [CONFIGUE]. This message represents the word "Configure". press the OK button (27). The display shows [TIME SETUP]. press (9). The display shows [KIDS LOCK]. press the OK button (27). The display shows [TV OFF]. Press the source device selection button for which you want to enable or disable the child lock function.

Press or (9) to toggle between [ON] (child lock enabled) or [OFF] (child lock disabled). press the OK button (27). The message [SUCCESS] will appear for a few seconds and the device returns to the [KIDS LOCK] level. Quit the process by pressing the EXIT button (28) twice. English - 29 Universal Remote Control URC 801 Powering All Devices On/Off You can power on or off all simultaneously. proceed as follows: Press the On/Standby button (1) once. The remote control will send an On/Off signal to each device. This may take up to 10 seconds. If you have enabled the backlight, it will blink during this process.

Elem (1,5 V-os, AAA méretű) Kódlista, tanulási funkció, makrók, kedvencek segítségével Magyar - 95 URC 801 univerzális távkezelő A garancia részletei 96

- Magyar URC 801 Device codes Kody urządzeń Készülékkódok TV A R SYSTEM ACME ACURA ADC ADMIRAL ADYSON AGASHI AGAZI AGB AIKO AIM AIWA AKAI 223 211 212 210 209 211 233 232 210 238 211 225 223 193 212 219 231 213 210 227 232 211 219 227 224 226 216 211 237 210 223 212 212 210 224 212 236 229 225 219 210 225 233 214 226 215 232 212 226 219 232 223 233 AKIBA AKURA ALARON ALBA 213 223 232 223 213 228 212 222

232 233 223 226 212 227 219 212 219 237 226 216 226 233 227 219 218 227 238 228 223 213 223 237 218 225 ALCYON ALLORGAN ALLSTAR AMPLIVISION\* AMSTRAD ANAM ANGLO ANITECH ANSONIC ARC EN CIEL\* ARCAM 230 213 238 233 219 219 221 223 223 232 233 97 URC 801 TV ARCAM DELTA\* ARISTONA ARTHUR MARTIN\* ASA ASBERG ASTRA ASUKA 211 216 231 230 209 216 212 210 226 233 211 225 212 230 211 218 233

211 224 209 226 232 226 209 212 223 211 218 226 065 216 237 216 211 228 228 213 228 211 223 003 223 209 211 233 218 221 223 215 223 211 227 216 232 219 212 223 237 226 210 233 233 233 213 227 226 220 233 077 218 223 226 224 213 228 218 225 232 223 ATLANTIC ATORI AUCHAN

AUDIOSONIC 213 226 233 211 216 227 237 224 AUDIOTON AUSIND AUTOVOX AWA BAIRD BANG OLUFSEN\* BASIC LINE BASTIDE BAUR BAZIN BEKO BEON BEST BESTAR BINATONE BLACKTRON BLACKWAY BLUE SKY BLUE STAR BOOTS BPL BRANDT BRINKMANN BRIONVEGA

BRITANNIA 216 228 233 223 223 233 237 233 219 233 237 223 226 228 006 216 225 227 233 007 218 226 228 229 223 232 98 URC 801 TV BRUNS BSR BTC BUSH 209 217 213 034 193 216 222 228 210 223 222 212 216 233 216 209 217 212 212 218 210 216 226 232 233 212 211 225 211 225 229 212 209

212 223 211 232 213 018 138 211 223 232 213 210 227 101 212 217 223 233 180 213 218 226 184 214 219 227 CAPSONIC CARENA CARREFOUR CASCADE CATHAY CCE CENTURION CENTURY CGE CIMLINE CITY CLARIVOX CLATRONIC 219 218 218 224 219 219 211 219 227 223 223 223 237

227 212 223 233 213 224 237 CMS CMS HIGHTEC\* CONCORDE CONDOR CONTEC CONTINENTAL EDISON\* COSMEL CROSLEY CROWN CS ELECTRONICS\* CYBERTRON DAEWOO 219 216 228 212 232 219 217 216 224 213 227 035 182 212 225 233 225 216 219 232 219 223 237 222 224 218

237 225 219 227 DAINICHI DANSAI 066 192 216 226 240 227 218 106 194 219 227 232 223 99 URC 801 TV DANSAI DANTAX DAWA DAYTRON DE GRAAF DECCA DENVER DESMET DIAMANT DIAMOND DIXI DTS DUAL DUAL-TEC DUMONT DUX DYNATRON ELBE ELBE-SHARP ELCIT

ELECTRO TECH\* ELEKTRA ELIN ELITE ELMAN ELTA EMERSON EMPEROR ERRES ESC ETRON EUROFEEL EURO-FEEL EUROLINE EUROMAN EUROMANN EUROPHON EXPERT 100 225 218 223 212 214 211 226 096 216 223 232 212 223 212 211 233 211 209 218 216 223 237 238 209 212 228

211 223 213 217 212 209 228 216 233 212 233 210 218 228 210 225 211 226 230 232 237 219 216 233 218 218 238 223 223 233 216 233 219 217 212 211

218 227 238 238 218 219 223 217 226 223 233 226 226 233 236 216 225 216 219 223 218 218 232 223 232 237 221 219 227 223 232 211 226 216 232 233

216 217 233 237 223 223 238 URC 801 TV EXQUISIT FENNER FERGUSON FIDELITY FILSAI FINLANDIA FINLUX 223 212 031 211 232 233 214 209 218 233 211 219 232 209 226 216 209 224 232 209 223 237 210 219 226 233 210 223 223 212 230 211 223 212 212 213 227 233 232 223 211 217 225 234

123 219 060 214 218 223 225 FIRST LINE FIRSTLINE FISHER FLINT FORMENTI FORMENTI-PHOENIX\* FORTRESS FRABA FRIAC FRONTECH FUJITSU FUJITSU GENERAL\* FUNAI GALAXI GALAXIS GBC GEANT CASINO\* GEC GELOSO GENERAL TECHNIC\* GENEXXA GIANT GOLDHAND GOLDLINE GOLDSTAR 211 223 238 212 223 233 211 233 223 211 225 216 224 216 225 217 237 227 217 232 217 226 226 222 218 237 212 233 233 214 215 237 217 215 226 214 219 215 219 216 233 217 216 227 218 238 219 223 GOODMANS 212 218 226 237 203 214 219 232 210 216 223 233 212 101 URC 801 TV GOODMANS 216 223 234 237 213 215 211 221 226 212 233 010 224 210 232 211 233 211 218 228 212 223 219 210 223 233 219 232 223 212 219 213 058 144 214 223 240 216 223 213 211 211 233 211 225 218 226 238 227 214 222 230 213 075 231 211 233 225 212 219 233 219 223 211 226 226 216 223 233 218 200 237 225 226 216 223 236 223 218 224 238 228 223 226 232 217 226 237 238 219 231 240 222 233 GORENJE GPM GRAETZ GRANADA GRANDIN GRONIC GRUNDIG HALIFAX HAMPTON HANSEATIC HANTAREX HANTOR HARWOOD HCM 212 227 233 219 228 HEMA HIGASHI HILINE HINARI HISAWA HITACHI 213 222 227 061 154 215 226 216 223 228 089 171 217 233 218 227 230 139 211 222 238 HORNYPHON HORNYPHONE HOSHAI HUANYU HYGASHI HYPER 227 225 225 212 226 232 226 217 232 232 219 233 102 URC 801 TV HYPSON 210 223 233 223 210 216 226 225 215 224 216 215 212 211 218 226 238 210 237 212 209 221 232 210 227 212 219 234 213 211 213 227 212 212 132 227 211 223 228 211 211 215 211 228 232 211 226 216 228 218 230 IBERIA ICE ICES IMPERIAL INDIANA INGELLEN INGERSOL INNO HIT 211 219 227 227 216 237 218 219 212 219 227 212 219 215 223 211 228 213 223 223 217 216 228 215 218 155 212 225 232 225 212 237 212 223 232 232 217 223 213 225 233 223 213 223 233 216 224 234 INNOVATION INTERACTIVE\* INTERBUY INTERFUNK INTERNATIONAL\* INTERVISION\* IRRADIO 216 237 223 233 216 224 227 226 223 232 223 216 213 226 233 232 218 218 226 237 218 227 228 233 225 ISUKAI ITC ITS ITT ITV JVC KAISUI 222 219 227 KAMOSONIC KAMP KAPSCH KARCHER KAWASHO 223 103 URC 801 TV KENDO KENNEDY KIC KINGSLEY KNEISSEL KOLSTER KONKA KORPEL KORTING KOSMOS KOYODA KTV KYOTO LASAT Lenco LENOIR LEYCO LG 214 217 233 211 223 216 213 216 209 223 212 211 232 237 212 211 210 081 098 114 140 195 216 223 233 218 223 210 210 227 219 014 237 209 214 214 226 216 211 211 218 209 211 238 210 223 237 225 236 223 227 218 237 232 237 223 233 233 219 212 216 084 105 118 148 211 217 225 234 219 218 094 110 126 164 212 218 226 237 223 095 111 136 168 214 219 232 LIESENK LIESENKOTTER\* LIFE LIFETEC LLOYDS LOEWE LOEWE OPTA\* LUMA LUMATRON LUX MAY LUXOR M ELECTRONIC\* MAGNADYNE MAGNAFON MAGNUM 104 212 212 219 223 055 238 216 218 216 233 214 212 217 224 212 223 218 219 218 236 223 223 233 215 218 225 234 216 238 232 URC 801 TV MANDOR MANESTH MARANTZ MARELLI MARK MASUDA MATSUI 210 210 223 216 209 216 225 233 133 216 223 238 216 231 210 219 232 230 212 212 219 209 210 210 224 216 170 223 211 233 237 224 232 218 211 218 226 211 214 222 209 218 231 216 219 211 226 218 218 226 211 218 226 218 212 223 233 219 219 223 212 212 238 223 209 224 234 238 237 212 219 232 225 233 211 220 233 218 223 216 233 223 219 232 212 219 231 221 223 225 218 223 233 214 222 233 223 MEDIATOR MEDION M-ELECTRONIC\* MELVOX MEMOREX MEMPHIS MERCURY METZ MICROMAXX MICROSTAR MINERVA MINOKA MITSUBISHI MIVAR 226 216 225 235 239 222 232 236 MOTION MTC MULTI SYSTEM\* MULTITECH MURPHY NAONIS NEC NECKERMANN 214 223 233 232 217 225 237 NEI NEUFUNK 214 223 237 223 231 216 226 105 URC 801 TV NEW TECH NEW WORLD NEWTECH NICAMAGIC NIKKAI 212 226 213 233 211 210 218 225 233 211 215 233 209 218 223 215 223 211 227 223 216 062 218 223 238 210 226 234 213 222 211 220 231 211 211 231 233 210 223 233 004 026 073 137 198 216 231 227 225 211 219 226 224 219 223 232 213 222 227 225 216 223 232 232 NOBLIKO NOKIA NORDIC NORDMENDE NORDVISION NOVATRONIC OCEANIC OKANO ONCEAS ONWA OPERA ORBIT ORION ORLINE ORSOWE OSAKI OSIO OSO OSUME OTTO VERSAND\* 215 216 230 237 223 203 219 227 211 227 227 227 216 222 233 225 220 233 211 225 013 044 091 147 215 212 223 216 238 213 233 223 PAEL PALLADIUM PALSONIC PANAMA 217 223 238 232 223 237 212 226 020 050 102 161 223 218 226 226 219 232 024 057 112 185 238 PANASONIC 106 URC 801 TV PANAVISION PATHE CINEMA\* PATHE MARCONI\* PAUSA PERDIO PERFEKT PHILCO PHILHARMONIC\* PHILIPS 223 211 232 229 212 223 223 209 237 211 002 016 023 037 045 076 142 167 181 189 197 217 209 225 209 223 141 163 223 210 226 212 214 211 212 212 216 216 211 232 210 217 218 216 231 217 236 219 232 217 226 005 019 029 038 052 078 143 173 186 190 209 218 216 232 216 225 146 215 237 216 233 219 224 226 215 219 223 211 218 233 211 218 223 218 225 237 230 223 233 009 021 033 041 059 079 152 176 187 191 211 221 218 237 218 231 149 216 219 224 PHOENIX PHONOLA PIONEER 012 022 036 042 069 134 156 178 188 196 216 226 223 223 221 232 151 218 223 PLANTRON PLAYSONIC POPPY PRANDONI-PRINCE\* PRECISION PRIMA PROFEX PROFI-TRONIC\* PROLINE PROSONIC PROTECH PROVISION PYE 238 233 219 223 223 237 212 233 240 221 225 216 223 107 URC 801 TV PYMI QUANDRA VISION\* QUELLE QUELLE QUESTA RADIALVA RADIOLA RADIOMARELLI\* RADIOSHACK RADIOTONE RECOR REDSTAR REFLEX REVOX REX RFT RHAPSODY R-LINE ROADSTAR ROBOTRON ROWA ROYAL LUX RTF SABA SAISHO SALORA SAMBERS SAMSUNG 212 230 210 218 226 222 223 216 231 209 223 216 223 223 223 216 210 209 232 216 193 219 209 232 237 209 006 209 210 226 214 238 224 039 070 087 113 150 210 218 226 234 211 233 216 219 211 220 233 227 218 233 223 219 216 222 234 217 223 221 238 223 223 237 218 214 236 218 210 227 233 223 215 237 223 212 237 213 060 215 211 233 215 238 043 080 093 116 166 211 219 231 237 225 223 068 238 212 238 217 172 219 234 056 082 097 121 177 212 223 232 226 063 083 104 135 201 216 225 233 232 SANDRA SANSUI 108 URC 801 TV SANYO 049 219 232 218 215 211 218 227 210 219 226 220 209 214 212 219 232 017 072 115 127 222 209 216 237 225 222 279 283 287 292 299 209 209 223 215 215 226 210 218 228 215 216 000 015 160 222 233 221 213 221 231 211 222 232 223 215 215 219 227 028 092 119 128 238 217 221 232 280 284 288 295 217 217 238 281 285 289 297 230 218 282 286 290 298 211 225 236 223 216 223 233 217 223 233 238 238 217 217 226 237 231 217 226 218 225 SBR SCHAUB LORENTZ\* SCHNEIDER SEG SEI SEI-SINUDYNE\* SELECO SENCORA SENTRA SERINO SHARP 048 103 120 131 223 223 051 109 122 162 238 231 SIAREM SIERRA SIESTA SILVA SILVER SILVERCREST SINGER SINUDYNE SKANTIC SOLAVOX SONITRON SONOKO 220 SONOLOR SONTEC SONY 233 211 219 233 220 218 001 025 237 212 223 230 223 008 030 216 226 237 011 040 109 URC 801 TV SONY 054 088 158 179 220 213 216 211 219 233 219 218 227 214 219 233 212 219 212 211 238 219 232 212 213 212 211 233 218 225 211 227 273 277 294 211 226 193 223 204 208 242 246 250 254 071 107 159 199 222 227 218 212 223 223 228 215 223 227 223 216 225 223 219 219 225 085 108 174 202 086 117 175 212 SOUND VISION\* SOUNDWAVE STANDARD 223 213 226 216 227 STAR LITE STARLIGHT STENWAY STERN STRATO STYLANDIA SUNKAI SUNSTAR SUNWOOD SUPERLA SUPERTECH SUPRA SUSUMU SUTRON SYDNEY SYSLINE SYTONG TANDY TARGA 219 232 225 223 233 231 226 232 TASHIKO TATUNG TCM 232 213 233 274 278 296 214 232 211 226 205 210 243 247 251 255 215 275 291 222 233 216 233 206 212 244 248 252 256 226 276 293 225 218 238 207 241 245 249 253 257 110 URC 801 TV TCM 258 262 266 223 211 226 233 229 223 165 223 223 223 223 212 211 225 230 212 223 216 210 211 233 003 067 211 218 216 211 228 027 064 100 169 222 215 233 223 232 226 227 223 215 237 259 263 267 233 212 233 260 264 268 217 261 265 TEAC TEC TEDELEX TELEAVIA TELECOR TELEFUNKEN TELEGAZI TELEMESTER\* TELESONIC TELESTAR TELETECH TELETON TELEVIDEON TELEVISIO TENSAI TESMET TEVION TEXET THOMSON 219 226 216 227 227 223 233 218 222 232 213 226 219 226 223 233 216 227 219 233 219 006 145 216 223 223 225 046 074 124 183 233 217 226 233 231 216 226 032 157 223 240 226 232 047 090 130 193 233 233 238 238 223 232 060 172 229 233 THORN TOKAI TOKYO TOMASHI TOSHIBA 053 099 153 203 TOWADA TRAKTON TRANS CONTINENS\* TRANSTEC TRIDENT TRISTAR TRIUMPH UHER 224 111 URC 801 TV ULTRAVOX UNIC LINE UNITED UNIVERSUM 109 225 223 218 210 220 226 223 214 218 212 216 232 211 227 216 225 125 211 216 216 209 223 211 216 211 209 219 216 217 211 232 228 223 223 233 223 210 216 226 237 213 214 211 232 217 223 216 222 233 215 223 218 217 223 234 216 226 219 218 224 237 217 233 223 UNIVOX VESTEL VEXA VICTOR VIDEOLOGIC VIDEOLOGIQUE\* VIDEOSYSTEM\* VIDEOTECHNIC\* VIEWSONIC VISIOLA VISION VORTEC VOXSON WALTHAM WATSON WATT RADIO WEGA WEGAVOX WELTBlick WESTON WHITE WESTINGHOUSE\* WINDSTAR XRYPTON YAMISHI YOKAN YOKO 213 232 223 226 129 225 223 218 214 224 223 218 217 222 218 218 225 233 232 232 233 223 215 226 223 225 223 223 226 233 216 233 227 232 233 225 226 227 228 211 218 227 227 226 212 219 232 213 223 233 YOKO YORK ZANUSSI 233 112 URC

801 SAT AB SAT ABC ABSAT AGS AKAI ALBA 161 246 189 189 093 051 081 190 244 053 131 056 121 054 147 122 133 190 058 010 129 155 190 249 190  
054 182 051 051 058 177 057 134 093 190 064 154 104 057 087 186 054 119 181 054 190 122 052 095 245 054 075 122 060 190 199 053 131 054 144  
ALCATEL ALDES ALLSAT ALLSONIC ALLTECH ALPHA ALTAI AMITRONICA AMPERE AMSTRAD 055 093 126 126 112 182 133 057 133 162 194 177  
094 149 177 195 125 151 183 221 ANGLIO ANKARO ANTRON APOLLO ARCON ARMPERSTRONG ASA ASAT ASLF AST ASTACOM ASTON ASTRA 060 190  
054 059 221 122 122 127 189 061 115 190 055 144 182 075 123 121 076 126 144 153 062 130 060 148 183 144 063 138 067 180 186 ASTRO AUDIOTON  
113 URC 801 SAT AURORA AUSTAR AVALON AXIEL AXIS BARCOM BEST BLAUPUNKT BLUE SKY BOCA BOSTON BRAIN WAVE BRANDT  
BROADCAST BROCO BSKYB BT BT SATELLITE\* BUBU SAT BUSH BVV CABLETIME CAMBRIDGE CANAL SATELLITE\* CANAL CHANNEL  
MASTER\* CHAPARRAL CHEROKEE CHESS CITYCOM CLATRONIC CLEMENS KAMPHUS\* CLYDE CAB CNT COLOMBIA COLUMBIA COLUMBUS  
COMAG COMCRYPT COMMANDER COMMLINK 114 193 017 133 189 060 138 059 059 067 190 057 177 177 069 099 068 138 010 189 099 190 052 095  
153 222 150 163 097 053 090 189 103 017 176 069 083 224 055 177 177 078 177 247 123 054 193 063 182 060 119 195 087 190 189 128 130 190 162 154  
056 112 223 183 181 181 131 199 179 052 186 128 071 221 182 180 142 132 150 153 203 070 121 240 081 131 242 185 072 191 190 159 126 URC 801 SAT  
COMTEC COMTECH CONDOR CONNEXIONS CONRAD CONRAD ELECTRONIC\* CIONTEC COSAT CROWN CRYPTOVISION\* CYBERMAXX  
DAERYUNG DAEWOO DANSAT D-BOX DDC DECCA DELEGA DEW DIAMOND DIGIALITY DIGIPRO DISCOVERER DISCOVERY DISEQC  
DISKXPRESS DISTRATEL DISTRISAT DITRISTRAD DNR DNT DONG WOO DRAKE DSTV DUNE DYNASAT ECHOSTAR EINHELL ELAP ELEKTA  
ELSAT ELTA 126 071 060 066 141 182 186 071 075 057 225 108 066 002 056 166 053 073 053 071 074 186 196 179 189 189 059 195 122 075 153 066 086  
076 193 182 188 066 165 051 126 189 055 151 051 132 182 133 142 183 190 072 186 182 176 186 132 177 142 190 112 131 121 132 185 093 122 133 103  
190 054 177 190 190 060 133 199 057 183 163 125 190 075 093 115 URC 801 SAT ELTA EMANON EMME ESSE ENGEL EP SAT EURIEULT  
EUROCRYPT EURODEC EUROPA EUROPHON EUROSAT EUROSKY EUROSACE EUROSTAR EUTELSAT EUTRA EXATOR FENNER FERGUSON  
FIDELITY FILMNET CABLE\* FILMNET SATELLITE\* FINLANDIA FINLUX FINNSAT FLAIR MATE FOXTEL FRACARRO FRANCE  
SATELLITE/TV\* FRANCE TEFREEBOX FREECOM FREESAT FTE FTEMAXIMAL FUBA 122 051 060 182 190 052 178 115 106 122 186 177 057 182  
077 057 188 190 147 051 179 049 106 125 247 226 226 052 052 136 071 190 017 095 078 243 250 051 147 058 182 051 066 093 182 070 188 083 165 194  
195 123 186 060 183 167 191 142 183 176 186 176 177 186 054 182 052 112 149 241 115 061 141 106 193 165 248 082 194 084 190 059 067 115 144 185  
056 121 183 190 070 145 221 080 228 115 198 249 180 142 060 078 133 183 150 062 080 176 116 URC 801 SAT FUBA FUGIONKYO GALAXI GALAXIS  
180 196 059 017 071 126 176 127 191 224 239 057 163 082 184 052 061 113 051 010 034 067 118 158 184 227 121 089 177 051 055 153 025 058 186 053  
030 133 141 186 069 052 177 123 075 182 054 075 132 182 060 081 138 193 063 101 164 GALAXISAT GARDINER GEC GENERAL INDUSTRIAL\* GMI  
GOLDBOX GOLDSTAR GOODING GOODMAN'S GRANADA GRANDIN GROTHUSEN GRUNDIG 246 181 227 081 115 178 082 029 043 070 119 162 193  
031 052 094 129 180 195 032 054 105 156 183 221 G-SAT HANSEATIC HANSEL GRETEL\* HANTOR HANURI HASE IGEL HAUPPAUGE HELIOCOM  
HELIUM HINARI HIRSCHMANN 143 186 069 185 086 128 044 186 121 067 134 180 189 128 070 131 083 135 182 194 119 137 183 228 HISAWA  
HITACHI HNE HOUSTON HOUSTON 117 URC 801 SAT HUMAX HUTH 005 026 054 071 126 142 178 017 178 081 194 060 108 177 196 057 075 052  
134 229 246 069 152 075 184 190 003 022 072 119 148 180 199 176 177 189 186 082 054 067 190 051 177 055 087 009 050 057 075 128 177 017 100 068  
083 130 186 024 200 069 123 132 197 HYPSON ID DIGITAL IMEX IMPERIAL INGELLEN INNOVATION INTERNATIONAL\* INTERSTAR INTERTRONIC\*  
INTERVISION\* IIT NOKIA JERROLD JOHANSSON JOK JSR JVC KAMM KATHREIN 095 089 101 103 146 061 141 235 128 154 227 008 023 084 122  
159 189 201 186 070 166 237 115 228 239 189 012 026 090 137 169 190 021 067 093 144 176 191 KATHREIN EUROSTAR\* KEY WEST Klap KONIG  
KOSMOS KR KREISELMEYER\* K-SAT KYOSTAR L S ELECTRONIC\* LASAT 083 144 119 144 182 060 132 084 147 180 177 085 150 137 086 176 118  
URC 801 SAT LASAT LEMON LENCO 177 153 051 138 186 069 075 079 122 082 101 060 106 182 060 108 077 123 186 082 060 061 166 106 143 185 106  
154 190 052 154 093 055 052 119 180 099 180 186 089 163 057 063 183 060 179 082 153 190 182 088 176 186 123 182 LENG LENNOX LENSOR LEXUS  
LG LIFE LIFESAT 183 LIFETEC LION LORENZEN LORRAINE LUPUS LUXOR LYONNAISE MB M BI MACAB MANATA MANHATTAN MARANTZ  
MASCOM MASPRO 089 143 185 089 101 177 190 101 103 179 103 153 155 177 182 115 183 129 141 248 177 055 189 137 070 147 184 119 184 143 181  
138 089 178 070 189 075 MATSUI MAX MB MEDIABOX MEDIAMARKT MEDIASAT MEDION 090 153 190 131 189 185 114 156 227 154 227 163 101 181  
103 119 URC 801 SAT MEDION MEDISON MEGA MELECTRONIC\* METRONIC 108 190 093 191 051 113 178 067 183 190 077 060 108 060 108 190 067  
052 087 247 241 107 057 142 192 234 248 105 084 103 065 190 069 091 121 063 138 186 153 102 057 015 061 141 228 177 122 054 126 190 119 186 138  
089 182 089 055 144 191 180 190 190 101 101 059 159 195 182 190 METZ MICRO MICRO ELELCTRONIC\* MICRO TECHNOLOGY\* MICROMAXX  
MICROSTAR MICROTEC MINERVA MITSUBISHI MITSUMI MNET M-NET MORGAN SYDNEY\* MORGAN S MOTOROLA MOVIE TIME\* MR ZAPP  
MULTICHOICE\* MULTISTAR MULTITEC MURATTO MYSAT NAVEX NEC NETWORK NEUHAUS 103 103 184 067 227 099 087 150 093 177 122 190  
193 086 179 082 128 120 075 142 190 190 197 190 019 070 166 247 127 079 153 123 183 NEUSAT NEXT WAVE NIKKO NOKIA 033 115 170 052 134 175  
120 URC 801 SAT NOMEX NOOS NORDMENDE NOVA NOVIS OCEANIC OCTAGON OKANO ONDIGITAL OPTEX OPTUS ORBIT ORBITECH ORIGO  
OSAT OTTO VERSAND\* PACE 109 248 051 106 193 069 074 051 132 057 116 072 181 064 051 179 077 054 067 010 056 094 157 204 074 189 053 131  
057 179 062 187 001 094 052 180 177 039 093 121 144 159 181 227 071 052 128 128 077 054 144 083 117 075 193 139 181 129 040 067 112 162 053 131  
055 145 071 084 124 197 140 183 123 142 047 070 121 189 052 081 124 199 PACIFIC PACKSAT PALCOM PALLADIUM PALSAT PALTEC PANASAT  
PANASONIC PANDA PATRIOT PHILIPS 062 183 183 193 010 162 056 186 189 041 116 122 154 163 184 236 081 078 184 079 227 052 112 070 115  
PHOENIX 052 117 123 156 169 189 243 121 070 119 142 158 180 191 248 132 121 URC 801 SAT PHONOTREND PIONEER POLSAT POLYTRON  
PREDKI PREISNER PREMIER PREMIERE PRIESNER PROFI PROFILE PROMAX PROSAT PROSONIC PROTEK PROVISION PVP STEREO\* PYE  
QUADRAL 052 126 163 231 106 072 069 133 181 017 181 057 088 189 052 053 126 155 074 055 237 184 053 131 182 067 106 093 011 133 174 054 182  
091 063 060 054 126 190 178 146 088 055 121 154 054 164 181 075 221 083 230 128 142 075 150 097 177 163 054 131 081 146 095 QUELLE QUIERO  
RADIOLA RADIX 054 142 189 125 122 018 147 194 144 060 146 199 176 126 154 186 037 168 147 066 171 RAINBOW RED STAR REDIFFUSION\*  
REDPOINT REDSTAR RFT ROADSTAR ROCH ROVER RUEFACH SABA 138 093 139 122 123 182 070 145 176 190 077 152 186 095 153 189 122 URC  
801 SAT SABA SABRE SAGEM SAKURA SALORA SAMSUNG SAT SAT CRUISER\* SAT PARTNER\* SAT TEAM SATCOM SATEC SATELCO SATFORD  
SATLINE SATMASTER SATPARTNER SATPLUS SCHACKE SCHNEIDER SCHWAIGER 195 052 106 071 061 006 051 053 149 197 183 190 068 185 070  
182 068 146 068 051 082 179 144 060 158 072 102 177 195 232 176 177 057 051 128 185 075 195 178 067 082 190 063 183 190 160 081 091 007 064 183  
248 132 115 016 065 221 028 127 089 186 121 130 130 054 083 130 190 143 055 128 069 101 179 074 121 179 233 196 063 060 143 165 190 119 103 189  
089 142 185 108 100 143 186 SCIENTIFIC\* SCS SEDEA ELECTRONIQUE\* SEEMANN SEG 066 069 155 138 089 182 SELECO SEPTIMO SERVI SAT  
SIEMENS SILVA SKANTIN SKARDIN SKINSAT SKR 150 180 138 123 URC 801 SAT SKY SKY DIGITAL\* SKYMASTER 192 094 004 103 167 093 179 190  
075 153 179 176 094 057 246 103 069 051 051 095 178 057 182 138 057 188 197 177 106 054 052 233 073 060 108 208 212 216 220 068 000 066 139 179  
193 SKYMAX SKYSAT SKYVISION SL SM ELECTRONIC\* SMART SONY SR STARCOM STARLAND STARRING START TRAK STRONG STVI SUMIDA  
SUNNY SOUND\* SUNSAT SUNSTAR SUPER SAT SUPERMAX SYSTEC TANDBERG TANDY TANTEC TARGA TATUNG TCM 020 126 179 122 183 054  
143 185 185 089 146 190 186 177 190 177 181 087 190 128 054 182 190 177 194 060 193 082 196 190 087 177 182 070 078 079 TCM 089 205 209 213 217  
130 013 079 140 181 101 206 210 214 218 103 207 211 215 219 TECHNILAND TECHNISAT 014 111 172 183 027 122 173 TECHNOLOGY 124 URC 801

SAT TECHNOSAT TECHNOWELT TECO TELANOR TELASAT TELE 1 TELECIEL TELECOM TELEDIREKT TELEFUNKEN TELEKA 197 177 057 053  
089 186 226 144 190 121 051 189 054 137 183 055 085 241 089 079 167 052 075 197 060 108 035 046 099 181 074 052 072 122 052 183 246 098 064 080  
067 177 190 049 107 186 087 143 241 195 176 247 185 070 057 144 186 099 066 153 154 133 156 TELEMASTER TELEMEX TELEPIU TELESAT  
TELESTAR TELETECH TELEVES TELEWIRE TEMPO TEVION THOMSON 247 143 179 107 185 181 177 186 183 183 089 190 038 048 106 186 056 177  
068 190 101 042 052 145 189 070 103 045 096 176 190 THORENS THORN TIOKO TOKAI TONNA TORX TPS TRIAD TRIASAT TRIAX TURNSAT  
TVONICS TWINNER 075 130 065 136 079 183 082 183 136 190 127 176 177 178 190 125 URC 801 SAT UEC UHER UNIDEN UNISAT UNITED CABLE\*  
UNITOR UNIVERSUM 193 179 092 057 177 237 059 067 155 186 119 067 077 182 093 155 096 199 238 196 228 069 152 123 110 198 051 064 159 142  
179 179 052 052 069 126 052 067 142 186 221 055 128 189 182 198 149 071 122 132 VARIOSAT VARIOSTAT VECTOR VEGA VENTANA VESTEL VIA  
DIGITAL\* VIASAT VIDEOWAY VISIONIC VISIOPASS VISIOSAT VIVA VIVANCO VIVID VORTEC V-TECH WELA WELLTECH WETEKOM WEVASAT  
WEWA WINERSAT WINTERGARTEN\* WISI 069 119 176 227 180 134 180 228 149 184 122 243 075 189 248 103 190 104 124 065 191 127 152 183 185  
128 064 119 152 065 127 180 066 133 183 WITTENBERG WOORISAT WORLD WORLDSAT XRYPTON 126 URC 801 SAT XSAT ZAUNKONIG ZEHRER  
190 153 036 065 159 202 192 017 054 199 055 084 176 059 127 182 060 155 191 ZENITH ZINWELL ZODIAC 144 AUDIO AIWA AKAI BUSH DENON 084  
036 000 006 062 076 080 097 095 035 023 000 031 106 064 012 035 000 000 033 085 000 000 036 101 000 036 032 061 113 112 028 072 077 082 029 073  
078 083 030 074 079 DK DIGITAL ELTAX GOLDSTAR GOODMAN'S GRUNDIG HARMAN KARDON\* HITACHI JVC KENWOOD LG LINN MARANTZ  
036 033 033 075 056 107 005 034 086 033 034 035 098 067 109 009 052 087 024 070 089 MERIDIAN MICROMEGA MITSUBISHI MUSTEK NAIM  
OKANO ONKYO PANASONIC 088 100 104 105 127 URC 801 AUDIO PHILIPS PIONEER 000 090 000 020 047 092 000 033 065 103 033 034 081 121 001  
037 044 094 114 118 015 002 051 057 000 035 003 021 048 068 033 091 004 025 053 093 052 096 007 043 055 110 060 017 045 066 QUAD REVOX  
ROTEL SAMSUNG SANSUI SANYO SHARP SILVERCREST SONY 099 108 TCM TEAC TECHNICS THOMSON THORENS UNIVERSUM YAMAHA 010  
039 046 102 115 022 008 061 069 033 036 013 026 049 011 040 058 111 116 027 016 071 014 041 059 117 031 050 018 038 054 019 042 063 VCR  
ADELSOUND ADYSON AIWA AKAI AKIBA AKURA ALBA 041 046 040 086 043 046 045 040 088 044 087 045 093 046 043 089 045 088 087 087 046 090  
082 093 047 093 128 URC 801 VCR AMBASSADOR AMSTRAD ANITECH ANSONIC ASA ASUKA AUDIOSONIC AUDIOTON BAIRD BASIC LINE BAUR  
BESTAR BLACK PANTHER\* BLAUPUNKT BLUE SKY BONDSTEC BRANDT BUSH 043 040 046 041 044 040 091 047 043 040 087 043 089 092 043 047  
029 044 043 045 040 074 093 040 047 043 040 046 043 043 043 090 028 056 090 046 088 047 092 040 092 046 044 040 092 090 046 093 091 044 092 047  
086 092 046 093 086 045 089 046 090 047 089 042 046 046 082 047 047 093 089 092 090 047 088 086 088 090 064 089 CASIO CATHAY CATRON CGE  
CIMLINE CLATRONIC CONDOR CROWN DAEWOO 090 045 088 046 047 046 093 043 073 047 089 045 086 093 090 089 047 047 075 093 087 090 089  
050 089 DANSAI DANTAX DAYTRON DE GRAAF DECCA DENKO DIAMANT DUAL 086 087 045 047 087 129 URC 801 VCR DUMONT ELBE  
ELCATECH ELSAY ELTA EMERSON ESC ETZUKO EUROPHON FERGUSON FIDELITY FINLANDIA FINLUX FIRST LINE FIRSTLINE FISHER FLINT  
FORMENTI PHOENIX\* FRONTECH FUJITSU FUNAI GALAXY GBC GEC GELOSO GENERAL GENERAL TECHNIC\* GOLDHAND GOLDSTAR  
GOODMANS 040 047 046 046 046 046 043 046 043 040 040 040 040 088 044 043 088 092 043 040 040 040 043 092 093 043 029 046 040 040 047 090 045  
040 040 047 091 042 044 043 046 046 041 088 088 086 092 047 047 093 045 046 092 086 091 046 093 089 087 086 087 093 092 090 086 086 086 090 093  
GRAETZ GRANADA GRANDIN GRUNDIG HANSEATIC HANTOR HARWOOD HCM HINARI HISAWA 130 090 088 093 044 043 085 091 087 042 043 086  
093 081 047 086 044 086 093 044 044 089 092 091 091 046 089 092 046 090 093 092 093 045 093 046 047 URC 801 VCR HITACHI HYPSON IMPEGO  
IMPERIAL INGERSOL INNO HIT INNOVATION INTERBUY INTERFUNK INTERVISION\* IRRADIO ITT ITV JVC KAISUI KARCHER KENDO  
KENWOOD KORPEL KYOTO LENCO LEYCO LG 021 065 046 043 040 041 043 090 029 044 092 040 044 045 043 091 009 062 046 092 044 090 045 046  
046 089 046 013 057 091 029 029 041 092 041 047 046 086 094 046 042 047 040 091 092 040 086 047 090 086 046 092 088 046 044 046 087 044 027 087  
093 046 087 093 041 087 088 045 092 093 047 093 094 091 047 091 047 045 089 086 093 089 061 088 089 093 019 060 088 042 046 089 040 076 094 044  
093 044 086 LIFETEC LOEWE LOEWE OPTA\* LOGIK LUMATRON LUXOR M ELECTRONIC\* MAGNUM MANESTH MARANTZ MARK MATSUI  
MEDIATOR 091 093 092 041 044 088 131 URC 801 VCR MEDION M-ELECTRONIC\* MEMOREX MEMPHIS METZ MICROMAXX MICROSTAR  
MIGROS MITSUBISHI MULTITECH MURPHY NATIONAL NEC NECKERMANN NEI NESCO NIKKAI NOKIA NORDMENDE OCEANIC OKANO ORION  
ORSON OSAKI OTTO VERSAND\* PALLADIUM PANASONIC 029 040 040 046 029 029 029 040 086 040 090 040 029 045 042 092 040 043 045 045 040  
046 041 040 040 091 092 041 046 002 016 033 041 045 040 046 006 024 035 068 072 092 092 043 040 088 044 044 093 042 088 088 086 092 043 092 086  
087 045 046 046 047 087 045 047 064 086 044 093 042 087 007 017 052 087 086 008 026 042 069 077 014 030 049 070 078 022 034 067 071 092 094 086  
091 094 094 046 093 086 087 093 047 087 086 088 085 046 092 090 087 088 086 044 091 010 025 059 045 093 011 029 079 PATHE CINEMA\* PATHE  
MARCONI\* PERDIO PHILCO PHILIPS PHONOLA PIONEER PORTLAND PRINZ 132 047 086 089 090 URC 801 VCR PROFEX PROLINE PROSONIC  
PYE QUELLE RADIALVA RADIOLA REX RFT ROADSTAR ROYAL SABA SAISHO SAMSUNG SAMURAI SANSUI SANWA SANYO SAVILLE SBR  
SCHAUB LORENZ\* SCHNEIDER 093 040 040 006 042 044 092 045 043 044 089 046 045 041 000 055 045 087 041 066 047 092 040 040 086 091 046 041  
043 043 046 001 046 044 041 042 044 047 104 041 090 043 046 047 044 086 047 092 086 046 087 046 046 091 087 088 032 058 046 088 092 090 047 093  
092 082 093 048 083 090 053 094 SEG SEI-SINUDYNE\* SELECO SENTRA SENTRON SHARP SHINTOM SHIVAKI SHORAI SIEMENS SILVA SILVER  
SILVERCREST SINUDYNE SOLAVOX SOLOVOX SONNECLAIR SONOKO SONTEC 045 044 088 092 047 092 044 046 093 020 093 091 044 091 106 092  
086 046 089 093 093 045 090 054 087 047 090 087 091 089 091 133 URC 801 VCR SONY 003 031 084 044 047 044 047 088 040 040 046 044 040 041 047  
105 040 040 087 029 088 097 101 040 043 029 045 045 046 046 040 086 029 012 044 044 093 093 015 074 046 046 043 044 047 004 036 005 051 018 080  
SOUNDWAVE STANDARD STARLITE STERN SUNKAI SUNSTAR SUNTRONIC SUNWOOD SUPRA SYMPHONIC TAISHO TANDBERG TARGA  
TASHIKO TATUNG TCM 089 086 086 093 046 088 104 044 045 092 037 094 098 045 046 087 087 047 093 041 091 088 045 045 086 082 038 095 099  
047 047 086 039 096 100 TEAC TEC TECHNICS TELEAVIA TELEFUNKEN TELETECH TENOSAL TENSAI TEVION THOMSON THORN TOKAI TONSAI  
TOSHIBA TOWADA TOWIKA TVA UHER ULTRAVOX 134 090 044 093 094 087 087 046 046 091 023 085 093 093 090 091 045 087 063 092 URC 801  
VCR UNITED QUICK\* UNIVERSUM VIDEON WELTBlick WETBLICK YAMISHI YOKAN YOKO 047 040 091 029 091 044 046 046 043 091 089 042 092  
088 044 086 093 093 044 093 046 090 DVD ADCOM AIWA AKAI AKURA ALBA ARCAM BEST BUY BRANDT BUSH 183 049 139 153 015 190 152 013  
025 124 185 149 186 154 149 144 151 147 150 003 030 070 005 151 061 201 151 148 149 175 184 023 050 040 050 130 146 051 147 122 151 CAMBRIDGE  
CARRERA CENTREX CGV CLASSIC CLATRONIC CONIA C-TECH CYBERHOME DAEWOO DANSAI DAYTEK DEC DENON DENVER DENZEL  
DIAMOND 029 109 026 063 153 150 032 115 046 127 068 197 135 URC 801 DVD DK DIGITAL DUAL DVX EASY HOME ECLIPSE ELTA ELTAX  
EMERSON ENZER FINLUX FISHER GERICOM GLOBAL SOLUTIONS\* GLOBAL SPHERE\* GOLDSTAR GOODMAN'S GRAETZ GRUNDIG HB HAAZ  
HARMAN KARDON\* HIMAX HITACHI HUMAX INNOVATION JVC 042 148 150 152 149 045 157 183 148 149 187 054 150 150 017 056 148 048 151 149  
188 152 012 152 059 140 020 087 146 047 151 148 151 152 150 151 017 126 140 140 150 190 055 150 154 159 183 191 186 151 143 150 154 154 190 058  
168 145 052 088 160 067 145 181 191 085 118 189 171 148 183 086 119 187 KENWOOD KINGAVON KISS KODA KXD LAWSON LENCO LG LIFE  
LIFETEC LIMIT LINN LOEWE LOGICLAB LUXOR 136 024 169 145 031 186 191 095 URC 801 DVD MAGNAVOX MAGNUM MARANTZ MATSUI  
MEDION MEMOREX MERIDIAN METZ MICO MICROMAXX MICROMEDIA MICROMEGA MICROSTAR MISSION MIZUDA MONYKA MUSTEK MX  
ONDA MAIKO NAIM NEUFUNK NU-TEC ONKYO ORAVA ORION ORITRON PB PACIFIC PANASONIC 146 145 060 190 040 140 183 190 138 149 140

146 190 140 190 151 148 001 149 154 190 148 147 141 151 069 140 151 150 014 090 131 176 000 037 080 094 125 158 182 007 057 138 154 190 151 191 064 200 071 145 155 065 203 190 191 142 145 191 145 152 144 191 163 146 122 155 182 PHILIPS 016 092 162 185 006 043 089 101 142 190 008 102 172 039 111 166 027 060 091 105 146 198 011 103 196 081 117 167 034 079 093 108 155 PHILIPS CORP\* PIONEER 035 104 202 PROLINE PROTON 137 URC 801 DVD PROVISION QUAD RAITE REALISTIC REDSTAR REOC ROADSTAR ROTEL ROWA SABA SABAKI SAE SAMSUNG 151 190 148 183 153 150 066 190 147 013 150 190 012 106 116 149 036 170 001 140 150 021 015 038 152 153 210 235 241 149 033 153 150 004 022 073 078 110 174 150 150 150 150 151 204 154 040 183 SANSUI SANYO SCANMAGIC SCHNEIDER SCIENTIFIC LABS\* SCOTT SEG SHARP SIGMATEK SILVA SILVERCREST 019 107 165 150 044 075 112 192 190 123 099 114 161 190 033 113 148 120 150 SINGER SKYMASTER SKYWORTH SM ELECTRONIC\* SONY 212 236 242 150 144 213 239 243 150 222 240 009 028 074 082 156 193 010 041 076 083 164 018 072 077 084 173 SOUNDMASTER\* SOUNDMAX STANDARD STAR CLUSSTARMEDIA SUPERVISI138 URC 801 DVD SYNN TANDBERG TARGA 150 190 210 216 220 225 229 233 132 136 177 191 062 194 153 199 183 140 013 148 002 121 152 190 189 186 149 150 154 053 148 001 146 TCM TEAC TEC TECHNICS TELEFUNKEN TEVION THOMSON TOKAI TOSHIBA TRUVISION UNIVERSUM VICTOR VICTOR RETRO WHARFEDALE XLOGIC YAKUMO YAMADA YAMAKAWA YUKAI ZENITH 211 217 221 226 230 234 133 137 178 205 138 214 218 223 227 231 237 134 140 179 206 147 215 219 224 228 232 238 135 145 180 207 150 145 128 153 096 129 150 183 097 146 191 098 155 150 154 100 155 195 139 URC 801 DVR ABS ALIENWARE CYBERPOWER DELL DIRECTV DISH NETWORK\* DISHPRO ECHOSTAR EXPRESSVU GATEWAY GOI HEWLETT PACKARD\* HOWARD COMPUTERS\* HP HTS HUGHES HUGHES NETWORK\* HUMAX HUSH IBUYPOWER JVC LINKSYS MEDIA CENTER PC\* MICROSOFT MIND NIVEUS MEDIA\* NORTHGATE PANASONIC PHILIPS PROSCAN RCA REPLAYTV SONIC BLUE SONY STACK 9 SYSTEMAX TAGAR SYSTEMS\* TCM TIVO TOSHIBA TOUCH ULTIMATETV VIEWSONIC VOODOO ZT GROUP 140 006 006 006 006 000 003 003 003 003 006 003 006 006 006 003 011 000 000 006 006 003 006 006 006 006 006 006 009 000 004 001 008 008 005 006 006 006 016 000 002 006 007 006 006 006 004 007 011 011 015 011 004 009 009 006 013 007 014 012 011 017 005 006 018 010 011 URC 801 AUX ADCOM AIWA AKAI AKURA ALBA ARCAM BEST BUY BRANDT BUSH 183 049 139 153 015 190 152 013 025 124 185 CAMBRIDGE 149 CARRERA 186 CENTREX 154 CGV 149 CLASSIC 144 CLATRONIC 151 CONIA 147 C-TECH 150 CYBERHOME 003 DAEWOO 030 DANSAI 070 DAYTEK 005 DEC 151 DENON 061 201 DENVER 151 DENZEL 148 DIAMOND 149 DK DIGITAL 042 DUAL 148 DVX 150 EASY HOME 152 ECLIPSE 149 ELTA 045 ELTAX 157 EMERSON 183 ENZER 148 FINLUX 149 FISHER 187 GERICOM 054 GLOBAL SOLUTIONS\* 150 GLOBAL SPHERE\* 150 GOLDSTAR 017 GOODMAN 056 175 184 023 050 040 146 050 051 122 130 147 151 029 032 046 109 115 127 026 063 068 197 153 150 159 183 191 186 151 154 141 URC 801 AUX GRAETZ GRUNDIG HB HAAZ HARMAN KARDON\* HIMAX HITACHI HUMAX INNOVATION JVC 148 048 151 149 188 152 012 152 059 140 020 087 146 047 151 148 151 152 150 151 017 126 140 140 150 190 055 150 154 146 145 060 190 040 140 183 190 138 149 140 146 190 140 190 151 143 154 190 150 058 145 148 168 181 183 145 052 088 160 067 191 085 086 118 119 189 171 187 KENWOOD KINGAVON KISS KODA KXD LAWSON LENCO LG LIFE LIFETEC LIMIT LINN LOEWE LOGICLAB LUXOR MAGNAVOX MAGNUM MARANTZ MATSUI MEDION MEMOREX MERIDIAN METZ MICO MICROMAXX MICROMEDIA MICROMEGA MICROSTAR MISSION MIZUDA 142 024 031 095 169 186 145 191 151 191 064 200 071 145 155 065 142 203 190 191 145 191 145 191 152 URC 801 AUX MONYKA MUSTEK MX ONDA MAIKO NAIM NEUFUNK NU-TEC ONKYO ORAVA ORION ORITRON PB PACIFIC PANASONIC 148 001 149 154 190 148 147 141 151 069 140 151 150 014 090 131 176 000 037 080 094 125 158 182 007 057 138 154 190 151 190 148 183 153 150 066 190 147 013 150 190 012 106 116 149 144 163 146 155 182 122 PHILIPS 016 092 162 185 006 043 089 101 142 190 039 081 111 117 166 167 027 060 091 105 146 198 034 079 093 108 155 PHILIPS CORP\* PIONEER 008 011 035 102 103 104 172 196 202 PROLINE PROTON PROVISION QUAD RAITE REALISTIC REDSTAR REOC ROADSTAR ROTEL ROWA SABA SABAKI SAE SAMSUNG 151 204 154 040 183 SANSUI 019 107 165 150 075 099 112 114 192 190 143 URC 801 AUX SANYO SCANMAGIC SCHNEIDER SCIENTIFIC LABS\* SCOTT SEG SHARP SIGMATEK SILVA SINGER SKYMASTER SKYWORTH SM ELECTRONIC\* SONY 036 170 001 140 150 021 015 038 152 153 149 033 153 150 004 022 073 078 110 174 150 150 150 151 150 150 132 136 177 191 062 194 153 199 183 140 013 148 002 121 152 190 189 044 123 161 190 033 148 150 113 120 150 144 150 009 028 074 082 156 193 010 041 076 083 164 018 072 077 084 173 SOUNDMASTER\* SOUNDMAX STANDARD STAR CLUSTER\* STARMEDIA SUPERVISION\* SYNN TANDBERG TCM TEAC TEC TECHNICS TELEFUNKEN TEVION THOMSON TOKAI TOSHIBA TRUVISION UNIVERSUM VICTOR 144 133 137 178 205 138 134 140 179 206 147 135 145 180 207 150 145 128 153 096 129 150 191 183 097 098 146 155 URC 801 AUX VICTOR RETRO WHARFEDALE XLOGIC YAKUMO YAMADA YAMAKAWA YUKAI ZENITH 186 149 150 154 053 148 001 146 150 154 195 100 155 \* Any marked manufacturer names will appear on the remote control display in abbreviated format.



[You're reading an excerpt. Click here to read official SILVERCREST URC 801 user guide](http://yourpdfguides.com/dref/5133537)  
<http://yourpdfguides.com/dref/5133537>



145 Declaration of Conformity We: Targa GmbH Lange Wende 41 59494 Soest, Germany declare our responsibility that the product: remote control model: SilverCrest URC 801 is confirmed to comply with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility 2004/108/EC and the Council Directive relating to Low Voltage 2006/95/EC. The measurements were carried out in accredited laboratories. For the evaluation of above mentioned Council Directives for Electromagnetic Compatibility and for Low Voltage standards were consulted: EMC: EN 55013 : 2001 + A1 : 2003 + A2 : 2006 EN 55020 : 2007 EN 55024 : 1998 + A1 : 2001 + A2 : 2003 EN 55022 : 2006 Soest, 27th of November 2008 authorised signature \_\_\_\_\_ Matthias Klauke, Managing Director hb-c\_sc\_urc801\_0811. .



[You're reading an excerpt. Click here to read official SILVERCREST URC 801 user guide](#)

<http://yourpdfguides.com/dref/5133537>