



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SMC 7004AWBR. You'll find the answers to all your questions on the SMC 7004AWBR in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SMC 7004AWBR
User guide SMC 7004AWBR
Operating instructions SMC 7004AWBR
Instructions for use SMC 7004AWBR
Instruction manual SMC 7004AWBR

SMC Wireless Barricade™ Routers

User Guide

SMC7004AWBR



V1.0



[You're reading an excerpt. Click here to read official SMC 7004AWBR user guide](http://yourpdfguides.com/dref/3457800)
<http://yourpdfguides.com/dref/3457800>

Click "Save", and then click the "Reboot" button. 9. When prompted to reboot now, click "OK." 5. Under "WAN Type" Click the "Change..." button. 10. Once the Barricade is rebooted, you can surf the Internet as you normally would from all computers connected to it.

Wireless Setting Installing and Configuring the Print Server If you are not connecting your printer to your Barricade, skip this section. 1. Insert the installation CD into the CD-ROM drive. The installation screen will automatically appear. (If it doesn't, please click "Start", and then "Run..." Then type <CD-ROM Drive>":install.exe" and click "OK."

) English Wireless settings allow you to set the wireless configuration items. 1. Network ID (SSID): Network ID is used to identify the WLAN. Client stations can roam freely on this product and other Access Points that have the same Network ID. (The factory setting is "default") 2. Channel: The radio channel number. The permissible number of channels depends on the Regulatory Domain. The factory setting is as follow: Channel 6 for North America; Channel 7 for European (ETSI); Channel 7 for Japan. 3. WEP Security: Select the data privacy algorithm you want. Enabling the security can protect your data while it is transferred from one station to another. The standardized IEEE 802.11 WEP (128 or 64-bit) is used here. 4. WEP Key 1, 2, 3 & 4: When you enable the 128 or 64 bit WEP key security, please select one WEP key to be used and input 26 (for 128-bit) or our domain name: 1. Open your web browser (i.e. Internet Explorer or Netscape Navigator). 2. 6.

Click "Save" and then click "Reboot." 7. When prompted to reboot now, click "OK." English English 3. In the "System Status" page of the Barricade web console, type your password in the "System Password" field (default is "admin") and click the "Log In" button. C. You may need to have your Barricade clone the MAC address of your Ethernet adapter. Your ISP may register your MAC address (a MAC address is a serial number that is unique to every Ethernet adapter), and your Barricade needs to pass on that address to your ISP. To do so: 1. Make sure that you are using the computer and Ethernet adapter that was originally connected to your ISP.

2. Open your web browser (i.e. Internet Explorer or Netscape Navigator). 4.

Click "DHCP Server." 3. 4. @@@@E. If you use a totally plug and play ISP (i.

e. @@Click "Toolbox". Reading the Manual When I click on "User's Manual" when the CD starts up, nothing happens English English You may need to install the viewer first. To install the viewer software: 1. Double-click the "My Computer" icon on your Windows desktop. 6. Click the "Clone MAC" button. 2. Right-click the CD-ROM icon and select "Explore". 7.

Click "Save" and then click "Reboot." 3. Double-click the "viewer" folder. 8. When prompted to reboot now, click "OK." 4. Double-click the file "RS405ENG.EXE." This will start the installation of the viewer software. Follow the screen prompts to complete the installation. English 5. When the installation program is finished, remove and reinsert the CD, and then click the "User's Manual" button. English .



[You're reading an excerpt. Click here to read official SMC](#)

[7004AWBR user guide](#)

<http://yourpdfguides.com/dref/3457800>