



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SMC WSKP100 EU FG. You'll find the answers to all your questions on the SMC WSKP100 EU FG in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SMC WSKP100 EU FG User guide SMC WSKP100 EU FG Operating instructions SMC WSKP100 EU FG Instructions for use SMC WSKP100 EU FG Instruction manual SMC WSKP100 EU FG

Introduction

The WSKP100 is a Wi-Fi (IEEE 802.11b/g) wireless phone that enables you to make Skype calls without using a computer. The phone enables you to use your normal Skype account with complete mobility, allowing you to talk from any location where you have an internet connection through a nearby access point.

Package Checklist – The WSKP100 Wi-Fi Phone package includes these items:

- One Wi-Fi Phone for Skype™ (WSKP100)
- One Lithium-Ion battery
- One headset
- One mini USB cable
- One AC power charger
- This Quick Start Guide
- User Manual CD

Inform your dealer if there are any incorrect, missing or damaged items. If possible, retain the carton, including the original packing materials. Use them to repack the product in case there is a need to return it.

Getting Started – After unpacking the Wi-Fi Phone for Skype™, you must install and charge the battery pack before turning on the phone. Just follow the steps in this guide.

WSKP100 Wi-Fi Phone for Skype™

Quick Start Guide



TECHNICAL SUPPORT

From U.S.A. and Canada
(9:00 a.m. - 5:00 p.m. PST)
Tel: (800) 451-5229
Fax: (949) 479-8800

From Europe:
Contact details can be found on
<http://www.smc.com>

Driver updates:

http://www.smc.com/index.cfm?event=download&search=hw&id=40&code=EN_USA

Model Number: WSKP100

Information furnished by SMC Networks, Inc. (SMC) is believed to be accurate and reliable. However, no responsibility is assumed by SMC for its use, nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of SMC. SMC reserves the right to change specifications at any time without notice.

Copyright © SMC Networks, Inc., 2008. All rights reserved. SMC is a registered trademark. EZ Connect™ and Barracade™ are trademarks of SMC Networks, Inc. Other product and company names are trademarks or registered trademarks of their respective holders.

Skype™ is a trademark of Skype Technologies S.A.



WSKP100
E072006-EX-003
E0200027500E

Description

Before preparing the Wi-Fi Phone for Skype™ for use, first become familiar with its main keys, buttons, and other hardware features.

1. **LCD Display** – Colour software menu display.
 2. **Navigation Key** – Four-direction software navigation key. Pressing the key down selects the current option.
 3. **Right Soft Key** – Negative action key. Cancels or returns to previous menu.
 4. **End/Power Key** – Ends a call. Turns the power on and off. Press for two seconds to power on. Press two to four seconds for menu. Press for more than four seconds to power off.
 5. **Headset Jack** – Jack for headset connector.
 6. **USB/Power Charge Port** – Power charger connection for charging battery.
 7. **Alphanumeric Keypad** – Includes 0-9, A-Z, *, and # keys. The [A] key selects upper- or lower-case characters, numbers, or hexadecimal. The [] key selects common punctuation marks during text input. The [] key selects special characters and symbols during text input.
 8. **Send Key** – Calls a selected contact.
 9. **Left Soft Key** – Positive action key. Selects menu option.
 10. **Volume Button** – Adjusts volume of the speaker.
- Keypad Lock** – The phone keypad can be locked by pressing the Left Soft Key together with the [A] key. Pressing the two keys again unlocks the keypad.




1. Install Battery

Warning: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Remove Battery Compartment Cover – Place the phone face down. Push and slide down the battery compartment cover until it becomes free.

Install Battery – Place the battery into the compartment. Be sure the text label on the battery is facing out and the battery's three metal contacts point to the top of the phone.

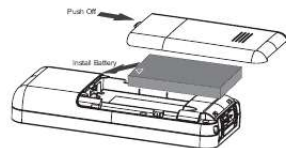

Replace Battery Compartment Cover – Slide the battery compartment cover back onto the phone until it clicks firmly into place.

2. Charge Battery

Connect Battery Charger – Lift up the rubber cover on the mini USB charger port and connect the power charger to the port. Then, plug the charger into an AC electrical outlet.

Fully Charge Battery – For the first time use, allow eight hours to fully charge the battery. After the first-time charge, the battery requires only three hours to charge.

Note: The power charger automatically adjusts to any voltage between 100-240 volts at 50 or 60 Hz.



3. Power On Phone

Power On Phone – Push and hold down the End/Power key for more than two seconds to power on the phone.

Go to step 4 to learn how to make initial settings and start using the phone.



You're reading an excerpt. [Click here to read official SMC WSKP100 EU FG user guide](http://yourpdfguides.com/dref/3457495)

Manual abstract:

11b/g) wireless phone that enables you to make Skype calls without using a computer. The phone enables you to use your normal Skype account with complete mobility, allowing you to talk from any location where you have an Internet connection through a nearby access point. Package Checklist -- The WSKP100 Wi-Fi Phone package includes these items: · One Wi-Fi Phone for Skype™ (WSKP100) · One Lithium-Ion battery Description Volume Button 10 1 LCD Display

Before preparing the Wi-Fi Phone for Skype™ for use, first become familiar with its main keys, buttons, and other hardware features. 1. 2. 3. 4. LCD

Display -- Colour software menu display. Navigation Key -- Four-direction software navigation key. Pressing the key down selects the current option.

Right Soft Key -- Negative action key. Cancels or returns to previous menu. End/Power Key -- Ends a call. Turns the power on and off. Press for two seconds to power on.

Press two to four seconds for menu. Press for more than four seconds to power off. Headset Jack -- Jack for headset connection. @@Alphanumeric Keypad -- Includes 0-9, A-Z, *, and # keys. @@The [] key selects common punctuation marks during text input.

@@Left Soft Key -- Positive action key. @@If possible, retain the carton, including the original packing materials. Use them to repack the product in case there is a need to return it. Getting Started -- After unpacking the Wi-Fi Phone for Skype™, you must install and charge the battery pack before turning on the phone. Just follow the steps in this guide. Navigation 2 Key Left 9 Soft Key 5. 3 4 Right Soft Key End/Power Key 6. 7. Send Key 8 Alphanumeric Keypad 7

8. 9.

10. Volume Button -- Adjusts volume of the speaker. Keypad Lock -- The phone keypad can be locked by pressing the Left Soft Key together with the [a/A *] key. Pressing the two keys again unlocks the keypad. The whole world can talk for free. Skype.Com USB/Power 6 Charge Port Headset 5 Jack www.smc.com TECHNICAL SUPPORT From U.S.

A. and Canada (24 hours a day, 7 days a week) (800) SMC-4-YOU Phn: (949) 679-8000 Fax: (949) 679-1481 From Europe : Contact details can be found on <http://www.smc.com> Driver updates: <http://www.smc.com>

com/index.cfm?event=downloads.searchCriteria&localeCode=EN_USA World Wide Web: <http://www.smc.com> If you are looking for further contact information, please visit <http://www.smc.com>

smc.com 38 Tesla Irvine, CA 92618 Phone: (949) 679-8000 1. Install Battery Warning: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions. Remove Battery Compartment Cover -- Place the phone face down. Push and slide down the battery compartment cover until it becomes free. Install Battery -- Place the battery into the compartment. Be sure the text label on the battery is facing out and the battery's three metal contacts point to the top of the phone. Push Off 2. Charge Battery Connect Battery Charger -- Lift up the rubber cover on the mini USB charger port and connect the power charger to the port.

Then, plug the charger into an AC electrical outlet. Fully Charge Battery -- For the first time use, allow eight hours to fully charge the battery.

@@@ (SMC) is believed to be accurate and reliable. @@@@ Copyright © SMC Networks, Inc., 2006. All rights reserved.

@@@ Select the language of the display. The default is English. 4. @@@ Security keys should be provided by the wireless network operator.

2. Scroll down and read the entire Skype Agreement. Press the Left Soft Key to accept the Agreement. @@5. @@@@3.

@@@ You can also create a new account using the phone. 5. When your Skype sign in is successful, you can start making calls. Your current list of contacts should display in the Contacts screen. @@1.

2. 3. 5. Make a Call To make a Skype call, follow these steps: Be sure you have a valid network connection before making a call. Press the Right Soft Key to select Contacts. Use the Navigation key to scroll down and select the contact name you want to call. 4. Press the Send key to make the call. When you have finished the call, press the End button. The Phone LCD Display The Wi-Fi Phone for Skype™ colour LCD display provides various status indicators and access to the menu-based interface.

The illustration below shows the main screen and its elements. Do Not Disturb. You can set this status to indicate that you are busy. Skype Me. Makes your Skype Name available for anyone to call. Away. You can set this status to indicate that you are away. Wireless Signal Status Skype Online Status Skype Credit

Battery Status Notifications Current Time Not Available. You can set this status to indicate that you are not available to answer calls. Invisible.

Indicates to others that you are offline, but you are still signed in to Skype and can make calls. Current Time -- The current time set on the phone. You can set the time and date by using the Menu to select "Settings" and then "Time and Date." Skype Credit -- Your current Skype Credit balance. Right Soft Key Action -- The action that happens when you press the Right Soft Key.

Typically, the Right Soft Key cancels the last action or returns to the previous menu. From the main screen, this provides access to your Contacts. Left Soft Key Action -- The action that happens when you press the Left Soft Key. Typically, the Left Soft Key selects the current menu item or confirms a setting. From the main screen, this provides access to the user menu.

The Main Menu The main menu provides access to all your Skype and phone settings. The menus are easy to move through using the four-way Navigation key.

@@@ Skype Online Status -- Indicates your current Skype online status. You can set your online status by using the Menu to select "Status" and then "Change status." Online. The normal status when you are signed in to Skype. Offline. When you are not signed in to Skype. Menu Contacts History Status

Add Contact Search Services Settings Description Your Contacts and their Skype status Lists missed calls, incoming and outgoing calls, Voicemails, and detail requests Sets status and user profile, and signs out Adds a Skype or SkypeOut number to your Contacts Searches for Skype contacts online Sets up Skype Credit, SkypeIn, and Voicemail Access to other phone settings Menu Switch Off Silent/Sounds On Change Status My Profile Sign In/Out Find/View Networks Network Details Description Powers off the phone Sets the ring tone volume to off/on Changes your Skype online status Change your Skype profile information Signs in or out from Skype Displays list of detected Wi-Fi networks Displays network connection information .



[You're reading an excerpt. Click here to read official SMC WSKP100](http://yourpdfguides.com/dref/3457495)

[EU FG user guide](http://yourpdfguides.com/dref/3457495)

<http://yourpdfguides.com/dref/3457495>