



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SMEG AP578X-8. You'll find the answers to all your questions on the SMEG AP578X-8 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SMEG AP578X-8**  
**User guide SMEG AP578X-8**  
**Operating instructions SMEG AP578X-8**  
**Instructions for use SMEG AP578X-8**  
**Instruction manual SMEG AP578X-8**

## Contents

GB-IE

1. INSTRUCTIONS FOR USE .....	48
2. SAFETY PRECAUTIONS .....	50
3. ENVIRONMENTAL RESPONSIBILITY .....	52
4. GET TO KNOW YOUR OVEN .....	53
5. AVAILABLE ACCESSORIES .....	54
6. USING THE OVEN .....	56
7. COOKING WITH THE OVEN .....	66
8. CLEANING AND MAINTENANCE .....	74
9. EXTRAORDINARY MAINTENANCE .....	82
10. INSTALLING THE APPLIANCE .....	87



**INSTRUCTIONS FOR THE USER:** these instructions contain user recommendations, a description of the commands and the correct procedures for cleaning and maintenance of the appliance.



**INSTRUCTIONS FOR THE INSTALLER:** these are intended for the qualified technician who must install the appliance, set it functioning and carry out an inspection test.

47



[You're reading an excerpt. Click here to read official SMEG AP578X-8 user guide](http://yourpdfguides.com/dref/3530536)  
<http://yourpdfguides.com/dref/3530536>

**Manual abstract:**

2. 3. 4. 5. 6. 7. 8. 9. 10. @@@@ @@@@53 AVAILABLE ACCESSORIES .

.....  
.....  
.....  
.....  
.....  
.....  
.....

..... 54 USING THE OVEN .

.....  
.....  
.....  
.....  
.....  
.....

.... 56 COOKING WITH THE OVEN.....

.....  
.....  
.....  
.....  
.....  
.....

.... 66 CLEANING AND MAINTENANCE.....

.....  
.....  
.....  
.....  
.....  
.....

. @@@@ @@@@ INSTRUCTIONS FOR USE THIS MANUAL IS AN INTEGRAL PART OF THE APPLIANCE. IT MUST BE KEPT IN ITS ENTIRETY AND IN AN ACCESSIBLE PLACE FOR THE WHOLE WORKING LIFE OF THE APPLIANCE. CAREFUL READING OF THIS MANUAL AND ALL THE INSTRUCTIONS THEREIN BEFORE USING THE APPLIANCE IS ESSENTIAL. INSTALLATION MUST BE CARRIED OUT BY COMPETENT PERSONS IN ACCORDANCE WITH THE REGULATIONS IN FORCE.

THIS APPLIANCE IS INTENDED FOR HOUSEHOLD USE AND COMPLIES WITH THE EEC DIRECTIVES CURRENTLY IN FORCE. THE APPLIANCE HAS BEEN BUILT TO CARRY OUT THE FOLLOWING FUNCTIONS: COOKING FOOD; ALL OTHER USES ARE CONSIDERED UNSUITABLE. THE MANUFACTURER CANNOT BE HELD LIABLE FOR USE OTHER THAN AS INDICATED. IF THE APPLIANCE IS INSTALLED ON BOATS OR IN CARAVANS, DO NOT USE IT AS A ROOM HEATER. DO NOT USE THIS APPLIANCE FOR HEATING ROOMS. THIS APPLIANCE IS MARKED ACCORDING TO EUROPEAN DIRECTIVE 2002/96/EC ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE). THIS DIRECTIVE DEFINES THE STANDARDS FOR THE COLLECTION AND RECYCLING OF WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT APPLICABLE THROUGHOUT THE EUROPEAN UNION. NEVER OBSTRUCT THE OPENINGS AND SLITS PROVIDED FOR VENTILATION AND HEAT DISPERSAL. DO NOT REST ANY WEIGHT OR SIT ON THE OPEN DOOR OF THE APPLIANCE. THE IDENTIFICATION PLATE WITH THE TECHNICAL DATA, SERIAL NUMBER AND BRAND NAME HAS BEEN VISIBLY AFFIXED TO THE APPLIANCE.

DO NOT REMOVE THIS PLATE FOR ANY REASON. BEFORE THE APPLIANCE IS PUT INTO OPERATION, ALL THE PROTECTIVE FILMS APPLIED INSIDE OR OUTSIDE MUST BE REMOVED. TAKE CARE THAT NO OBJECTS ARE STUCK IN THE DOOR OF THE OVEN. THE APPLIANCE BECOMES VERY HOT INSIDE DURING USE. SUITABLE HEATPROOF GLOVES SHOULD BE WORN FOR ALL OPERATIONS. 48 General instructions DO NOT USE STEEL SPONGES AND SHARP SCRAPERS AS THEY WILL DAMAGE THE SURFACE. USE NORMAL NON-ABRASIVE PRODUCTS, INCLUDING WOODEN OR PLASTIC UTENSILS IF NECESSARY. RINSE THOROUGHLY AND DRY USING A SOFT CLOTH OR A MICROFIBRE CLOTH. DO NOT ALLOW RESIDUES OF SUGARY FOODS (SUCH AS JAM) TO SET INSIDE THE OVEN. IF THEY ARE ALLOWED TO SET FOR TOO LONG, THEY COULD RUIN THE ENAMEL COVERING THE INSIDE OF THE OVEN.

DO NOT USE PLASTIC KITCHENWARE OR CONTAINERS. THE HIGH TEMPERATURES INSIDE THE OVEN COULD MELT THE PLASTIC, DAMAGING THE APPLIANCE. DO NOT USE SEALED TINS OR CONTAINERS IN THE APPLIANCE. OVERPRESSURE MAY OCCUR INSIDE THE

CONTAINERS DURING COOKING, CREATING A DANGER OF EXPLOSION. DO NOT LEAVE THE APPLIANCE UNATTENDED DURING COOKING PROCESSES WHERE FATS OR OILS COULD BE RELEASED.

FATS AND OILS MAY CATCH FIRE. DO NOT COVER THE BOTTOM OF THE OVEN WITH ALUMINIUM OR TINFOIL SHEETS DURING COOKING AND DO NOT PLACE PANS OR TRAYS ON IT TO AVOID DAMAGE TO THE ENAMELLED SURFACE. IF THE SURFACES ARE STILL VERY HOT DURING COOKING, DO NOT POUR WATER DIRECTLY ONTO THE TRAYS. THE STEAM COULD CAUSE SEVERE BURNS AND DAMAGE TO ENAMELLED SURFACES. ALL COOKING OPERATIONS MUST TAKE PLACE WITH THE DOOR CLOSED.

49 General instructions 2. SAFETY PRECAUTIONS REFER TO THE INSTALLATION INSTRUCTIONS FOR THE SAFETY REGULATIONS FOR ELECTRIC OR GAS APPLIANCES AND VENTILATION FUNCTIONS. IN YOUR INTERESTS AND FOR YOUR SAFETY THE LAW REQUIRES THAT THE INSTALLATION AND SERVICING OF ALL ELECTRICAL APPLIANCES ARE CARRIED OUT BY QUALIFIED PERSONNEL IN ACCORDANCE WITH THE REGULATIONS IN FORCE. OUR APPROVED INSTALLERS GUARANTEE A SATISFACTORY JOB. GAS OR ELECTRICAL APPLIANCES MUST ALWAYS BE DISCONNECTED BY SUITABLY SKILLED PEOPLE. BEFORE CONNECTING THE APPLIANCE TO THE POWER GRID, CHECK THE DATA ON THE PLATE AGAINST THE DATA FOR THE GRID ITSELF. BEFORE CARRYING OUT INSTALLATION/MAINTENANCE WORK, MAKE SURE THAT THE APPLIANCE IS NOT CONNECTED TO THE POWER GRID. THE PLUG TO BE CONNECTED TO THE POWER SUPPLY CABLE AND ITS SOCKET MUST BE OF THE SAME TYPE AND CONFORM TO THE REGULATIONS IN FORCE. THE SOCKET MUST BE ACCESSIBLE AFTER THE APPLIANCE HAS BEEN BUILT IN. NEVER DISCONNECT THE PLUG BY PULLING ON THE CABLE.

IF THE POWER SUPPLY CABLE IS DAMAGED, CONTACT THE TECHNICAL SUPPORT SERVICE IMMEDIATELY AND THEY WILL REPLACE IT. IT IS OBLIGATORY FOR ALL ELECTRICAL EQUIPMENT TO BE EARTHED ACCORDING TO THE METHODS LAID DOWN BY SAFETY REGULATIONS. IMMEDIATELY AFTER INSTALLATION, CARRY OUT A BRIEF INSPECTION TEST, FOLLOWING THE INSTRUCTIONS BELOW. SHOULD THE APPLIANCE NOT FUNCTION, DISCONNECT IT FROM THE ELECTRICITY SUPPLY AND CALL THE NEAREST TECHNICAL SUPPORT CENTRE. NEVER ATTEMPT TO REPAIR THE APPLIANCE. NEVER PUT INFLAMMABLE OBJECTS IN THE OVEN: IF IT IS SWITCHED ON BY ACCIDENT, IT MAY CAUSE A FIRE. DURING USE THE APPLIANCE BECOMES VERY HOT. TAKE CARE NOT TO TOUCH THE HEATING ELEMENTS INSIDE THE OVEN. THIS APPLIANCE MAY NOT BE USED BY PEOPLE (INCLUDING CHILDREN) OF REDUCED PHYSICAL AND MENTAL CAPACITY, OR LACKING IN EXPERIENCE IN THE USE OF ELECTRICAL APPLIANCES, UNLESS THEY ARE SUPERVISED OR INSTRUCTED BY ADULTS RESPONSIBLE FOR THEIR SAFETY. 50 General instructions DO NOT LET CHILDREN GO NEAR THE APPLIANCE WHEN IT IS IN OPERATION OR PLAY WITH IT AT ANY TIME.

DO NOT INSERT POINTED METAL OBJECTS (CUTLERY OR UTENSILS) INTO THE SLITS IN THE APPLIANCE. DO NOT USE STEAM JETS FOR CLEANING THE APPLIANCE. THE STEAM COULD REACH THE ELECTRONICS, DAMAGING THEM AND CAUSING SHORT-CIRCUITS. DO NOT MODIFY THIS APPLIANCE. DO NOT SPRAY ANY SPRAY PRODUCTS NEAR THE ELECTRICAL APPLIANCE WHILE IT IS IN OPERATION.

DO NOT USE SPRAY PRODUCTS WHILE THE PRODUCT IS STILL HOT. The manufacturer cannot be held liable for damage to persons or things caused by failure to observe the above instructions, by interference with any part of the appliance or by the use of non-original spare parts. 51 Instructions for disposal 3. ENVIRONMENTAL RESPONSIBILITY 3.1 Our environmental responsibility Pursuant to Directives 2002/95/EC, 2002/96/EC and 2003/108/EC relating to the reduction of the use of hazardous substances in electrical and electronic appliances, as well as to the disposal of refuse, the crossed out bin symbol on the appliance indicates that at the end of the useful life of the product, it must be collected separately from other refuse.

Therefore, at the end of the product's working life, the user must deliver it to the appropriate differentiated collection centres for electrical and electronic waste, or deliver it back to the retailer when purchasing an equivalent product, on a one-for-one basis. Adequate differentiated collection for the subsequent forwarding of the decommissioned product to recycling, processing and ecologically compatible disposal contributes to avoiding possible negative effects on the environment and on health, and promotes recycling of the appliance's constituent materials. Illicit disposal of the product by the user will lead to the application of administrative sanctions. The product does not contain substances in quantities sufficient to be considered hazardous to health and the environment, in accordance with current European directives.



[You're reading an excerpt. Click here to read official SMEG](http://yourpdfguides.com/dref/3530536)

[AP578X-8 user guide](http://yourpdfguides.com/dref/3530536)

<http://yourpdfguides.com/dref/3530536>

3.2 Your environmental responsibility Our product's packing is made of non-polluting materials, which are therefore compatible with the environment and recyclable. Please help by disposing of the packaging correctly. You can obtain the addresses of collection, recycling and disposal centres from your retailer or from the competent local organisations. Do not discard the packaging or any part of it, or leave it unattended. It can constitute a suffocation hazard for children, especially the plastic bags.

Your old appliance also needs to be disposed of correctly. Important: hand over your appliance to the local agency authorised for the collection of electrical appliances no longer in use. Correct disposal enables intelligent recovery of valuable materials. Before disposing of your appliance it is important to remove doors and leave shelves in the same position as for use, to ensure that children cannot accidentally become trapped inside during play. It is also necessary to cut the connecting cable to the power grid, removing it along with the plug. 52 Instructions for the user 4. @@@@To remove the rack or tray, lift the front slightly. @@@@The fan causes a steady outflow of air from above the door which may continue for a brief period of time even after the oven has been turned off. 6.2.

3 Internal oven lights The oven lights come on when the door is opened (only on some models) or any function is selected, except for (where present). 6.3 Warnings and general advice for usage All cooking operations must be carried out with the door closed. Cooking processes using the grill / fan-assisted grill must not last more than 20 minutes. During cooking, do not cover the bottom of the oven with aluminium or tin foil and do not place pans or oven trays on it as this may damage the enamel coating.

If you wish to use greaseproof paper, place it so that it will not interfere with the hot air circulation inside the oven. For the best cooking results, we recommend placing cookware in the centre of the rack. 57 Instructions for the user To prevent any steam in the oven from causing problems, open the door in two stages: half open (5 cm approx.) for 4-5 seconds plus the preset cooking time will and simultaneously press or appear on the display. Press and hold to set the cooking end time.

When is released, the automatic cooking process will start and the display and A (to indicate that a will show the current time together with programmed cooking process has been set). icrofibre cloth. 8.3 Food stains or residues Do not use steel sponges or sharp scrapers as they will damage the surface. Use normal non-abrasive products and a wooden or plastic tool if necessary. Rinse thoroughly and dry with a soft cloth or a microfibre cloth. Do not allow residues of sugary foods (such as jam) to set inside the oven. If left to set for too long, they might damage the enamel lining of the oven. 8.4 Cleaning the door glazing The glass in the door should always be kept thoroughly clean.

Use absorbent kitchen roll; remove stubborn dirt with a damp sponge and an ordinary detergent. Do not use abrasive or corrosive cleaners for cleaning the door glazing. (e.g. powder products, oven-cleaner sprays, stain removers and metal scouring pads). Do not use rough or abrasive materials or sharp metal scrapers to clean the oven's glass doors since they may scratch the surface. 74 Instructions for the user 8.5 Cleaning the inside of the oven For the best oven upkeep, clean it regularly after having allowed it to cool. · Take out all removable parts. · Clean the oven racks with hot water and non-abrasive detergent. Rinse and dry. · For easier cleaning, the door can be removed (see "9.2 Removing the door"). The oven should be operated at the maximum temperature for about 15-20 minutes after the use of specific products, to burn off the residues left inside the oven. When the operation is complete, damp parts should be dried thoroughly.

8.5.1 Removing the guide frames (on some models only) Removing the guide frames makes it easier to clean the side parts, and it also needs to be done whenever the automatic cleaning cycle is used (only available on some models). · To remove the guide frames, pull the frame towards the inside of the oven to unhook it from its housing A, then slide it out of the seats at the back B. · When cleaning is complete, repeat the above procedures to put the guide frames back in.

75 Instructions for the user 8.6 Cleaning the pizza plate (on some models only) The pizza plate (where included) should be washed separately according to the following instructions: The stone must be cleaned after every use. Do not heat it again if it has any encrustations. To clean, pour 55 cc of vinegar onto the stone, leave it to act for 10 minutes, then remove it by wiping with a metallic mesh or abrasive sponge. Rinse with water then leave to dry. · · · · · Before cleaning, remove any dirt burnt onto the stone with the aid of a metal spatula or a scraper of the kind used for cleaning glass ceramic hobs. For best results, the stone must still be warm; otherwise, wash it in hot water. Use metal mesh sponges or abrasive scotch-brite pads, dipped in lemon or vinegar. Never use detergents. Never wash in the dishwasher.

Never leave the stone to soak. The damp stone must not be used for at least 8 hours after the end of the cleaning procedures. Over time, slight cracks may appear on the surface of the stone. @@@@MEDIUM DIRT 135 MIN. @@@@When the oven has cooled down, collect the residues from automatic cleaning with a damp microfibre cloth. To select a cleaning cycle with a delayed start, after setting the duration press . The time when the cleaning cycle will terminate will appear on the display. Press and hold , and press or to set the time at which you wish to terminate the cleaning cycle. It is not possible to select any functions once the door locking device has been activated. Wait for to go out.

79 Instructions for the user 8.8 VAPOR CLEAN: assisted oven cleaning (on some models only) VAPOR CLEAN is an assisted cleaning procedure which facilitates the removal of dirt. @@The dirt residues are softened by the heat and water vapour for easier removal afterwards. Before starting the assisted cleaning cycle, make sure that the oven does not contain any foods or large spills from previous cooking operations. Carry out assisted oven cleaning operations only when the oven is cold.

8.8.1 Before starting the assisted cleaning cycle · Completely remove all accessories from inside the oven. The roof lining can be left inside the oven. · Pour approx.

40cl (equivalent to about two glasses) of water onto the floor of the oven (as shown in the figure). Make sure it does not overflow out of the cavity. · Spray a water and washing up liquid solution inside the oven using a spray nozzle.



[You're reading an excerpt. Click here to read official SMEG](#)

[AP578X-8 user guide](#)

<http://yourpdfguides.com/dref/3530536>

Aim the spray towards the side walls, roof, floor and deflector (the coloured zone on the figure to the side shows where the solution can be sprayed). 80 Instructions for the user Do not spray excessive amounts of the water and washing up liquid solution. We recommend spraying approx. 20 times at the most. Close the door and set the assisted cleaning cycle. 8.8.

2 Setting the assisted cleaning cycle Once the preparations have been made for the assisted cleaning cycle, proceed as follows: · turn the oven function knob and the oven thermostat knob to for the · Vapor Clean function; set a cooking time of 15 minutes using the timer control knob; at the end of the assisted cleaning cycle, the timer will deactivate the oven heating elements. 8.8.3 End of the assisted cleaning cycle The water remaining at the end of the assisted cleaning cycle cannot be left inside the oven for long (for example overnight). You are advised to wear a pair of gloves during these processes. At the end of the cleaning cycle, open the door and wipe away the less stubborn dirt with a microfibre cloth. Use an anti-scratch sponge with brass filaments on tougher encrustations. We recommend removing the door as described in "9.2 Removing the door" to facilitate access to restricted spaces. For improved hygiene and to avoid food being affected by any unpleasant odours, we recommend that the oven is dried using a fan function at 160°C for approximately 10 minutes. To set the function, see "6. USING THE OVEN". 81 Instructions for the user 9. EXTRAORDINARY MAINTENANCE The oven may require extraordinary maintenance or replacement of parts subject to wear such as gaskets, bulbs, etc. The following instructions describe how to carry out these minor maintenance operations.

Before any intervention that requires access to live parts, disconnect the power supply of the appliance. 9.1 Replacing the light bulb If a light bulb needs to be replaced because it is worn or burnt out (in multifunction models remove the guide frames; see "8.5.1 Removing the guide frames (on some models only)"). Remove the bulb cover using a tool (e.g. a screwdriver). Remove the bulb by sliding it out as shown. On some models only: the bulbs are halogen bulbs, so do not touch them directly with your fingers, wrap them in an insulating material. Replace the bulb with one of the same type (25W). Replace the cover correctly, so that the moulded part of the glass is facing the door. Press the cover down as far as it will go so that it attaches completely to the bulb support. 82 Instructions for the user 9.2 Removing the door 9.

2.1 With moveable levers Open the door completely. @@@@ Lower the door and once it is in place remove the pins from the holes in the hinges. 84 Instructions for the user 9.3 Removing the door seal To permit thorough cleaning of the oven, the door seal may be removed. There are fasteners on all four sides to attach it to the edge of the oven. Pull the edges of the seal outwards to detach the fasteners. 9.4 Removing the internal glass panels The glass in the door should always be kept thoroughly clean. To facilitate cleaning, it is possible to remove the door (see 9.

2 Removing the door) and place it on a canvas, or open it and lock the hinges in order to extract the glass panels. @@@@ Remove the intermediate panel by lifting it upwards. Cleaning: · It is now possible to clean the external glass panel and the panels removed previously. Use absorbent kitchen roll. In the case of stubborn dirt, wash with a damp sponge and neutral detergent.

Replacing the glass panels: · Replace the panels in the reverse of the order in which they were removed. · Reposition the internal glass panel, taking care to centre and insert the 4 pins attached to the glass into their slots in the oven door by applying slight pressure. 86 Instructions for the installer 10. INSTALLING THE APPLIANCE 10.1 Electrical connection The identification plate bearing the technical data, serial number and brand name is visibly positioned on the appliance.

Do not remove this plate for any reason. The appliance must be connected to earth in compliance with electrical system safety regulations. If a fixed connection is being used, fit the power line with an omnipolar circuitbreaker in accordance with the installation rules, located in a position which is easy to reach and near the appliance. If a plug and socket connection is being used, make sure that the plug and socket are compatible. Avoid use of adapters and shunts as these could cause overheating and a risk of burns. Operation at 220-240 V~: use a H05V2V2-F type three-core cable (3 x 1.5 mm<sup>2</sup>). The end to be connected to the appliance must have an earth wire (yellow-green) at least 20 mm longer than the others. WARNING: The values indicated above refer to the cross-section of the internal conductor. 10.

2 Cable replacement Should the supply cable need replacing, remove the back guard by unscrewing the screws to gain access to the terminal. Replace the cable. The cable cross-section must be no less than 1.5 mm<sup>2</sup> (3 x 1.5) (see 10.1 Electrical connection). Make sure that the cables (for the oven or any hob) follow the best route in order to avoid any contact with the oven. WARNING: The tightening torque of the screws of the terminal supply wires must be 1.5 - 2 Nm. 87 Instructions for the installer 10.

3 Positioning the oven Never use the oven door to lever the oven into place when fitting. Avoid exerting too much pressure on the oven door when open. We recommend installing the oven with the help of a second person. The base on which the oven is resting must be complete as shown in the illustrations below. The oven is designed for mounting into any piece of furniture as long as it is heat-resistant (90°C).

Proceed according to the dimensions shown in figures 1, 2 and 3. For installing under a work top, follow the dimensions given in figures 1 and 2. For installing under a work top with combined cooking hobs, ensure a minimum clearance from any side walls of at least 110 mm. When installing in tall units, comply with the dimensions shown in figures 1 and 2, bearing in mind that the top/rear of the unit must have an opening 35-40 mm deep. Remove the screw covers on the frame and screw in the 2 screws A (fig.

5) to fix the appliance to the unit. Replace the screw covers. For installing beneath a countertop hob, allow for a rear and bottom clearance as shown in figure 1 (ref. F). See the relevant instructions for fitting and securing the appliance. 88 Instructions for the installer FIG.1 A Measurements (mm) 583 ÷ 585 B 554 ÷ 564 C 490 ÷ 500 D 560 min. E 35 ÷ 40 89 Instructions for the installer FIG. 2 FIG. 3 FIG.

4 FIG. 5 90.



[You're reading an excerpt. Click here to read official SMEG](#)

[AP578X-8 user guide](#)

<http://yourpdfguides.com/dref/3530536>