



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SMEG DF612SE. You'll find the answers to all your questions on the SMEG DF612SE in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SMEG DF612SE
User guide SMEG DF612SE
Operating instructions SMEG DF612SE
Instructions for use SMEG DF612SE
Instruction manual SMEG DF612SE

INSTRUCTION MANUAL EN



GUIDE FOR USING THE DISHWASHER AND THE WASHING PROGRAMS



[You're reading an excerpt. Click here to read official SMEG DF612SE user guide](#)

<http://yourpdfguides.com/dref/3517415>

Manual abstract:

For any other information about use and maintenance of the dishwasher, read the enclosed manual carefully. **USER INSTRUCTIONS:** useful information is provided for the use of the washing programs and all the dishwasher's functions. User instructions 1. Description of the controls 1.1 Front panel All the dishwasher control are grouped on the front panel. 1 2 3 4 5 6 7 8 9 10 11 12 13 ON/OFF BUTTON SELECTION PROGRAMS BUTTONS (P1...P5) DELAY PROGRAM BUTTON (on some models only) LOAD WASH BUTTON (on some models only) "3/1" OPTION BUTTON (on some models only) START/PAUSE BUTTON POWER ON LIGHT PROGRAMS LIGHTS DELAY PROGRAM LIGHTS (on some models only) LOAD WASH LIGHT (on some models only) PHASES/PROGRAM LIGHTS NO SALT LIGHT (on some models only) NO RINSE AID LIGHT (on some models only) RECESSED DOOR HANDLE User instructions For AAA 12 place-settings models only (see energy label) PROGRAM SELECTION TYPE AND GRADE DIRT PROGRESS PROGRAM DURATION MINUTES (2) CONSUMPTION WATER LITRES (1) POWER kWh (2) SOAK PANS AND DISHES IN WAITING OF COMPLETING THE LOAD Cold prewash 15 6 0,03 QUICK DISHES NOT MUCH DIRTY AND WITH "FRESH DIRT" WITHOUT RESIDUAL DRY Wash at 38C Cold rinse Rinse at 58C Wash at 55C Cold rinse Rinse at 68C Dry Wash at 65C Cold rinse Rinse at 68C Dry Wash at 70C 2 cold rinses Rinse at 70C Dry Cold prewash Wash at 45C Cold rinse Rinse at 68C Dry Cold prewash Wash at 50C Cold rinse Rinse at 62C Dry Cold prewash Wash at 65C Cold rinse Rinse at 68C Dry Prewash at 45C Wash at 70C 2 cold rinses Rinse at 70C Dry 45 13 0,80 ECO PANS AND DISHES NOT VERY DIRTY BUT WITH DRY RESIDUALS 100 14 1,20 DAILY PANS AND DISHES WITH NORMAL DIRT, WITHOUT DRY RESIDUAL 85 13 1,25 STRONG PANS AND DISHES VERY DIRTY 95 17 1,45 DELICATE + DISHES NOT VERY DIRTY 75 17 1,05 BIO (*) + PANS AND DISHES DIRTY AND WITH DRY RESIDUALS 180 17 1,05 NORMAL + PANS AND DISHES DIRTY AND WITH DRY RESIDUALS 90 17 1,30 SUPER + PANS AND DISHES VERY DIRTY AND WITH DRY RESIDUALS 110 20 1,60 Only run the soak program with half loads. @@(*) Reference program as per EN 50242 standard.

(1) Average power consumption with the softener set on level 2. @@@@(*) Reference program as per EN 50242 standard. (1) Average power consumption with the softener set on level 2. @@@@(*) Reference program as per EN 50242 standard. (1) Average power consumption with the softener set on level 2. (2) The cycle duration and power consumption may vary according to the water and room temperatures, and the type and amount of dishes. User instructions TABLE FOR CERTIFICATION BODIES Reference standard Reference program Load Type of detergent Amount of detergent Rinse aid setting EN 50242 (*) Program BIO (P3+P1) - models AAA-AAB (*) Program ECO (P3) - models BAB 12 place-settings B 30 g 5/6 1.2 Washing programs The dishwasher is equipped with a control panel, described in chapter "1. Description of the controls", from which it is possible to carry out all the power switch-on, switch-off and programming operations. Before starting a washing program make sure that: The water supply tap is open.

The correct amount of detergent has been added to the dispenser. The baskets have been correctly loaded. The spray arms are able to rotate freely and without obstruction. The dishwasher door is securely closed. LIGHTING When the ON/OFF button (1) is pressed, the dishwasher switches on and the light (6) comes on. About 2 seconds later, the PHASES/PROGRAM lights (10) will come on. User instructions PROGRAMMING In this model of dishwasher, all programming procedures can only be carried out with the door closed. As long as the door is open, the PROGRAMS lights (7) and PHASES/PROGRAM lights (10) will remain off. SELECTION PROGRAM The program selection is possible through the relative buttons (2). When the button relating to the program required is pressed, the relative light will come on to confirm the operation.

START PROGRAM To start the dishwasher, press the START/PAUSE button (5) for a few seconds, until the light of the first phase of the selected program starts to flash (confirmation beep). This phase, that updates itself during the cycle, is "indicative" since it is influenced by the washing conditions such as dishwasher type and quantity, entry temperature etc. For this reason it is normal to see the updating during a program (increment and decrease of minutes) specially in the passage from one phase to the other (for example, from washing to rinse). As the program runs, the PHASES/PROGRAM lights (10) will indicate the current cycle status. Prewash Wash Rinse Dry The light of the phase in progress will flash, while the lights of the previous and subsequent phases remain on. N.B. during execution of programs which do not include a prewash, the first PHASES/PROGRAM light (10) will remain off. User instructions END PROGRAM When the program finishes, a buzzer sounds briefly and all the PHASES/PROGRAM lights (10) flash. Press any of the SELECTION PROGRAMS buttons (2), stops the light flashins, and the dishwasher is now ready to perform a new cycle; opening and shutting the door or switching the appliance off and on has the same effect.

INTERRUPTION OF A PROGRAM In order to interrupt a running program it is necessary: press the START/PAUSE button (5), the light of the current phase goes out; keep the button pressed until the PHASES/PROGRAM lights (10) come on (confirmation buzzer). TO CHANGE A PROGRAM To change the running program it is necessary: to interrupt the running program (see "INTERRUPTION OF A PROGRAM"); select the new program; to press again the START/PAUSE button (5) to make start the new program. User instructions ANNULING A PROGRAM To annul the program in progress, it must first be interrupted (see "INTERRUPTION OF A PROGRAM"). Now press buttons P1+P2 simultaneously and the first three program lights will come on. In case that the door is opened during the operation, to the next door closing it is going to be necessary to start the program as shown in paragraph "START PROGRAM".

The program will resume from the point in which it was interrupted. In case that the tub temperature is higher than 50C the program will start about 30 seconds later. The washing cycle will not take place if the dishwasher door is left open or not properly closed. HALF LOAD WASH FUNCTION (on some models only) (available in all programs except the soak program) Pressing button LOAD WASH (4) selects washing on the top basket only. After selecting the program, proceed as follows: press the button LOAD WASH (4) once to select the top basket (the relative light comes on); press the button LOAD WASH (4) again to return to full load wash status (the light goes out).

The LOAD wash option can be selected in all programs except the soak program.



[You're reading an excerpt. Click here to read official SMEG DF612SE user guide](http://yourpdfguides.com/dref/3517415)

<http://yourpdfguides.com/dref/3517415>

N.B.: selecting the **LOAD** option changes the duration of the program. It is possible to place a cutlery basket inside the basket selected for the **HALF-LOAD** program; the other basket must remain empty. **WARNING:** do not load dishes and cutlery into the non-selected basket, because the water spray will only reach the selected basket. User instructions "3/1" **OPTION BUTTON** (on some models only) (available in all programs except the soak program) By pressing the button (4) you activate the "3/1" option, confirmed when the relative light comes on. This option has been studied for the use of dishwashing powder or tablets with integrated substances in place of regenerating salt or rinse-aid known on the market as "3 in 1" or "triple action" products; in this case the dishwasher will use the product in an optimal way avoiding salt and rinse-aid consumption, which could already be found in the dishwasher. Note: When selecting the "3/1" button, it is normal that the salt and rinse-aid lights remain on, if their containers are empty. **DELAY PROGRAM** (on some models only) (available in all programs except the soak program) The **PROGRAM DELAY** button (3) can be pressed to delay the start of the washing program by 3, 6 or 9 hours.

This function allows you to set the dishwasher to work at your preferred time of day. After selecting the delay, start the program (see relative section). The appliance will prewash the dishes, after which the "program delay" set previously will come into effect (the light corresponding to 3, 6 or 9 hours flashes). To reset or change the delay once the program has started: press the **START/PAUSE** button (5) for a few seconds, until the **PHASES/PROGRAM** lights (10) come on; press the **DELAY PROGRAM** button (3) several times "until the program delay" returns to zero nts 1. 2. 3. 4. Safety and operating instructions

_____30 Installation and hook-up _____34 Operating instructions
_____38 Cleaning and maintenance _____51 Thank you for choosing one of our

products. @@@@Following the cleaning instructions provided here will keep your dishwasher's performance at peak levels in the long term. This user-friendly manual will provide answers to all your questions about use of the dishwasher.

INSTALLATION INSTRUCTIONS: these are intended for the qualified technician **ARE SOILED WITH ASH, WAX OR PAINTS. LEANING OR SITTING ON THE DISHWASHER DOOR WHEN OPEN MAY CAUSE THE APPLIANCE TO OVERTURN, PUTTING PEOPLE AT RISK. NEVER LEAVE THE DISHWASHER DOOR OPEN; PEOPLE MIGHT TRIP OVER IT. DO NOT UNDER ANY CIRCUMSTANCES TOUCH THE HEATING ELEMENT IMMEDIATELY AFTER THE END OF A WASHING PROGRAM. OVER TIME, THE DISHWASHER HEATING ELEMENTS MAY CHANGE COLOUR, IN PART OR OVERALL.**

THIS IS PERFECTLY NORMAL AND DOES NOT IN ANY WAY AFFECT THE OPERATION OF THE APPLIANCE. DO NOT DRINK THE WATER RESIDUES WHICH MAY BE PRESENT INSIDE THE DISHES OR DISHWASHER AT THE END OF THE WASHING PROGRAM AND BEFORE THE DRYING CYCLE. KNIVES OR OTHER SHARP-ENDED COOKING UTENSILS MUST BE PLACED IN THE CUTLERY BASKET BLADE-DOWN, OR LAID HORIZONTAL IN THE TOP BASKET. TAKE CARE NOT TO CUT YOURSELF AND ENSURE THAT THEY DO NOT PROJECT FROM THE BASKET.

AQUASTOP MODELS THE AQUASTOP DEVICE PREVENTS FLOODING IN THE EVENT OF A WATER LEAK.

WHEN THE AQUASTOP DEVICE IS TRIPPED, CALL IN A QUALIFIED TECHNICIAN TO IDENTIFY AND REPAIR THE FAULT. IN MODELS EQUIPPED WITH THE AQUASTOP DEVICE, THERE IS A SOLENOID VALVE INSIDE THE WATER INTAKE HOSE. DO NOT CUT THE HOSE AND DO NOT ALLOW THE SOLENOID VALVE TO DROP INTO WATER. IN THE EVENT OF DAMAGE TO THE WATER INTAKE HOSE, DISCONNECT THE APPLIANCE FROM THE ELECTRICAL POWER SUPPLY AND FROM THE WATER SUPPLY. Safety instructions IMMEDIATELY AFTER INSTALLING THE DISHWASHER, PERFORM A QUICK TEST OF THE APPLIANCE FOLLOWING THE INSTRUCTIONS BELOW. IF THE DISHWASHER FAILS TO OPERATE CORRECTLY, DISCONNECT IT FROM THE ELECTRICAL POWER SUPPLY AND CALL THE NEAREST TECHNICAL SERVICE CENTRE. DO NOT ATTEMPT TO REPAIR THE APPLIANCE. THE DISHWASHER MEETS ALL THE REQUIREMENTS SET OUT BY THE REGULATIONS IN FORCE CONCERNING SAFETY AND ELECTRICAL EQUIPMENT. ANY TECHNICAL CHECKS SHOULD BE CONDUCTED EXCLUSIVELY BY A TRAINED AND AUTHORISED TECHNICIAN; REPAIRS CARRIED OUT BY UNAUTHORISED PERSONS WILL INVALIDATE THE WARRANTY, AS WELL AS POSING A POTENTIAL HAZARD TO THE USER. The manufacturer declines all responsibility for damage to persons or property resulting from failure to observe the above precautions, from tampering with even a single component of the appliance, or from the use of non original spare parts.

Installation instructions 2. Installation and hook-up Remove the polystyrene basket retainers. Position the appliance in the desired place of installation. The back or sides of the dishwasher may be placed up against walls or other furniture units. If the dishwasher is installed near a heat source, fit the special insulating panel to prevent overheating and malfunction of the appliance. To ensure stability, install integrated or built-under dishwashers only under continuous worktops, and screw them to the adjacent units. To facilitate the installation procedure, the intake and drain hoses can be positioned in any direction; make sure that the hoses are not kinked, crushed or pulled too tightly. Make sure to tighten the locking ring-nut once the pipes have been placed in the direction required. A hole at least 8 cm in diameter is required to allow the power supply cable and pipes to pass. Level the appliance on the floor using its adjustable feet.

This operation is essential for ensuring correct operation of the dishwasher. Building-in a dishwasher underneath a ceramic hob is absolutely forbidden. A dishwasher can be built-in underneath a conventional hob provided there is no break in the kitchen worktop, and the dishwasher and hob are installed and secured correctly, so that no hazards are generated. For free-standing models only - Installing a hob on top of a free-standing dishwasher is absolutely forbidden. - If the appliance is not built-in and is therefore accessible on one side, the door hinge area must be covered for safety reasons (injury hazard).

The covering fixtures are available as an accessory from specialist dealers or the After-Sales Service. - To build in the dishwasher, the special kit must be purchased from authorised dealers or the After-Sales Service. @@@@It is important to prevent the hose from coming loose and falling. @@@@THE PLUG MUST BE ACCESSIBLE AFTER INSTALLATION. NEVER DISCONNECT THE PLUG BY PULLING ON THE

POWER SUPPLY LEAD.

@@@@AFTER INSTALLATION THE DISCONNECTION DEVICE HAS TO BE EASY TO REACH. @@approved fuse to BS 1362 type and proceed as follows: 1. 2. 3. Remove the fuse cover A and fuse B. Fit replacement 13A fuse into fuse cover. @@@@@@The salt container can hold approximately 1.7 Kg of salt in grains.



[You're reading an excerpt. Click here to read official SMEG DF612SE user guide](http://yourpdfguides.com/dref/3517415)
<http://yourpdfguides.com/dref/3517415>

Some models are equipped with an optical no-salt indicator. @@@@The container is situated at the bottom of the dishwasher.

@@@@@@@@@In the event of this occurring, the warranty will be invalidated. @@@@@@@@@@ Open the door. Rotate the container cap anticlockwise by a turn and remove it. Add the rinse aid until the container is full (approximately 140 cc). The optical level indicator on the side of the cap should be completely obscured. Refill the rinse aid when the optical level indicator becomes clear again, or when the rinse aid warning light illuminates.

Replace the cover and turn it in a clockwise direction. Use a cloth to remove any spillage of rinse aid which might lead to the formation of excess foam.

ADJUSTING THE RINSE AID DISPENSER SETTING The dishwasher is factory set for medium water hardness. However it possible to change the setting by turning the dispenser's selector to the desired position: the amount of rinse aid dispensed is proportional to the selector position.

To adjust the rinse aid setting, rotate the dispenser cap through a quarter turn in an anticlockwise direction and remove it. Then use a screwdriver to rotate the rinse aid selector to the desired position. Replace the cap, turning it clockwise. The amount of rinse aid must be increased if the washed dishes appear dull or feature circular stains. If, on the other hand, the dishes are sticky or have white streaks, it is necessary to reduce the rinse aid setting.

User instructions **ADDING THE DETERGENT** To open the detergent dispenser cap, lightly press the button P. Add the detergent and close the cap carefully. During the washing cycle, the dispenser will be opened automatically. When a program with hot prewash is selected (see program table), extra detergent must be placed in the cavity G/H (depending on models). Use only detergents specially formulated for dishwashers.

For optimal washing results it is important to use a good quality detergent. The detergent packs must be sealed and stored in a dry place to prevent the formation of lumps which may negatively affect washing results. Once opened the detergent packs should not be kept for too long, otherwise the detergent loses its effectiveness. Do not use detergents formulated for washing dishes by hand, because they produce a great deal of foam and may negatively affect the operation of the dishwasher. Add the correct amount of detergent. An insufficient amount of detergent will result in a partial removal of dirt from the dishes, whereas an excessive amount is wasteful and does not improve the washing results. User instructions The market offers liquid and powder detergents with differing chemical compositions, which may contain phosphates, or be phosphate-free but contain natural enzymes. - Detergents containing phosphates are more effective against grease and starch at temperatures above 60C. - Enzyme detergents, on the other hand, are also effective at lower temperatures (from 40 to 55C) and are more easily biodegradable. With enzyme detergents it is possible to obtain at low temperatures comparable results to those which can only be achieved at 65C using traditional detergents.

For the safeguarding of the environment we recommend the use of phosphate- and chlorine free detergents. "3/1" Products If you wish to use detergents which already contain salt and rinse aid, check whether your dishwasher is fitted with the "3/1 option button" on the "Controls description" page and then refer to the section which explains how to use this function. If the button is not provided, we recommend the use of conventional products (separate detergent, salt and rinse aid), because with conventional washing cycles "3/1" products might create problems such as a white deposit, poor drying results and residues left on dishes. The introduction of detergent into the rinse aid dispenser, even in liquid form, will damage the dishwasher. User instructions 3.3 General warnings and recommendations Before using the dishwasher for the first time, it is advisable to read the following recommendations concerning dish types to be washed and their loading. There are generally no constraints on the washing of domestic dishes, but in certain cases it is necessary to take their characteristics into account. Before loading the dishes into the baskets it is necessary to: remove coarse food remains: e.g. bones, fish-bones, etc.

which may clog the filter or damage the wash pump. @@@@@@@@Correct loading of the dishes helps ensure optimal washing results. **WARNING!**

@@@@@@@@@Plastic dishes: heat resistant plastic dishes must be washed in the upper basket. Dishes and objects in copper, tin, zinc or brass: these tend to stain. Aluminium dishes: items made from anodised aluminium may lose their colour.

Silverware: silver items may stain. Glass and crystal: in general, glass and crystal objects can be washed in the dishwasher. However, certain types of glass and crystal may become dull and lose their clearness after many washings. Therefore, for these items we recommend using the least aggressive program available. Decorated items: the decorated objects available on the market are generally able to withstand washing in the dishwasher, although the colours may fade after a great many washes.

If in doubt as to the fastness of the colours, it is advisable to wash just a few items at a time for approximately one month. User instructions 3.4 Using the baskets The dishwasher has a capacity of 12 place-settings, including serving dishes. EN 50242 STANDARD LOADS FOR CERTIFICATION BODIES LOWER BASKET UPPER BASKET UPPER BASKET for AAA models only (see energy label) The upper basket must be set in the low position. User instructions LOWER BASKET The lower basket receives the full force of the lower spray arm, and should therefore be used for the "toughest" items with a heavier degree of soiling. All types and combinations of loads are permitted, provided that the dishes, pots and pans are arranged with all the soiled surfaces exposed to the water jets coming from the bottom. With fixed supports To make the most of the space inside the basket when loading large items, certain models are equipped with tip-up supports for plates in 2 or 4 sections. With tip-up supports **LOADING THE LOWER BASKET** Carefully load flat plates, soup plates, dessert and serving dishes, positioning them vertically. Pots, pans and their covers must be loaded upside down. When loading soup plates and dessert bowls, be sure to leave a gap between them.

Loading examples: **LOAD** (certain models only) User instructions **CUTLERY BASKET** The cutlery should be arranged in an orderly manner inside the basket, with the handles pointing downwards. Take care during loading to avoid injury from the knife blades. The basket is suitable for all types of cutlery, except those long enough to interfere with the upper spray arm.



[You're reading an excerpt. Click here to read official SMEG DF612SE user guide](http://yourpdfguides.com/dref/3517415)
<http://yourpdfguides.com/dref/3517415>

Ladles, wooden spoons and cooking knives can be placed in the upper basket, making sure that the knife blades do not protrude from the basket. The dishwasher is complete with two cutlery baskets, which means that one of them can be removed, freeing space in the bottom basket, if there is not much cutlery to be washed, or if a load program is being used (on models with this function). The basket features an exclusive system of independent sliding tipup supports, offering a choice of possible combinations to allow optimum use of the space available. Horizontal insert closed Horizontal insert open Vertical inserts Movement required to extract the inserts User instructions UPPER BASKET It is recommended to load the upper basket with small- or medium-sized items such as glasses, small plates, tea or coffee cups, shallow bowls and light objects made from heat resistant plastic. If the upper basket is used in the lowermost position, it can also be loaded with serving dishes, provided they are only slightly soiled. To make full use of the space available, the top basket has two plastic grids that can be lifted to make room for tall glasses such as stem glasses. The top basket is fitted (on the left) with two plastic racks which can be raised to make room for tall glasses, such as stem glasses.

On the right there are two cutlery racks designed to take knives and teaspoons; when not in use, they can be left vertical, attached to the basket. To use the space designed for teaspoons, remove the insert as shown in the illustrations. for AAA models only (see energy label) User instructions LOADING THE UPPER BASKET Load plates facing forward; cups, bowls etc. must always be facing downwards. The left-hand side of the basket can be loaded with two layers of cups and glasses.

The centre can be filled with plates and sideplates, fitted upright into the supports provided. Loading examples: LOAD (certain models only) LOAD for AAA models only (see energy label) User instructions ADJUSTING THE UPPER BASKET The upper basket can be adjusted in two positions, according to the user's needs and according to the height of the dishes in the lower basket. Proceed as follows. Pull-out version: pull out the right-hand basket guide; remove the stop, first releasing it as shown in the diagram; push the guide to free the wheels; fit the upper or lower pair of wheels into the guide, depending on the setting required; return the stop to its original position. Push-button version: pull out the basket to its limit position and pull the right side upwards.

At this point it is possible to load larger sized plates into the lower basket. To return to the original position, pull out the upper basket again and press the release lever. User instructions 4. Cleaning and maintenance Before carrying out any work, always disconnect the appliance from the electrical power supply. 4.1 General warnings and recommendations Avoid the use of acidic or abrasive detergents. Clean the outer surfaces and door-lining of the dishwasher regularly using a soft cloth moistened with water or with a normal detergent suitable for painted surfaces. Clean the door gaskets with a damp sponge. Periodically (once or twice a year) it is advisable to clean the tank and gaskets, using a soft cloth and water to remove any deposits.

@@@ Wash them under running water and carefully replace them in their seats, checking that their rotary movement is in no way impeded.

To remove the upper spray arm, unscrew locking ring R. To remove the lower spray arm, simply lift it up, pulling by the central part. To remove the orbital spray arm assembly, take hold of the longer arm and pull the orbital unit upward. Wash the arms under a jet of running water and return them carefully to their seat. After reassembly, check that the spray arms turn freely. @@@@ Unplug the power cord from the socket. Leave the door slightly open, in order to prevent the formation of unpleasant odours inside the washing tank. Fill the rinse aid dispenser. Shut off the water supply tap. User instructions BEFORE STARTING THE DISHWASHER AFTER PROLONGED DISUSE: Check that there are no deposits of sludge or rust inside the water pipe: if there are, allow the water to run from the water supply tap for a few minutes.

Plug the power cord back into the socket. Reconnect the water intake hose and open the tap again. TROUBLESHOOTING MINOR PROBLEMS In some cases it is possible to remedy minor problems by referring to the following instructions: If the program fails to start, check that: the dishwasher is connected to the electrical power supply; there is no power failure; the water tap is open; the dishwasher door is properly closed. If water remains inside the dishwasher, check that: the drain hose is not kinked; the drain siphon is not obstructed; the dishwasher filters are not clogged. If the dishes are not being cleaned properly, check that: the correct amount of detergent has been added; there is regenerating salt inside the special container; the dishes are being loaded correctly; the selected program is suitable for the dish types and their degree of soiling; all the filters are clean and positioned correctly; the spray arm nozzles are not obstructed; there is no object obstructing the rotation of the spray arms.

User instructions If the dishes fail to dry or remain dull, check that: there is rinse aid inside the special container; the rinse aid dispenser setting is correct; the detergent used is of good quality and has not lost its effectiveness (for example, through incorrect storage, with the box left open). If the dishes show signs of streaking, staining, etc., check that: the rinse aid dispenser setting is not too high. If there are visible traces of rust inside the tank: the tank is made of steel, and therefore any rust marks are due to external elements (fragments of rust from the water pipes, pots, cutlery, etc.).

Special products are commercially available to remove such marks; check that the amount of detergent being used is correct. Certain detergents can be more corrosive than others. check that the cap of the salt container is securely closed, and that the water softening setting is correct. If after following the above troubleshooting instructions the problem persists, call the nearest After-Sales Centre. WARNING: any operations performed on the appliance by unauthorised persons are not covered by the warranty and shall be paid for by the user. TECHNICAL DATA Width Depth measured flush with the outer edge of the control panel Height (depending on models) Capacity Water supply pressure Electrical characteristics 597 599 mm Free standing: 600 mm Semi-integrated: 590 mm - Fully integrated: 570 mm Free standing: from 850 mm to 870 mm from 890 mm to 910 mm Semi-integrated and fully integrated: from 820 mm to 870 mm from 860 mm to 910 mm 12 Standard place settings min. 0,05 - max. 0,9 MPa (min).



[You're reading an excerpt. Click here to read official SMEG DF612SE](http://yourpdfguides.com/dref/3517415)

[user guide](http://yourpdfguides.com/dref/3517415)

<http://yourpdfguides.com/dref/3517415>

0.5 max.

9 bar) See rating plate 115 125 135 145 155 Misurare l'altezza del pannello comandi; fare coincidere l'indice relativo a tale valore con il profilo superiore della porta in legno; tracciare il posizionamento degli agganci porta. Measure the height of the control panel; bring the mark relating to this value in line with the top edge of the wood end door; mark the positions of the door connections. Mesurer la hauteur du panneau de commandes; faire coïncider l'index relatif à cette valeur avec le profil supérieur de la porte en bois; tracer le positionnement des crochets de la porte. Die Höhe des Bedienfelds messen; Die diesem Wert entsprechende Markierung mit dem oberen Profil der Holz- zur Deckung bringen; Die Position der Traufhungen anzeichnen. Meet de hoogte van het bedieningspaneel; laat de markering die bij de waarde hoort overeen stemmen met het bovenste profiel van de houtendeur; tekende positie van de deurhingsels af. Medir la altura del panel de mandos; hacer coincidir el índice correspondiente a dicho valor con el perfil superior de la puerta de madera; trazar el posicionamiento de las bisagras de la puerta. Mea a altura do painel de comandos; faa o mesmo indicador relativo ao este valor coincidir com o perfil superior da porta de madeira; marque a posição dos ganchos da porta. Solos alcuni modelli Certain model only Seulements certains modèles nur bei einigen Modellen Sloen algunos modelos alleen in dienvantoe passing 115 125 135 145 155 ATTENZIONE: Montare la porta e regolare la tensione delle molle laterali prima dell'installazione. IMPORTANT: Doortemplate, do not destroy. Fit door and adjust hinge tension before installation. ATTENTION: Apres montage de la porte, régler la tension des ressorts latéraux avant l'installation. Solos alcuni modelli Certain model only Seulements certains modèles nur bei einigen Modellen Sloen algunos modelos alleen in dienvantoe passing SUPERFICIE INTERNA SURFACE INTERNE INNERSURFACE INNENFLACHE LATO SUPERIORE BORD SUPERIEURE UPPER EDGE OBERKANTE WICHTIG: Tr montieren, Trfedern vor Einbau einstellen. ATENO: Antes de instalar, monte a porta e regule a tensão das molas laterais. IMPORTANTE: Montar la puerta y regular los muelles laterales antes de la instalación. 10 1 11 8 Regolazione vite tensione molle (13) Copertura fotocontappo indotazione (14) Doorspring Adjustment device (13) Covering of hole using cap provided (14) Rglage des ressorts de la porte (13) Couverture du trou avec le bouchon fourni (14) Vorrichtung für die Einstellung der Spannung der Trfedern (13) Abdeckendes Lochs mit dem mitgelieferten Stopfen (14) 13 9 NOTA: Solamente alcuni modelli sono dotati di uno dei dispositivi sotto illustrati. N.B.: Only some models are equipped with one of the two devices illustrated below. REMARQUE: seul quelques modèles sont munis de l'un des deux dispositifs illustrés ci-dessus. ANMERKUNG: Nur einige Modelle verfügen über eine der beiden unten dargestellten Einrichtungen. NOTABENE: uitsluitend bepaalde modellen zijn uitgerust met n van de twee onderstaand afgebeelde inrichtingen. NOTA: Slo algunos modelos estn equipados con uno de los dos dispositivos que se ilustran a continuacin. NOTA: Salguns modelos esto equipados com um dos dois dispositivos ilustrados abaixo 1/2" 3/4" 3/4" SW32 Cu10 MIN 40cm .



[You're reading an excerpt. Click here to read official SMEG DF612SE user guide](http://yourpdfguides.com/dref/3517415)
<http://yourpdfguides.com/dref/3517415>