



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SMEG DF612WE. You'll find the answers to all your questions on the SMEG DF612WE in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SMEG DF612WE
User guide SMEG DF612WE
Operating instructions SMEG DF612WE
Instructions for use SMEG DF612WE
Instruction manual SMEG DF612WE

INSTRUCTION MANUAL

EN

GUIDE FOR USING THE DISHWASHER AND THE WASHING PROGRAMS



[You're reading an excerpt. Click here to read official SMEG DF612WE user guide](http://yourpdfguides.com/dref/3517435)
<http://yourpdfguides.com/dref/3517435>

Manual abstract:

3. 4. 5. @@@@ Recommendations are given for the correct use of the baskets, spray arms, containers, filters, washing programs, and for operating the controls. Following the cleaning instructions provided here will keep your dishwasher's performance at peak levels in the long term. This user-friendly manual will provide answers to all your questions about use of the dishwasher. **INSTALLATION INSTRUCTIONS:** these are intended for the qualified technician who must carry out the installation, hook-up and testing of the appliance. **USER INSTRUCTIONS:** these consist of recommendations for using the appliance, a description of its controls and of the correct cleaning and maintenance procedures. 1 Safety instructions 1. @@@@ **THE APPLIANCE IS DESIGNED FOR THE FOLLOWING PURPOSE: WASHING AND DRYING OF DISHES; ANY OTHER USE SHALL BE CONSIDERED IMPROPER. THE MANUFACTURER DECLINES ALL RESPONSIBILITY FOR USES OTHER THAN THOSE DESCRIBED ABOVE. THE NAME PLATE FEATURING THE TECHNICAL DATA, SERIAL NUMBER AND MARKINGS IS VISIBLY POSITIONED ON THE INNER EDGE OF THE DOOR. THE NAME PLATE ON THE INNER EDGE OF THE DOOR MUST NEVER BE REMOVED. DO NOT LEAVE THE DISCARDED PACKAGING MATERIALS UNSUPERVISED WITHIN THE HOME. SEPARATE THE VARIOUS MATERIALS WHICH MAKE UP THE PACKAGING AND TAKE THEM TO THE NEAREST SORTED WASTE COLLECTION CENTRE.**

THE APPLIANCE MUST BE PROVIDED WITH AN EARTH CONNECTION IN ACCORDANCE WITH THE ELECTRICAL SAFETY REGULATIONS IN FORCE. THE MANUFACTURER DECLINES ALL RESPONSIBILITY FOR DAMAGE TO PERSONS OR PROPERTY RESULTING FROM THE FAILURE TO EARTH THE APPLIANCE OR FROM A DEFECTIVE EARTH CONNECTION. IF THE APPLIANCE IS INSTALLED ON A CARPETED OR COVERED FLOOR, ENSURE THAT THE OPENINGS ON ITS UNDERSIDE ARE NOT OBSTRUCTED. ALWAYS SWITCH OFF THE DISHWASHER AFTER EACH USE TO AVOID WASTING ELECTRICITY. 2 Safety instructions **OBSOLETE APPLIANCES MUST BE RENDERED UNUSABLE. CUT OFF THE MAINS POWER CORD AFTER UNPLUGGING IT FROM THE WALL OUTLET, AND MAKE SAFE ANY COMPONENTS WHICH MIGHT BE DANGEROUS FOR CHILDREN (LOCKS, DOORS, ETC.). THIS APPLIANCE IS MARKED ACCORDING TO THE EUROPEAN DIRECTIVE 2002/96/EC ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE). BY ENSURING THIS PRODUCT IS DISPOSED OF CORRECTLY, YOU WILL HELP PREVENT POTENTIAL NEGATIVE CONSEQUENCES FOR THE ENVIRONMENT AND HUMAN HEALTH, WHICH COULD OTHERWISE BE CAUSED BY INAPPROPRIATE WASTE HANDLING OF THIS PRODUCT. THE SYMBOL ON THE PRODUCT, OR ON THE DOCUMENTS ACCOMPANYING THE PRODUCT, INDICATES THAT THIS APPLIANCE MAY NOT BE TREATED AS HOUSEHOLD WASTE. INSTEAD IT SHALL BE HANDED OVER TO THE APPLICABLE COLLECTION POINT FOR THE RECYCLING OF ELECTRICAL AND ELECTRONIC EQUIPMENT. DISPOSAL MUST BE CARRIED OUT IN ACCORDANCE WITH LOCAL ENVIRONMENTAL REGULATIONS FOR WASTE DISPOSAL. FOR MORE DETAILED INFORMATION ABOUT TREATMENT, RECOVERY AND RECYCLING OF THIS PRODUCT, PLEASE CONTACT YOUR LOCAL CITY OFFICE, YOUR HOUSEHOLD WASTE DISPOSAL SERVICE OR THE SHOP WHERE YOU PURCHASED THE PRODUCT. IN THE EVENT OF A FAULT, DISCONNECT THE DISHWASHER FROM THE ELECTRICAL POWER SUPPLY AND SHUT OFF THE WATER TAP. DO NOT USE APPLIANCES WHICH HAVE BEEN DAMAGED DURING TRANSIT! IF IN DOUBT, CONSULT YOUR DEALER.**

THE APPLIANCE MUST BE INSTALLED AND CONNECTED IN ACCORDANCE WITH THE INSTRUCTIONS PROVIDED BY THE MANUFACTURER OR BY A QUALIFIED TECHNICIAN. THIS DISHWASHER MUST BE USED BY ADULTS. USE BY PERSONS WITH REDUCED MENTAL AND/OR PHYSICAL CAPABILITIES IS ONLY PERMITTED UNDER THE SUPERVISION OF A PERSON RESPONSIBLE FOR THEIR SAFETY. KEEP CHILDREN AWAY FROM DETERGENTS AND PACKAGING MATERIALS (PLASTIC BAGS, POLYSTYRENE, ETC.), AND NEVER ALLOW THEM TO APPROACH OR PLAY WITH THE DISHWASHER, SINCE IT MIGHT CONTAIN DETERGENT RESIDUES CAPABLE OF CAUSING PERMANENT DAMAGE TO THE EYES, MOUTH AND THROAT, AND EVEN LEADING TO SUFFOCATION. DO NOT INTRODUCE SOLVENTS SUCH AS ALCOHOL OR TURPENTINE WHICH MAY CAUSE AN EXPLOSION. DO NOT LOAD DISHES THAT ARE SOILED WITH ASH, WAX OR PAINTS. 3 Safety instructions **LEANING OR SITTING ON THE DISHWASHER DOOR WHEN OPEN MAY CAUSE THE APPLIANCE TO OVERTURN, PUTTING PEOPLE AT RISK. NEVER LEAVE THE DISHWASHER DOOR OPEN; PEOPLE MIGHT TRIP OVER IT. DO NOT DRINK THE WATER RESIDUES WHICH MAY BE PRESENT INSIDE THE DISHES OR DISHWASHER AT THE END OF THE WASHING PROGRAM AND BEFORE THE DRYING CYCLE.**

KNIVES OR OTHER SHARP-ENDED COOKING UTENSILS MUST BE PLACED IN THE CUTLERY BASKET BLADE-DOWN, OR LAID HORIZONTAL IN THE TOP BASKET. TAKE CARE NOT TO CUT YOURSELF AND ENSURE THAT THEY DO NOT PROJECT FROM THE BASKET. AQUASTOP MODELS THE AQUASTOP DEVICE PREVENTS FLOODING IN THE EVENT OF A WATER LEAK. WHEN THE AQUASTOP DEVICE IS TRIPPED, CALL IN A QUALIFIED TECHNICIAN TO IDENTIFY AND REPAIR THE FAULT. IN MODELS EQUIPPED WITH THE AQUASTOP DEVICE, THERE IS A SOLENOID VALVE INSIDE THE WATER INTAKE HOSE.

DO NOT CUT THE HOSE AND DO NOT ALLOW THE SOLENOID VALVE TO DROP INTO WATER. IN THE EVENT OF DAMAGE TO THE WATER INTAKE HOSE, DISCONNECT THE APPLIANCE FROM THE ELECTRICAL POWER SUPPLY AND FROM THE WATER SUPPLY. IMMEDIATELY AFTER INSTALLING THE DISHWASHER, PERFORM A QUICK TEST OF THE APPLIANCE FOLLOWING THE INSTRUCTIONS BELOW. IF THE DISHWASHER FAILS TO OPERATE CORRECTLY, DISCONNECT IT FROM THE ELECTRICAL POWER SUPPLY AND CALL THE NEAREST TECHNICAL SERVICE CENTRE. DO NOT ATTEMPT TO REPAIR THE APPLIANCE.

THE DISHWASHER MEETS ALL THE REQUIREMENTS SET OUT BY THE REGULATIONS IN FORCE CONCERNING SAFETY AND ELECTRICAL EQUIPMENT. ANY TECHNICAL CHECKS SHOULD BE CONDUCTED EXCLUSIVELY BY A TRAINED AND AUTHORISED TECHNICIAN: REPAIRS CARRIED OUT BY UNAUTHORISED PERSONS WILL INVALIDATE THE WARRANTY, AS WELL AS POSING A POTENTIAL HAZARD TO THE USER. The manufacturer declines all responsibility for damage to persons or property resulting from failure to observe the above precautions, from tampering with even a single component of the appliance, or from the use of non original spare parts. 4 Installation instructions 2. Installation and hook-up Remove the polystyrene basket retainers. Position the appliance in the desired place of installation. The back or sides of the dishwasher may be placed up against walls or other furniture units. If the dishwasher is installed near a heat source, fit the special insulating panel to prevent overheating and malfunction of the appliance. To ensure stability, install integrated or built-under dishwashers only under continuous worktops, and screw them to the adjacent units. To facilitate the installation procedure, the intake and drain hoses can be positioned in any direction; make sure that the hoses are not kinked, crushed or pulled too tightly.

Make sure to tighten the locking ring-nut once the pipes have been placed in the direction required. A hole at least 8 cm in diameter is required to allow the power supply cable and pipes to pass. Level the appliance on the floor using its adjustable feet. This operation is essential for ensuring correct operation of the dishwasher. Building-in a dishwasher underneath a ceramic hob is absolutely forbidden.

[You're reading an excerpt. Click here to read official SMEG DF612WE user guide](#)



<http://yourpdfguides.com/dref/3517435>

A dishwasher can be built-in underneath a conventional hob provided there is no break in the kitchen worktop, and the dishwasher and hob are installed and secured correctly, so that no hazards are generated. When installing the dishwasher in a compartment next to one or more other appliances, it is essential to comply with all the recommendations provided by the appliance's manufacturer (minimum distances, installation procedures, etc.). For free-standing models only: - Installing a hob on top of a free-standing dishwasher is absolutely forbidden. - If the appliance is not built-in and is therefore accessible on one side, the door hinge area must be covered for safety reasons (injury hazard).

The covering fixtures are available as an accessory from specialist dealers or the After-Sales Service. - To build in the dishwasher, the special kit must be purchased from authorised dealers or the After-Sales Service. Some models are equipped with only one adjustable foot at the rear, which can be adjusted by turning the screw on the lower front part of the appliance. 5 Installation instructions 2.1 Water supply connection Preventing the risk of clogging or damage: if the water pipe is new or has not been used for a long time, before connecting to the water supply check that the water is clear and free of impurities, to prevent damage to the appliance.

The dishwasher must always be connected to the water system with new hoses; old or used hoses must never be reused. **CONNECTING TO THE WATER SUPPLY** Connect the intake hose to a cold water supply with " gas thread, inserting the filter A supplied with the dishwasher. Take care to screw the hose firmly into place with your hands and then complete by tightening about of a turn with pliers. In dishwashers equipped with the ACQUASTOP device, the filters is already fitted inside the threaded ring. The dishwasher can also be connected to a hot water supply not exceeding 60C. Supplying the appliance with hot water cuts down the washing time by approximately 20 minutes, but slightly reduces its effectiveness. Make the connection to the domestic hot water supply using the same procedure described for connecting to the cold water supply. **DRAIN CONNECTION** Insert the dishwasher's drain hose into a drain pipe having a diameter of at least 4 cm, or alternatively, place it inside the kitchen sink using the plastic support provided, taking care not to crush or excessively bend the hose. It is important to prevent the hose from coming loose and falling. For this purpose, the plastic support is equipped with a hole for tying it to the wall or water tap. The free end should be positioned at a height of between 30 and 100 cm, and should never be submerged in water. If a horizontal drain extension hose is used (for a maximum of 3 m) the drain hose can be placed at a maximum height of 85 cm from the ground. 6 Installation instructions 2.2 Electrical connection and precautions **CHECK THAT THE VOLTAGE AND THE FREQUENCY OF THE MAINS MATCH THE RATINGS ON THE NAME PLATE OF THE APPLIANCE POSITIONED ON THE INNER EDGE OF THE DOOR. THE PLUG ON THE SUPPLY CORD AND THE CORRESPONDING SOCKET OUTLET MUST BE OF THE SAME TYPE AND MEET THE REGULATIONS IN FORCE.**

THE PLUG MUST BE ACCESSIBLE AFTER INSTALLATION. NEVER DISCONNECT THE PLUG BY PULLING ON THE POWER SUPPLY LEAD. IN THE EVENT OF DAMAGE TO THE SUPPLY CORD, HAVE IT REPLACED BY THE MANUFACTURER OR AN AUTHORIZED TECHNICAL SERVICE CENTRE. @@AFTER INSTALLATION THE DISCONNECTION DEVICE HAS TO BE EASY TO REACH. @@@@approved fuse to BS 1362 type and proceed as follows: 1. 2. 3. Remove the fuse coop). @11 User instructions **END OF PROGRAM** At the end of the program the beeper sounds briefly and the program lights 4 and 5 (marked "end") flash. **INTERRUPTION A PROGRAM** To interrupt a program in progress: press the START/PAUSE button (2); the light of the program in progress remains on (confirmation beep); you may now restart the program by pressing button (2) again until it restarts, or change or annul the program (see "CHANGING A PROGRAM", or "ANNULLING A PROGRAM").

CHANGING A PROGRAM To change the running program it is necessary: to interrupt the running program (see "INTERRUPTION A PROGRAM"); select the new program; start the program (see "STARTING THE PROGRAM"). **ANNULLING A PROGRAM** To annul the dishwasher. @@@@In the event of this occurring, the warranty will be invalidated. @@@@When necessary, refill the regenerating salt container before starting the washing program. In this way, the excess saline solution will be immediately removed by the water; the prolonged presence of salt water inside the tank may lead to corrosion.

Be careful not to confuse the salt and detergent packages; adding detergent to the salt container will damage the water softening system. **ADJUSTING THE WATER SOFTENING SYSTEM** The dishwasher is equipped with an device for the user to adjust the water softening system according to the hardness of the water supply. According to the machine model, the selector which acts on the adjustment may be located: inside the plastic locking ring located on the right-hand side, inside the dishwasher; inside the water softener, just below the cap. Both allow for adjustment to 5 settings: 16 User instructions **WATER HARDNESS TABLE WATER HARDNESS** German Degrees (dH) French Degrees (dF) 0-4 5 - 15 16 - 23 24 - 31 32 - 47 48 - 58 0-7 8 - 25 26 - 40 41 - 60 61 - 80 81 - 100 **SETTING** Setting N. 1 **NO SALT** Setting N.

1 Setting N. 2 Setting N. 3 Setting N. 4 Setting N. @@@@To add rinse aid: Open the door. Rotate the container cap anticlockwise by of a turn and remove it. @@@@ Replace the cover and turn it in a clockwise direction. @@@@ Replace the cap, turning it clockwise. @@@@ Add the detergent and close the cap carefully. @@Use only detergents specially formulated for dishwashers.

@@@@Add the correct amount of detergent. @@@@@@In some cases, these detergents might not give good results, especially with short and/or low-temperature washing cycles. If performance problems (e.g. a white coating on the tank or dishes, poor drying, dirt on dishes at the end of the wash) are noted, users are advised to return to conventional products (granular salt, powder detergent and liquid rinse aid). However, please note that on return to the use of conventional salt, a number of cycles will be required before the system becomes fully efficient again, so traces of white coating may still be found on the tank and dishes. If the problem persists for too long, contact the After-Sales Service. When using detergent in tablet form (bear in mind that we recommend the use of three separate products: detergent, salt and rinse aid), place the tablets in the cutlery rack. The dispenser is designed to use powder or liquid detergent and the door does not open completely during the washing cycle. This means that a tablet is not completely dissolved (released), which may lead to the following: - not enough detergent released during the cycle, with poor washing results; - the detergent forms a solid block in the distributor and is released during the final rinse cycle.



[You're reading an excerpt. Click here to read official SMEG DF612WE user guide](http://yourpdfguides.com/dref/3517435)
<http://yourpdfguides.com/dref/3517435>

The introduction of detergent into the rinse aid dispenser, even in liquid form, will damage the dishwasher. 20 User instructions 4.3 General warnings and recommendations Before using the dishwasher for the first time, it is advisable to read the following recommendations concerning dish types to be washed and their loading. There are generally no constraints on the washing of domestic dishes, but in certain cases it is necessary to take their characteristics into account. Before loading the dishes into the baskets it is necessary to: remove coarse food remains: e.

g. bones, fish-bones, etc. which may clog the filter or damage the wash pump. soak any pots or pans with burnt-on food remains on the bottom to facilitate removal, then load them into the LOWER BASKET. There is no need to pre-wash the dishes under running water before loading them into the baskets since this only wastes water.

Correct loading of the dishes helps ensure optimal washing results. WARNING! Make sure that the dishes are securely in place so that they cannot tip over or obstruct the rotation of the spray arms during the washing cycle. Do not place very small objects in the baskets as these could fall and obstruct the spray arms or the wash pump. Containers such as cups, bowls, glasses and pots should always be loaded with the opening facing downwards and with any cavities at an angle, to allow the water to drain out. Do not stack dishes or place them in such a way that they cover one another. Do not place glasses too close together because they may knock against each other and break, or there might be staining at the point where they touch. MAKE SURE that the items being washed are dishwasher-safe. 21 User instructions Items which are not dishwasher-safe: Wooden dishes, pots or pans: these may be damaged by the high washing temperatures. Handcrafted items: these are rarely suitable for washing in a dishwasher. The relatively high water temperatures and the detergents used may damage them.

Plastic dishes: heat resistant plastic dishes must be washed in the upper basket. @@@@Silverware: silver items may stain.

@@@@@@@@@@@@@@@@@@@@Pots, pans and their covers must be loaded upside down. @@Take care during loading to avoid injury from the knife blades. @Ladles, wooden spoons and cooking knives can be placed in the upper basket, making sure that the knife blades do not protrude from the basket. The dishwasher is complete with two cutlery baskets, which means that one of them can be removed, freeing space in the bottom basket, if there is not much cutlery to be washed. The basket features an exclusive system of independent sliding tipup supports, offering a choice of possible combinations to allow optimum use of the space available. Horizontal insert closed Horizontal insert open Vertical inserts Movement required to extract the inserts UPPER BASKET It is recommended to load the upper basket with small- or medium-sized items such as glasses, small plates, tea or coffee cups, shallow bowls and light objects made from heat resistant plastic. If the upper basket is used in the lowermost position, it can also be loaded with serving dishes, provided they are only slightly soiled. To make full use of the space available, the top basket has two plastic grids that can be lifted to make room for tall glasses such as stem glasses.

24 User instructions The top basket is fitted (on the left) with two plastic racks which can be raised to make room for tall glasses, such as stem glasses. On the right there are two cutlery racks designed to take knives and teaspoons; when not in use, they can be left vertical, attached to the basket. To use the space designed for teaspoons, remove the insert as shown in the illustrations. Models with cutlery racks LOADING THE UPPER BASKET Load plates facing forward; cups, bowls etc. must always be facing downwards.

The left side of the basket can be loaded with cups and glasses on two levels. In the centre section, plates and saucers can be loaded vertically into the supports provided. Loading examples: Models with cutlery racks 25 User instructions ADJUSTING THE UPPER BASKET Version A: the upper basket can be adjusted in two positions, according to the user's needs and according to the height of the dishes in the lower basket. Proceed as follows: pull out the right-hand basket guide; remove the stop, first releasing it as shown in the diagram; push the guide to free the wheels; fit the upper or lower pair of wheels into the guide, depending on the setting required; return the stop to its original position. Version B: pull out the basket to its limit position and pull the right side upwards.

At this point it is possible to load larger sized plates into the lower basket. To return to the original position, pull out the upper basket again and press the release lever. 26 User instructions Version C: the top basket can be set in three different positions on both sides. The rack must be level on both sides. To raise the basket lift it, pulling on the front edge (1), to the first or second catch depending on the height required. To lower it, pull the release lever (2). This is also possible with the basket loaded, but in this case when lowering the basket it should be held steady with one hand to avoid knocking the dishes. 27 User instructions 5. Cleaning and maintenance Before carrying out any work, always unplug the appliance from the electrical supply or switch off the all-pole disconnection device. 5.

1 General warnings and recommendations Avoid the use of acidic or abrasive detergents. Clean the outer surfaces and door-lining of the dishwasher regularly using a soft cloth moistened with water or with a normal detergent suitable for painted surfaces. Clean the door gaskets with a damp sponge.

Periodically (once or twice a year) it is advisable to clean the tank and gaskets, using a soft cloth and water to remove any deposits. CLEANING THE WATER INTAKE FILTER The water intake filter A located at the outlet of the water supply tap needs to be cleaned periodically. After having closed the water supply tap, unscrew the end of the water intake hose, remove the filter A and clean it delicately under running water. Reassemble filter A in its seat and carefully screw the water intake hose back into position. CLEANING THE SPRAY ARMS The spray arms can be easily removed for periodic cleaning of the nozzles, to prevent possible clogging. Wash them under running water and carefully replace them in their seats, checking that their rotary movement is in no way impeded. To remove the upper spray arm, unscrew locking ring R.

To remove the lower spray arm, simply lift it up, pulling by the central part. To remove the orbital spray arm assembly, take hold of the longer arm and pull the orbital unit upward. Wash the arms under a jet of running water and return them carefully to their seat. After reassembly, check that the spray arms turn freely. Otherwise, check that they have been installed correctly.



[You're reading an excerpt. Click here to read official SMEG](#)

[DF612WE user guide](#)

<http://yourpdfguides.com/dref/3517435>

ORBITAL 28 User instructions **CLEANING THE FILTER UNIT** It is advisable to periodically inspect the centre filter C and, if necessary, to clean it. To remove the filter, grip the tabs, turn them anticlockwise and lift upwards; push the centre filter D from the underside to remove it from the micro-filter: separate the two parts which make up the plastic filter by pressing the body of the filter in the zone shown by the arrows; remove the centre filter by lifting it upwards. **GENERAL WARNINGS AND RECOMMENDATIONS FOR CORRECT MAINTENANCE:** The filters should be cleaned under running water using a stiff brush. When removing the filter, take care that there are no food residues on it. If any residues fall into the washing pit they might block hydraulic components, or foul the spray arm nozzles.

It is essential to thoroughly clean the filters according to the above instructions: the dishwasher cannot function if the filters are clogged. Carefully replace the filters in their seats, to avoid damaging the wash pump. **PROLONGED DISUSE:** Run the soak program twice in succession. Unplug the power cord from the socket. Leave the door slightly open, in order to prevent the formation of unpleasant odours inside the washing tank. Fill the rinse aid dispenser. Shut off the water supply tap. **29 User instructions BEFORE STARTING THE DISHWASHER AFTER PROLONGED DISUSE:** Check that there are no deposits of sludge or rust inside the water pipe: if there are, allow the water to run from the water supply tap for a few minutes. Plug the power cord back into the socket. Reconnect the water intake hose and open the tap again.

TROUBLESHOOTING MINOR PROBLEMS In some cases it is possible to remedy minor problems by referring to the following instructions: If the program fails to start, check that: the dishwasher is connected to the electrical power supply; there is no power failure; the water tap is open; the dishwasher door is properly closed. If water remains inside the dishwasher, check that: the drain hose is not kinked; the drain siphon is not obstructed; the dishwasher filters are not clogged. If the dishes are not being cleaned properly, check that: the correct amount of detergent has been added; there is regenerating salt inside the special container; the dishes are being loaded correctly; the selected program is suitable for the dish types and their degree of soiling; all the filters are clean and positioned correctly; the spray arm nozzles are not obstructed; there is no object obstructing the rotation of the spray arms. **30 User instructions** If the dishes fail to dry or remain dull, check that: there is rinse aid inside the special container; the rinse aid dispenser setting is correct; the detergent used is of good quality and has not lost its effectiveness (for example, through incorrect storage, with the box left open). If the dishes show signs of streaking, staining, etc., check that: the rinse aid dispenser setting is not too high. If there are visible traces of rust inside the tank: the tank is made of steel, and therefore any rust marks are due to external elements (fragments of rust from the water pipes, pots, cutlery, etc.). Special products are commercially available to remove such marks; check that the amount of detergent being used is correct. Certain detergents can be more corrosive than others.

check that the cap of the salt container is securely closed, and that the water softening setting is correct. If after following the above troubleshooting instructions the problem persists, call the nearest After-Sales Centre. @@@@The system is tripped in case of water leaks. Contact the after-sales service.

@@Interrupt the program and switch off the dishwasher.

@@If the problem persists, contact the after-sales service. @@Repeat the washing program; if the problem persists, contact the after-sales service. Water temperature monitoring malfunction Interrupt the program and switch off the dishwasher. @@If the problem persists, contact the after-sales service. Water intake malfunction The appliance does not take in water or does not do so correctly.

Check that the water connections are correct, the water intake tap is turned on and the filter is not fouled. If the problem persists, contact the after-sales service. Water pump-out malfunction The appliance does not pump out the water or does not do so correctly. @@@@Interrupt the program and switch off the dishwasher. @@@@If the problem persists, contact the after-sales service. Water intake system malfunction Contact the after-sales service. **E8 E9 Light off Light on Light flashing** If an alarm occurs the appliance interrupts the program in progress and signals a fault. Alarms E1, E2, E3, E4, E8 and E9 interrupt the current program immediately. The E5, E6 alarms interrupts the running program once the cause is resolved, it will bring back the execution of the program. The alarm E7 is visualized at the end of the cycle that comes, however, brought to the end since the operation of the dishwasher is not harmed.

To "reset" an alarm is necessary: Open and close the door, or turn off and on the machine. At this point is possible to program the dishwasher again. If the malfunction persists, contact your authorised Service Centre. **33 User instructions TECHNICAL DATA** Width Depth measured flush with the outer edge of the control panel Height (depending on models) Capacity Water supply pressure Electrical characteristics 597 599 mm Free standing: 600 mm Semi-integrated: 570 mm Free standing: from 850 mm to 870 mm from 890 mm to 910 mm Semi-integrated: from 820 mm to 870 mm from 860 mm to 910 mm 12 Standard place settings min. 0,05 - max. 0,9 MPa (min. 0.5 max. 9 bar) See rating plate 34 115 125 135 145 155

Misurare l'altezza del pannello comandi; fare coincidere l'indice relativo a tale valore con il profilo superiore dell'apertura in legno; tracciare il posizionamento degli angoli della porta. Misurare l'altezza

del pannello di controllo; riportare il marchio relativo a questo valore in linea con il bordo superiore del pannello di controllo; segnare la posizione delle connessioni della porta in legno; tracciare il posizionamento dei crocetti della porta. Die Höhen des Bedienfeldes messen; diesen Wertentsprechende Markierung mit dem oberen Profil der Holz- bzw. Deckung bringen; die Position der Traufhungen anzeichnen. Meet de hoogte van het bedieningspaneel; laat de markering die bij de waarde hoort overeenstemmen met het bovenste profiel van de houtendeur; tekende positie van de deurhensels af. Medir

la altura del panel de mandos; hacer coincidir el índice correspondiente a dicho valor con el perfil superior de

la puerta de madera; trazar el posicionamiento de las bisagras de la puerta. Measuring the height of the control panel; bring the mark relative to this value in line with the top edge of the wood door; mark the position of the door connections. Measure the height of the control panel; bring the mark relative to this value in line with the top edge of the wood door; mark the position of the door connections.

la altura del panel de mandos; hacer coincidir el índice correspondiente a dicho valor con el perfil superior de

la puerta de madera; trazar el posicionamiento de las bisagras de la puerta. Measuring the height of the control panel; bring the mark relative to this value in line with the top edge of the wood door; mark the position of the door connections.

Solos alcuni modelli Certain model only Seulement sur certains modèles nur bei einigen Modellen Sloen algunos modelos alleen in de varianten 115 125 135 145 155 **ATTENZIONE:** Montare la porta e regolare la tensione delle molle laterali prima dell'installazione.



[You're reading an excerpt. Click here to read official SMEG](#)

[DF612WE user guide](#)

<http://yourpdfguides.com/dref/3517435>

IMPORTANT: Doortemplate, donotdestroy. Fit door and adjust hinge tension before installation. ATTENTION: Apres montgedelaporte,reglerlatension des ressortslateraux avant l'installation. Solosualcunimodelli Certainmodelsonly Seulementsurcertainsmodles nurbeieinigeModellen Sloen algunos modelos alleenindienvantoepassing SUPERFICIEINTERNA SURFACEINTERNE INNERSURFACE INNENFLACHE LATOSUPERIORE BORDSUPERIEURE UPPEREDGE OBERKANTE WICHTIG: Tr montieren, Trfedern vor Einbau einstellen.

ATENO: Antes dainstalao, monte a porta e regule a tensodasmolaslaterais. IMPORTANTE: Montar la puerta y regular los muellas laterales antes de la instalacin. 10 1 11 8 Regolazionevitetensionemolle(13) Coperturafotocontappoindotazione(14) DoorspringAdjustementdevice(13) Coveringofholeusingcapproved(14) Rglagedesressortsdelaporte(13) Couverturedutrouaveclebouchonfourni(14)

VorrichtungfrdieEinstellungderSpannungderTrfedem(13)AbdeckendesLochsmidemitgeliefertenStopfen(14) 13 9 NOTA: Solamentealcuni modellisonodotati diuno dei dispositivisotto illustrati. N.B.: Onlysome modelsareequippedwithone ofthetwodevicesillustrated below. REMARQUE: seulquelques modlessontmunis del'undedeuxdispositifsillustrsci-dessus. ANMERKUNG: Nur einigeModelleverfgenber einederbeidenuntendargestelltenEinrichtungen.NOTABENE: uitsluitend bepaalde modellenzijn uitgerustmetn vandetweeonderstaand afgebeeldenrichtingen
NOTA: Slo algunos modelos estn equipados conunodelosdosdispositivosqueseilustranacontinuacin. NOTA: Salguns modelosestoequipadoscomodosdoisdispositivosilustrados abaixo 1/2" 3/4" 3/4" SW32 Cu10 MIN 40cm .



[You're reading an excerpt. Click here to read official SMEG](#)

[DF612WE user guide](#)

<http://yourpdfguides.com/dref/3517435>