



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SMEG DI612CA9. You'll find the answers to all your questions on the SMEG DI612CA9 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SMEG DI612CA9**  
**User guide SMEG DI612CA9**  
**Operating instructions SMEG DI612CA9**  
**Instructions for use SMEG DI612CA9**  
**Instruction manual SMEG DI612CA9**

INSTRUCTION MANUAL

EN



GUIDA ALL'USO DELLA LAVASTOVIGLIE E AI PROGRAMMI DI LAVAGGIO



[You're reading an excerpt. Click here to read official SMEG DI612CA9 user guide](http://yourpdfguides.com/dref/3517617)  
<http://yourpdfguides.com/dref/3517617>

**Manual abstract:**

3. 4. 5. @@@@ Recommendations are given for the correct use of the baskets, spray arms, containers, filters, washing programs, and for operating the controls. Following the cleaning instructions provided here will keep your dishwasher's performance at peak levels in the long term. This user-friendly manual will provide answers to all your questions about use of the dishwasher. **INSTALLATION INSTRUCTIONS:** these are intended for the qualified technician who must carry out the installation, hook-up and testing of the appliance. **USER INSTRUCTIONS:** these consist of recommendations for using the appliance, a description of its controls and of the correct cleaning and maintenance procedures. 1 Safety instructions 1. @@@@ **THE APPLIANCE IS DESIGNED FOR THE FOLLOWING PURPOSE: WASHING AND DRYING OF DISHES; ANY OTHER USE SHALL BE CONSIDERED IMPROPER. THE MANUFACTURER DECLINES ALL RESPONSIBILITY FOR USES OTHER THAN THOSE DESCRIBED ABOVE. THE NAME PLATE FEATURING THE TECHNICAL DATA, SERIAL NUMBER AND MARKINGS IS VISIBLY POSITIONED ON THE INNER EDGE OF THE DOOR. THE NAME PLATE ON THE INNER EDGE OF THE DOOR MUST NEVER BE REMOVED. DO NOT LEAVE THE DISCARDED PACKAGING MATERIALS UNSUPERVISED WITHIN THE HOME. SEPARATE THE VARIOUS MATERIALS WHICH MAKE UP THE PACKAGING AND TAKE THEM TO THE NEAREST SORTED WASTE COLLECTION CENTRE.**

**THE APPLIANCE MUST BE PROVIDED WITH AN EARTH CONNECTION IN ACCORDANCE WITH THE ELECTRICAL SAFETY REGULATIONS IN FORCE. THE MANUFACTURER DECLINES ALL RESPONSIBILITY FOR DAMAGE TO PERSONS OR PROPERTY RESULTING FROM THE FAILURE TO EARTH THE APPLIANCE OR FROM A DEFECTIVE EARTH CONNECTION. IF THE APPLIANCE IS INSTALLED ON A CARPETED OR COVERED FLOOR, ENSURE THAT THE OPENINGS ON ITS UNDERSIDE ARE NOT OBSTRUCTED. ALWAYS SWITCH OFF THE DISHWASHER AFTER EACH USE TO AVOID WASTING ELECTRICITY. 2 Safety instructions OBSOLETE APPLIANCES MUST BE RENDERED UNUSABLE. CUT OFF THE MAINS POWER CORD AFTER UNPLUGGING IT FROM THE WALL OUTLET, AND MAKE SAFE ANY COMPONENTS WHICH MIGHT BE DANGEROUS FOR CHILDREN (LOCKS, DOORS, ETC.). THIS APPLIANCE IS MARKED ACCORDING TO THE EUROPEAN DIRECTIVE 2002/96/EC ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE). BY ENSURING THIS PRODUCT IS DISPOSED OF CORRECTLY, YOU WILL HELP PREVENT POTENTIAL NEGATIVE CONSEQUENCES FOR THE ENVIRONMENT AND HUMAN HEALTH, WHICH COULD OTHERWISE BE CAUSED BY INAPPROPRIATE WASTE HANDLING OF THIS PRODUCT. THE SYMBOL ON THE PRODUCT, OR ON THE DOCUMENTS ACCOMPANYING THE PRODUCT, INDICATES THAT THIS APPLIANCE MAY NOT BE TREATED AS HOUSEHOLD WASTE. INSTEAD IT SHALL BE HANDED OVER TO THE APPLICABLE COLLECTION POINT FOR THE RECYCLING OF ELECTRICAL AND ELECTRONIC EQUIPMENT. DISPOSAL MUST BE CARRIED OUT IN ACCORDANCE WITH LOCAL ENVIRONMENTAL REGULATIONS FOR WASTE DISPOSAL. FOR MORE DETAILED INFORMATION ABOUT TREATMENT, RECOVERY AND RECYCLING OF THIS PRODUCT, PLEASE CONTACT YOUR LOCAL CITY OFFICE, YOUR HOUSEHOLD WASTE DISPOSAL SERVICE OR THE SHOP WHERE YOU PURCHASED THE PRODUCT. IN THE EVENT OF A FAULT, DISCONNECT THE DISHWASHER FROM THE ELECTRICAL POWER SUPPLY AND SHUT OFF THE WATER TAP. DO NOT USE APPLIANCES WHICH HAVE BEEN DAMAGED DURING TRANSIT! IF IN DOUBT, CONSULT YOUR DEALER.**

**THE APPLIANCE MUST BE INSTALLED AND CONNECTED IN ACCORDANCE WITH THE INSTRUCTIONS PROVIDED BY THE MANUFACTURER OR BY A QUALIFIED TECHNICIAN. THIS DISHWASHER MUST BE USED BY ADULTS. USE BY PERSONS WITH REDUCED MENTAL AND/OR PHYSICAL CAPABILITIES IS ONLY PERMITTED UNDER THE SUPERVISION OF A PERSON RESPONSIBLE FOR THEIR SAFETY. KEEP CHILDREN AWAY FROM DETERGENTS AND PACKAGING MATERIALS (PLASTIC BAGS, POLYSTYRENE, ETC.), AND NEVER ALLOW THEM TO APPROACH OR PLAY WITH THE DISHWASHER, SINCE IT MIGHT CONTAIN DETERGENT RESIDUES CAPABLE OF CAUSING PERMANENT DAMAGE TO THE EYES, MOUTH AND THROAT, AND EVEN LEADING TO SUFFOCATION. DO NOT INTRODUCE SOLVENTS SUCH AS ALCOHOL OR TURPENTINE WHICH MAY CAUSE AN EXPLOSION. DO NOT LOAD DISHES THAT ARE SOILED WITH ASH, WAX OR PAINTS. 3 Safety instructions LEANING OR SITTING ON THE DISHWASHER DOOR WHEN OPEN MAY CAUSE THE APPLIANCE TO OVERTURN, PUTTING PEOPLE AT RISK. NEVER LEAVE THE DISHWASHER DOOR OPEN; PEOPLE MIGHT TRIP OVER IT. DO NOT DRINK THE WATER RESIDUES WHICH MAY BE PRESENT INSIDE THE DISHES OR DISHWASHER AT THE END OF THE WASHING PROGRAM AND BEFORE THE DRYING CYCLE.**

**KNIVES OR OTHER SHARP-ENDED COOKING UTENSILS MUST BE PLACED IN THE CUTLERY BASKET BLADE-DOWN, OR LAID HORIZONTAL IN THE TOP BASKET. TAKE CARE NOT TO CUT YOURSELF AND ENSURE THAT THEY DO NOT PROJECT FROM THE BASKET. AQUASTOP MODELS THE AQUASTOP DEVICE PREVENTS FLOODING IN THE EVENT OF A WATER LEAK. WHEN THE AQUASTOP DEVICE IS TRIPPED, CALL IN A QUALIFIED TECHNICIAN TO IDENTIFY AND REPAIR THE FAULT. IN MODELS EQUIPPED WITH THE AQUASTOP DEVICE, THERE IS A SOLENOID VALVE INSIDE THE WATER INTAKE HOSE.**

**DO NOT CUT THE HOSE AND DO NOT ALLOW THE SOLENOID VALVE TO DROP INTO WATER. IN THE EVENT OF DAMAGE TO THE WATER INTAKE HOSE, DISCONNECT THE APPLIANCE FROM THE ELECTRICAL POWER SUPPLY AND FROM THE WATER SUPPLY. IMMEDIATELY AFTER INSTALLING THE DISHWASHER, PERFORM A QUICK TEST OF THE APPLIANCE FOLLOWING THE INSTRUCTIONS BELOW. IF THE DISHWASHER FAILS TO OPERATE CORRECTLY, DISCONNECT IT FROM THE ELECTRICAL POWER SUPPLY AND CALL THE NEAREST TECHNICAL SERVICE CENTRE. DO NOT ATTEMPT TO REPAIR THE APPLIANCE.**

**THE DISHWASHER MEETS ALL THE REQUIREMENTS SET OUT BY THE REGULATIONS IN FORCE CONCERNING SAFETY AND ELECTRICAL EQUIPMENT. ANY TECHNICAL CHECKS SHOULD BE CONDUCTED EXCLUSIVELY BY A TRAINED AND AUTHORISED TECHNICIAN: REPAIRS CARRIED OUT BY UNAUTHORISED PERSONS WILL INVALIDATE THE WARRANTY, AS WELL AS POSING A POTENTIAL HAZARD TO THE USER. The manufacturer declines all responsibility for damage to persons or property resulting from failure to observe the above precautions, from tampering with even a single component of the appliance, or from the use of non original spare parts. 4 Installation instructions 2. Installation and hook-up Remove the polystyrene basket retainers. Position the appliance in the desired place of installation. The back or sides of the dishwasher may be placed up against walls or other furniture units. If the dishwasher is installed near a heat source, fit the special insulating panel to prevent overheating and malfunction of the appliance. To ensure stability, install integrated or built-under dishwashers only under continuous worktops, and screw them to the adjacent units. To facilitate the installation procedure, the intake and drain hoses can be positioned in any direction; make sure that the hoses are not kinked, crushed or pulled too tightly.**

**Make sure to tighten the locking ring-nut once the pipes have been placed in the direction required. A hole at least 8 cm in diameter is required to allow the power supply cable and pipes to pass. Level the appliance on the floor using its adjustable feet. This operation is essential for ensuring correct operation of the dishwasher. Building-in a dishwasher underneath a ceramic hob is absolutely forbidden.**

**[You're reading an excerpt. Click here to read official SMEG DI612CA9 user guide](#)**



<http://yourpdfguides.com/dref/3517617>

A dishwasher can be built-in underneath a conventional hob provided there is no break in the kitchen worktop, and the dishwasher and hob are installed and secured correctly, so that no hazards are generated. When installing the dishwasher in a compartment next to one or more other appliances, it is essential to comply with all the recommendations provided by the appliance's manufacturer (minimum distances, installation procedures, etc.). Some models are equipped with only one adjustable foot at the rear, which can be adjusted by turning the screw on the lower front part of the appliance. 2.

1 Water supply connection Preventing the risk of clogging or damage: if the water pipe is new or has not been used for a long time, before connecting to the water supply check that the water is clear and free of impurities, to prevent damage to the appliance. The dishwasher must always be connected to the water system with new hoses; old or used hoses must never be reused. 5 Installation instructions CONNECTING TO THE WATER SUPPLY Connect the intake hose to a cold water supply with " gas thread, inserting the filter A supplied with the dishwasher. Take care to screw the hose firmly into place with your hands and then complete by tightening about of a turn with pliers. In dishwashers equipped with the ACQUASTOP device, the filters is already fitted inside the threaded ring.

The dishwasher can also be connected to a hot water supply not exceeding 60C. Supplying the appliance with hot water cuts down the washing time by approximately 20 minutes, but slightly reduces its effectiveness. Make the connection to the domestic hot water supply using the same procedure described for connecting to the cold water supply. DRAIN CONNECTION Insert the dishwasher's drain hose into a drain pipe having a diameter of at least 4 cm, or alternatively, place it inside the kitchen sink using the plastic support provided, taking care not to crush or excessively bend the hose. It is important to prevent the hose from coming loose and falling.

For this purpose, the plastic support is equipped with a hole for tying it to the wall or water tap. The free end should be positioned at a height of between 30 and 100 cm, and should never be submerged in water. If a horizontal drain extension hose is used (for a maximum of 3 m) the drain hose can be placed at a maximum height of 85 cm from the ground. 6 Installation instructions 2.2 Electrical connection and precautions CHECK THAT THE VOLTAGE AND THE FREQUENCY OF THE MAINS MATCH THE RATINGS ON THE NAME PLATE OF THE APPLIANCE POSITIONED ON THE INNER EDGE OF THE DOOR. THE PLUG ON THE SUPPLY CORD AND THE CORRESPONDING SOCKET OUTLET MUST BE OF THE SAME TYPE AND MEET THE REGULATIONS IN FORCE. THE PLUG MUST BE ACCESSIBLE AFTER INSTALLATION. NEVER DISCONNECT THE PLUG BY PULLING ON THE POWER SUPPLY LEAD. IN THE EVENT OF DAMAGE TO THE SUPPLY CORD, HAVE IT REPLACED BY THE MANUFACTURER OR AN AUTHORIZED TECHNICAL SERVICE CENTRE. DO NOT USE ADAPTORS OR SHUNT CONNECTIONS IN ORDER TO AVOID THE POSSIBILITY OF OVERHEATING OR BURNING.

IF THE APPLIANCE IS PROVIDED WITH A PLUGLESS SUPPLY CORD: IT IS NECESSARY TO INSTALL IN THE FIXED WIRING AN ALL-POLE DISCONNECTION DEVICE HAVING A GAP BETWEEN CONTACTS OF AT LEAST 3.5MM. AFTER INSTALLATION THE DISCONNECTION DEVICE HAS TO BE EASY TO REACH. THE CONNECTION TO THE MAINS MUST BE CARRIED OUT BY A QUALIFIED TECHNICIAN IN ACCORDANCE TO THE SCHEME SHOWN BELOW AND THE REGULATIONS IN FORCE. L = brown N = blue = yellow-green In the event of damage to the supply cord, have it replaced by the manufacturer or an Authorized Technical Service Centre in order to avoid any risk. 7 Installation instructions FOR GREAT BRITAIN ONLY: THIS APPLIANCE MUST BE EARTHED. Fuse replacement If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.T.A.

approved fuse to BS 1362 type and proceed as follows: 1. 2. 3. Remove the fuse cover A and fuse B. Fit replacement 13A fuse into fuse cover. Refit both into plug. The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted. Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug. @@Description of the controlsou. @@The corresponding DELAYED START light (7) lights up.

@@@This option has been studied for the use of dishwashing powder or tablets with integrated substances in place of regenerating salt or rinse-aid known on the market as "3 in 1" or "triple action" product removing the lower basket, unscrew the salt container cap by turning it anticlockwise and pour in the salt using the funnel supplied with the dishwasher. @@@@In the event of this occurring, the warranty will be invalidated. @@If using salt tablets, do not fill the container completely. @@@@In this way, the excess saline solution will be immediately removed by the water; the prolonged presence of salt water inside the tank may lead to corrosion. Be careful not to confuse the salt and detergent packages; adding detergent to the salt container will damage the water softening system. ADJUSTING THE WATER SOFTENING SYSTEM The dishwasher is equipped with a device which allows the softener setting to be varied to suit the hardness of the mains water. The hardness is set using the PROGRAM SELECTION BUTTON (3). @@@@To add rinse aid: Open the door. Rotate the container cap anticlockwise by of a turn and remove it. @@@@ Replace the cover and turn it in a clockwise direction.

@@@@@Replace the cap, turning it clockwise. @@@@Add the detergent and close the cap carefully. @@Use only detergents specially formulated for dishwashers. @@@@@@Add the correct amount of detergent. @@@@@@- Enzyme detergents, on the other hand, are also effective at lower temperatures (from 40 to 55C) and are more easily biodegradable. With enzyme detergents it is possible to obtain at low temperatures comparable results to those which can only be achieved at 65C using traditional detergents. For the safeguarding of the environment we recommend the use of phosphate- and chlorine free detergents. 19 User instructions "3/1" Products If you wish to use detergents which already contain salt and rinse aid, check whether your dishwasher is fitted with the "3/1 option button" on the "Controls description" page and then refer to the section which explains how to use this function. If the button is not provided, we recommend the use of conventional products (separate detergent, salt and rinse aid), because with conventional washing cycles "3/1" products might create problems such as a white deposit, poor drying results and residues left on dishes. The introduction of detergent into the rinse aid dispenser, even in liquid form, will damage the dishwasher.

4.3 General warnings and recommendations Before using the dishwasher for the first time, it is advisable to read the following recommendations concerning dish types to be washed and their loading.



[You're reading an excerpt. Click here to read official SMEG DI612CA9 user guide](http://yourpdfguides.com/dref/3517617)  
<http://yourpdfguides.com/dref/3517617>

There are generally no constraints on the washing of domestic dishes, but in certain cases it is necessary to take their characteristics into account. Before loading the dishes into the baskets it is necessary to: remove coarse food remains: e.g.

bones, fish-bones, etc. which may clog the filter or damage the wash pump. soak any pots or pans with burnt-on food remains on the bottom to facilitate removal, then load them into the LOWER BASKET. There is no need to pre-wash the dishes under running water before loading them into the baskets since this only wastes water. Correct loading of the dishes helps ensure optimal washing results.

20 User instructions **WARNING!** Make sure that the dishes are securely in place so that they cannot tip over or obstruct the rotation of the spray arms during the washing cycle. Do not place very small objects in the baskets as these could fall and obstruct the spray arms or the wash pump. Containers such as cups, bowls, glasses and pots should always be loaded with the opening facing downwards and with any cavities at an angle, to allow the water to drain out. Do not stack dishes or place them in such a way that they cover one other. Do not place glasses too close together because they may knock against each other and break, or there might be staining at the point where they touch. **MAKE SURE** that the items being washed are dishwasher-safe. Items which are not dishwasher-safe: Wooden dishes, pots or pans: these may be damaged by the high washing temperatures. Handcrafted items: these are rarely suitable for washing in a dishwasher. The relatively high water temperatures and the detergents used may damage them. Plastic dishes: heat resistant plastic dishes must be washed in the upper basket.

Dishes and objects in copper, tin, zinc or brass: these tend to stain. Aluminium dishes: items made from anodised aluminium may lose their colour. Silverware: silver items may stain. @@@@Pots, pans and their covers must be loaded upside down. @@Take care during loading to avoid injury from the knife blades. @@@@The basket features an exclusive system of independent sliding tipup supports, offering a choice of possible combinations to allow optimum use of the space available. Horizontal insert closed Horizontal insert open Vertical inserts Movement required to extract the inserts 23 User instructions **UPPER BASKET** It is recommended to load the upper basket with small- or medium-sized items such as glasses, small plates, tea or coffee cups, shallow bowls and light objects made from heat resistant plastic. If the upper basket is used in the lowermost position, it can also be loaded with serving dishes, provided they are only slightly soiled. **LOADING THE UPPER BASKET** Load plates facing forward; cups, bowls etc. must always be facing downwards.

The left side of the basket can be loaded with cups and glasses on two levels. In the centre section, plates and saucers can be loaded vertically into the supports provided. Loading examples: 24 User instructions Depending on the models, the basket may be equipped with some or all of the following accessories: Supports for cups or long objects (ladles, spoons...), on the left; can be tipped to the vertical position when not in use. Long-stemmed glass holder, on the left; to use, simply lift and fix onto the hooks provided. Cutlery racks, on the right, designed for knives and teaspoons; for teaspoons, pull out the sliding support. The racks can be tipped to the vertical position when not in use. Fixed or movable racks in the middle.

The movable supports can be fixed vertical, resting on the bottom of the basket when not in use, or set in the intermediate position, as required. 25 User instructions **ADJUSTING THE UPPER BASKET** The height of the top basket can be adjusted to allow large dishes or pans to be placed in the bottom basket. The adjustment procedure may be type A or B, depending on the dishwasher model purchased. Version A: pull-out with adjustment in two positions. Pull out both the basket guides. Remove the stops, first releasing them as shown in the diagram. Pull out the basket. Inserire nella guida la coppia di ruote superiore o inferiore, secondo la regolazione desiderata. Return the stops to their original position. The left hand and right hand sides of the basket must always be set at the same height.

Version B: with adjustment in three positions on both sides. The sides of the basket must always be set at the same height. Raise the basket by pulling on the top edge (1), to the first or second catch depending on the height required. To lower the basket, first release it by pulling the release lever (2). Adjustment is also possible with the basket loaded, but in this case when lowering the basket it should be held steady with one hand to avoid knocking the dishes. 26 User instructions 5. Cleaning and maintenance Before carrying out any work, always unplug the appliance from the electrical supply or switch off the all-pole disconnection device. 5.1 General warnings and recommendations Avoid the use of acidic or abrasive detergents. Clean the outer surfaces and door-lining of the dishwasher regularly using a soft cloth moistened with water or with a normal detergent suitable for painted surfaces.

Clean the door gaskets with a damp sponge. Periodically (once or twice a year) it is advisable to clean the tank and gaskets, using a soft cloth and water to remove any deposits. **CLEANING THE WATER INTAKE FILTER** The water intake filter A located at the outlet of the water supply tap needs to be cleaned periodically. After having closed the water supply tap, unscrew the end of the water intake hose, remove the filter A and clean it delicately under running water. Reassemble filter A in its seat and carefully screw the water intake hose back into position.

**CLEANING THE SPRAY ARMS** The spray arms can be easily removed for periodic cleaning of the nozzles, to prevent possible clogging. Wash them under running water and carefully replace them in their seats, checking that their rotary movement is in no way impeded. To remove the upper spray arm, unscrew locking ring R. To remove the lower spray arm, simply lift it up, pulling by the central part. To remove the orbital spray arm assembly, take hold of the longer arm and pull the orbital unit upward.

Wash the arms under a jet of running water and return them carefully to their seat. After reassembly, check that the spray arms turn freely. Otherwise, check that they have been installed correctly. **ORBITAL** 27 User instructions **CLEANING THE FILTER UNIT** It is advisable to periodically inspect the centre filter C and, if necessary, to clean it. To remove the filter, grip the tabs, turn them anticlockwise and lift upwards; push the centre filter D from the underside to remove it from the micro-filter: separate the two parts which make up the plastic filter by pressing the body of the filter in the zone shown by the arrows; remove the centre filter by lifting it upwards.



[You're reading an excerpt. Click here to read official SMEG](http://yourpdfguides.com/dref/3517617)

[DI612CA9 user guide](http://yourpdfguides.com/dref/3517617)

<http://yourpdfguides.com/dref/3517617>

**GENERAL WARNINGS AND RECOMMENDATIONS FOR CORRECT MAINTENANCE:** The filters should be cleaned under running water using a stiff brush. When removing the filter, take care that there are no food residues on it. If any residues fall into the washing pit they might block hydraulic components, or foul the spray arm nozzles. It is essential to thoroughly clean the filters according to the above instructions: the dishwasher cannot function if the filters are clogged. Carefully replace the filters in their seats, to avoid damaging the wash pump.

**PROLONGED DISUSE:** Run the soak program twice in succession. Unplug the power cord from the socket. Leave the door slightly open, in order to prevent the formation of unpleasant odours inside the washing tank. Fill the rinse aid dispenser. Shut off the water supply tap. 28 User instructions **BEFORE STARTING THE DISHWASHER AFTER PROLONGED DISUSE:** Check that there are no deposits of sludge or rust inside the water pipe: if there are, allow the water to run from the water supply tap for a few minutes. Plug the power cord back into the socket. Reconnect the water intake hose and open the tap again. **TROUBLESHOOTING MINOR PROBLEMS** In some cases it is possible to remedy minor problems by referring to the following instructions: If the program fails to start, check that: the dishwasher is connected to the electrical power supply; there is no power failure; the water tap is open; the dishwasher door is properly closed. If water remains inside the dishwasher, check that: the drain hose is not kinked; the drain siphon is not obstructed; the dishwasher filters are not clogged.

If the dishes are not being cleaned properly, check that: the correct amount of detergent has been added; there is regenerating salt inside the special container; the dishes are being loaded correctly; the selected program is suitable for the dish types and their degree of soiling; all the filters are clean and positioned correctly; the spray arm nozzles are not obstructed; there is no object obstructing the rotation of the spray arms. 29 User instructions If the dishes fail to dry or remain dull, check that: there is rinse aid inside the special container; the rinse aid dispenser setting is correct; the detergent used is of good quality and has not lost its effectiveness (for example, through incorrect storage, with the box left open). If the dishes show signs of streaking, staining, etc., check that: the rinse aid dispenser setting is not too high. If there are visible traces of rust inside the tank: the tank is made of steel, and therefore any rust marks are due to external elements (fragments of rust from the water pipes, pots, cutlery, etc.

). Special products are commercially available to remove such marks; check that the amount of detergent being used is correct. Certain detergents can be more corrosive than others. @@@@The system is tripped in case of water leaks. Contact the after-sales service. @@Interrupt the program and switch off the dishwasher. @@If the problem persists, contact the after-sales service. Water heating malfunction The water is not heated or the heating parameters are not correct. Repeat the washing program; if the problem persists, contact the after-sales service. Water temperature monitoring malfunction Interrupt the program and switch off the dishwasher. @@If the problem persists, contact the after-sales service. Water intake malfunction The appliance does not take in water or does not do so correctly. Check that the water connections are correct, the water intake tap is turned on and the filter is not fouled. If the problem persists, contact the after-sales service. @@@@Interrupt the program and switch off the dishwasher.

@@If the problem persists, contact the after-sales service. Alternate washing system malfunction Interrupt the program and switch off the dishwasher. @@If the problem persists, contact the after-sales service. Water intake system malfunction Contact the after-sales service. E8 E9 Light off Light on Light flashing If an alarm occurs the appliance interrupts the program in progress and signals a fault. Alarms E1, E2, E3, E4, E8 and E9 interrupt the current program immediately. The E5, E6 alarms interrupt the running program once the cause is resolved, it will bring back the execution of the program. The alarm E7 is visualized at the end of the cycle that comes, however, brought to the end since the operation of the dishwasher is not harmed. To "reset" an alarm is necessary: Open and close the door, or turn off and on the machine. At this point is possible to program the dishwasher again.

If the malfunction persists, contact your authorised Service Centre. 32 User instructions **TECHNICAL DATA** Width Depth measured flush with the outer edge of the control panel Height (depending on models) Capacity Water supply pressure Electrical characteristics 597 599 mm 550 mm from 820 mm to 870 mm from 860 mm to 910 mm 12 Standard place settings min. 0,05 - max. 0,9 MPa (min. 0.

5 max. 9 bar) See rating plate 33 598 Allineare al bordo superiore del pannello porta. Align with the top edge of the door panel. Aligner au bord suprieur du panneau de la porte. Mit der Oberkante der Dekorplatte fluchten.

Alinhar com o rebordo superior do painel da porta. Vyrovnajte s hornm okrajem dverneho panelu. Az ajtpanel felso szlvel hozzuk egy vonalba. Wyrwnac do gnej krawedzi panelu drzwiowego. Pripojit na vrchn okraj dverovho panelu **ATTENZIONE:** Quota "H": secondo i modelli 820870 oppure 860910. **CAUTION:** Depending on the model, distance "H" may be 820870 or 860910. **ATTENTION:** Cote "H": selon les modles 820870 ou 860910. **ACHTUNG:** Ma "H": gem den Modellen 820870 oder 860910. **LET OP:** Hoogte "H": voor de modellen 820870 of 860910. **ATENCIN:** Cota "H": segn los modelos 820 870 o bien 860 910.

**ATENO:** Cota "H": dependendo dos modelos 820-870 ou 860-910. **UPOZORNEN:** Rozmer „H“ podle modelu 820-870 nebo 860-910. **BEMRK:** Afhngigt af modellen er mlet "H" 820870 eller 860910. **HUOMIO:** Mitta "H" on mallista riippuen 820-870 tai 860-910. **OPGELET:** Geef "H" aan volgens de modellen 820870 of 860910. **ADVARSEL:** Avhengig av modell kan avstanden "H" vre 820-870 eller 860-910. **UWAGA:** W zalezności od modelu, wartosc „H" moze wynosic 820-870 lub 860-910. **POZOR:** Kvta "H" podla modelov 820-870 alebo 860-910. **OBSERVERA!** Beroende p modell kan mittet "H" vara 820-870 eller 860-910. Zet hem op n lijn met de bovenste rand van het durpaneel.

Alinear respecto del borde superior del panel puerta. Alinhe com a borda superior do painel da porta. Skal flugte med overkanten af lgepanelet. Aseta ovipaneelin ylreunan kohdalle. Sett den vre kanten i flukt med drpanelet.

Placera i linje med drpanelens verkant 598 Sx Dx **NOTA:** Solamente alcuni modelli sono dotati di uno dei dispositivi sotto illustrati.



[You're reading an excerpt. Click here to read official SMEG](#)

[DI612CA9 user guide](#)

<http://yourpdfguides.com/dref/3517617>

*N.B.: Only some models are equipped with one of the two devices illustrated below. REMARQUE: seul quelques modles sont munis de l'un de deux dispositifs illustrs ci-dessus.*

*ANMERKUNG: Nur einige Modelle verfgn ber eine der beiden unten dargestellten Einrichtungen.NOTA BENE: uitsluitend bepaalde modellen zijn uitgerust met n van de twee onderstaand afgebeelde inrichtingen NOTA: Slo algunos modelos estn equipados con uno de los dos dispositivos que se ilustran a continuacin. NOTA: S alguns modelos esto equipados com ou dos dois dispositivos ilustrados abaixo 1/2" 3/4" SW 32 3/4" Cu 10 MIN 40cm .*



[You're reading an excerpt. Click here to read official SMEG](#)

[DI612CA9 user guide](#)

<http://yourpdfguides.com/dref/3517617>