



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SMEG DUSF44X. You'll find the answers to all your questions on the SMEG DUSF44X in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SMEG DUSF44X
User guide SMEG DUSF44X
Operating instructions SMEG DUSF44X
Instructions for use SMEG DUSF44X
Instruction manual SMEG DUSF44X

Contents

1 Instructions	30
1.1 How to read the user manual	30
1.2 This user manual	30
1.3 Appliance purpose	30
1.4 General safety instructions	30
1.5 Manufacturer liability	31
1.6 Identification plate	31
1.7 Disposal	31
2 Description	32
2.1 General Description	32
2.2 Control panel	33
2.3 Other parts	33
2.4 Available accessories	34
3 Use	36
3.1 Instructions	36
3.2 First use	36
3.3 Using the accessories	37
3.4 Using the oven	38
3.5 Cooking advice	39
3.6 Programmer clock	41
4 Cleaning and maintenance	46
4.1 Instructions	46
4.2 Cleaning the surfaces	46
4.3 Ordinary daily cleaning	46
4.4 Food stains or residues	46
4.5 Removing the door	46
4.6 Cleaning the door glazing	47
4.7 Removing the internal glass panes	47
4.8 Cleaning the inside of the oven	48
4.9 Extraordinary maintenance	49
5 Installation	51
5.1 Electrical connection	51
5.2 Cable replacement	52
5.3 Positioning	52

EN

We advise you to read this manual carefully, which contains all the instructions for maintaining the appliance's aesthetic and functional qualities.
For further information on the product: www.smeg.com



[You're reading an excerpt. Click here to read official SMEG DUSF44X user guide](http://yourpdfguides.com/dref/5315202)
<http://yourpdfguides.com/dref/5315202>

Manual abstract:

@@@Installation Information for the qualified technician: installation, operation and inspection. Safety instructions 1.2 This user manual This user manual is an integral part of the appliance and must therefore be kept in its entirety and in an accessible place for the whole working life of the appliance. 1.3 Appliance purpose This appliance is intended for cooking food in the home environment. Every other use is considered improper. This appliance must not be used by people (including children) of reduced physical and mental capacity, or lacking in experience in the use of electrical appliances, unless they are supervised or instructed by adults who are responsible for their safety. 1.4 General safety instructions For your safety and to avoid damage to the appliance, always respect the general safety instructions indicated below. In general •Have qualified personnel carry out installation and assistance interventions according to the standards in force.

•Read this user manual carefully before using the appliance. •Do not modify this appliance. •Do not try to repair the appliance yourself or without the intervention of a qualified technician. •If the power supply cable is damaged, contact technical support immediately and they will replace it. Information Advice 1.

Use instruction sequence. •Single use instruction. 30 Instructions For this appliance •Do not obstruct ventilation openings and heat dispersal slots. •Do not insert pointed metal objects (cutlery or utensils) into the slots in the appliance. •Do not rest any weight or sit on the open door of the appliance. •Take care that no objects are stuck in the doors. •Do not use the appliance to heat rooms for any reason. To dispose of the appliance: •Remove the doors and leave the accessories (racks and trays) in their usual working positions, so that children cannot get stuck in the oven compartment. •Cut the power supply cable and remove it along with the plug. Power voltage Danger of electrocution •Disconnect the main power supply. •Disconnect the power cable from the electrical system. •Consign the appliance to the appropriate selective collection centres for electrical and electronic equipment waste, or deliver it back to the retailer when purchasing an equivalent product, on a one for one basis. Our appliances are packed in nonpolluting and recyclable materials. •Consign the packing materials to the appropriate selective collection centres. @@@@The appliance does not contain substances in quantities sufficient to be considered hazardous to health and the environment, in accordance with current European directives.

31 EN Description 2 Description 2.1 General Description 1 Control panel 2 Oven light 3 Seal 4 Fan 5 Rack/tray support frames Frame shelf 32 Description 2.2 Control panel Auxiliary oven temperature knob (1) This knob allows you to select the cooking temperature. Turn the knob clockwise to the required value, between the minimum and maximum setting. Auxiliary oven thermostat indicator light (2) The thermostat indicator light remains lit when the oven is heating up. Once the oven has reached the selected temperature the indicator light switches off. Auxiliary oven function knob (3) The oven's various functions are suitable for different cooking modes. After selecting the required function, set the cooking temperature using the temperature knob. Programmer clock (4) Useful for displaying the current time, setting programmed cooking operations and programming the minute minder timer. Main oven temperature knob (5) This knob allows you to select the cooking temperature.

Turn the knob clockwise to the required value, between the minimum and maximum setting. Main oven thermostat indicator light (6) The thermostat indicator light remains lit when the oven is heating up. Once the oven has reached the selected temperature the indicator light switches off. @@@@Rack The fan cools the oven and comes into operation during cooking. @@@@Use only original accessories supplied by the manufacturer.

35 EN Description 3 Use 3.1 Instructions High temperature inside the oven during use Danger of burns •Keep the oven door closed during cooking. •Protect your hands wearing heat resistant gloves when moving food inside the oven. •Do not touch the heating elements inside the oven. •Do not pour water directly onto very hot trays.

•Do not allow children to get near the oven when it is in operation. High temperature inside the oven during use Danger of fire or explosion •Do not spray any spray products near the oven. •Do not use or leave flammable materials near the oven. •Do not use plastic kitchenware or containers when cooking food. •Do not put sealed tins or containers in the oven. •Do not leave the oven unattended during cooking operations where fats or oils could be released. •Remove all trays and racks which are not required during cooking. Improper use Risk of damage to enamelled surfaces •Do not cover the bottom of the oven cavity with aluminium or tin foil sheets. •If you wish to use greaseproof paper, place it so that it will not interfere with the hot air circulation inside the oven. •Do not place pans or trays directly on the bottom of the oven cavity.

•Do not pour water directly onto very hot trays. 3.2 First use 1. Remove any protective film from the outside or inside of the appliance, including accessories. 2. Remove any labels (apart from the technical data plate) from the accessories and from the oven cavity. 3. Remove and wash all the appliance accessories (see 4 Cleaning and maintenance). 4. Heat the empty oven at the maximum temperature to burn off any residues left by the manufacturing process.

36 Description 3.3 Using the accessories Racks and trays Racks and trays have to be inserted into the side guides until they come to a complete stop. •The mechanical safety locks that prevent the rack from being taken out accidentally have to face downwards and towards the oven back. Tray rack The tray rack has to be inserted into the tray. @@@@Select the cooking function using the function knob.

2. Select the temperature using the temperature knob. @@@@Perfect for large cuts of meat (e.g. shin of pork).

@@Perfect for sausages, spare ribs and bacon. @@@@Hot air circulation ensures instant and even distribution of heat.

@@@@The current time and the 42 symbols and will appear on the display. 5. At the end of cooking the heating elements will be deactivated. @@6. To turn off the buzzer just press any key of the programmer clock. 7. Press keys and at the same time to reset the programmer clock. After the setting, to display the cooking time left press the key.

@@The minute minder timer can be activated at any time. 1. Press . @@2. Use the or key to set the required minutes. 3. Wait approx. @@The current time and the symbols and appear on the display. It is not possible to set a cooking time of more than 24 hours.



[You're reading an excerpt. Click here to read official SMEG DUSF44X user guide](http://yourpdfguides.com/dref/5315202)
<http://yourpdfguides.com/dref/5315202>

• When the buzzer is in operation, press to change the setting.

• anodizing, nickel- or chromium-plating). • powder products, stain removers and metallic sponges). • Use ordinary non-abrasive eplace the lamp with one of the same type (25W). 6. • 7.

• Halogen lamps: 8. Slide out and remove the lamp. • Remove the internal glass pane. 2. Remove the fasteners of the door seal.

• The appliance must be connected to earth in compliance with electrical system safety standards. • Disconnect the main power supply. General information Check the grid characteristics against the data indicated on the plate. The identification plate bearing the technical data, serial number and brand name is visibly positioned on the appliance. Do not remove this plate for any reason. The appliance works at 220-240 V~. Use a three-core cable (3 x 1.5 mm² cable, referring to the cross section of the internal conductor). Perform the ground connection using a wire that is 20 mm longer than the other wires. Connection modes: • 220-240 V 1N~ Fixed connection Fit the power line with an omnipolar circuit breaker in compliance with installation regulations.

The circuit breaker should be located near the appliance and in an easily reachable position. Connection with plug and socket Make sure that the plug and socket are of the same type. Avoid using adapters and shunts as these could cause overheating and a risk of burns. • 1. • Avoid exerting too much pressure on the oven door when open. Heat production during appliance operation Risk of fire • Check that the piece of furniture material is heat resistant. • Check that the piece of furniture has the required slots. 2. Slide the tabs 1 of the terminal board cover out of the grooves; 3. Loosen the screw of the cable retention bracket in the right lower part of the oven back 3; 4.

Make sure that the cables (for the oven or any hob) follow the best route in order to avoid any contact with the appliance. 52 Installation Fastening bushings Remove the bushing covers inserted on the oven front. Appliance overall dimensions (mm) Mount the appliance into the recess. Secure the appliance to the piece of furniture using screws. Cover the bushings with the covers removed previously.

53 EN Installation Mounting (mm) The oven is designed for mounting into any piece of furniture as long as it is heatresistant. Respect the unit dimensions and the oven overall dimensions for positioning. Depending on the type of installation a slot should be foreseen for ventilating the appliance. To be able to open the door completely, any lower unit protuberance should be at a distance of at least 1 cm from the oven. 54 .



[You're reading an excerpt. Click here to read official SMEG](http://yourpdfguides.com/dref/5315202)

[DUSF44X user guide](http://yourpdfguides.com/dref/5315202)

<http://yourpdfguides.com/dref/5315202>