



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SMEG DWAU315X1. You'll find the answers to all your questions on the SMEG DWAU315X1 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SMEG DWAU315X1
User guide SMEG DWAU315X1
Operating instructions SMEG DWAU315X1
Instructions for use SMEG DWAU315X1
Instruction manual SMEG DWAU315X1

INSTRUCTION MANUAL

EN



GUIDE FOR USING THE DISHWASHER AND THE WASHING PROGRAMS



[You're reading an excerpt. Click here to read official SMEG DWAU315X1 user guide](http://yourpdfguides.com/dref/5612194)
<http://yourpdfguides.com/dref/5612194>

Manual abstract:

3. 4. 5. @@@@ Recommendations are given for the correct use of the baskets, spray arms, containers, filters, washing programs, and for operating the controls. Following the cleaning instructions provided here will keep your dishwasher's performance at peak levels in the long term. This user-friendly manual will provide answers to all your questions about use of the dishwasher. **INSTALLATION INSTRUCTIONS:** these are intended for the qualified technician who must carry out the installation, hook-up and testing of the appliance. **USER INSTRUCTIONS:** these consist of recommendations for using the appliance, a description of its controls and of the correct cleaning and maintenance procedures. 1 Safety instructions 1. @@@@ **THE APPLIANCE IS DESIGNED FOR THE FOLLOWING PURPOSE: WASHING AND DRYING OF DISHES; ANY OTHER USE SHALL BE CONSIDERED IMPROPER. THE MANUFACTURER DECLINES ALL RESPONSIBILITY FOR USES OTHER THAN THOSE DESCRIBED ABOVE. THE NAME PLATE FEATURING THE TECHNICAL DATA, SERIAL NUMBER AND MARKINGS IS VISIBLY POSITIONED ON THE INNER EDGE OF THE DOOR. THE NAME PLATE ON THE INNER EDGE OF THE DOOR MUST NEVER BE REMOVED. DO NOT LEAVE THE DISCARDED PACKAGING MATERIALS UNSUPERVISED WITHIN THE HOME. SEPARATE THE VARIOUS MATERIALS WHICH MAKE UP THE PACKAGING AND TAKE THEM TO THE NEAREST SORTED WASTE COLLECTION CENTRE.**

THE APPLIANCE MUST BE PROVIDED WITH AN EARTH CONNECTION IN ACCORDANCE WITH THE ELECTRICAL SAFETY REGULATIONS IN FORCE. THE MANUFACTURER DECLINES ALL RESPONSIBILITY FOR DAMAGE TO PERSONS OR PROPERTY RESULTING FROM THE FAILURE TO EARTH THE APPLIANCE OR FROM A DEFECTIVE EARTH CONNECTION. IF THE APPLIANCE IS INSTALLED ON A CARPETED OR COVERED FLOOR, ENSURE THAT THE OPENINGS ON ITS UNDERSIDE ARE NOT OBSTRUCTED. ALWAYS SWITCH OFF THE DISHWASHER AFTER EACH USE TO AVOID WASTING ELECTRICITY. IN THE EVENT OF A FAULT, DISCONNECT THE DISHWASHER FROM THE ELECTRICAL POWER SUPPLY AND SHUT OFF THE WATER TAP.

DO NOT USE STEAM CLEANERS TO CLEAN THE DISHWASHER. 2 Contents WARNING: SOME DISHWASHER DETERGENTS ARE STRONGLY ALKALINE. THEY CAN BE EXTREMELY DANGEROUS IF SWALLOWED. AVOID CONTACT WITH THE SKIN AND EYES AND KEEP CHILDREN AWAY FROM THE DISHWASHER WHEN THE DOOR IS OPEN. CHECK THAT THE DETERGENT RECEPTACLE IS EMPTY AFTER COMPLETION OF THE WASH CYCLE. OBSOLETE APPLIANCES MUST BE RENDERED UNUSABLE. CUT OFF THE MAINS POWER CORD AFTER UNPLUGGING IT FROM THE WALL OUTLET, AND MAKE SAFE ANY COMPONENTS WHICH MIGHT BE DANGEROUS FOR CHILDREN (LOCKS, DOORS, ETC.). THIS APPLIANCE IS MARKED ACCORDING TO THE EUROPEAN DIRECTIVE 2002/96/EC ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE). BY ENSURING THIS PRODUCT IS DISPOSED OF CORRECTLY, YOU WILL HELP PREVENT POTENTIAL NEGATIVE CONSEQUENCES FOR THE ENVIRONMENT AND HUMAN HEALTH, WHICH COULD OTHERWISE BE CAUSED BY INAPPROPRIATE WASTE HANDLING OF THIS PRODUCT.

THE SYMBOL ON THE PRODUCT, OR ON THE DOCUMENTS ACCOMPANYING THE PRODUCT, INDICATES THAT THIS APPLIANCE MAY NOT BE TREATED AS HOUSEHOLD WASTE. INSTEAD IT SHALL BE HANDED OVER TO THE APPLICABLE COLLECTION POINT FOR THE RECYCLING OF ELECTRICAL AND ELECTRONIC EQUIPMENT. DISPOSAL MUST BE CARRIED OUT IN ACCORDANCE WITH LOCAL ENVIRONMENTAL REGULATIONS FOR WASTE DISPOSAL. FOR MORE DETAILED INFORMATION ABOUT TREATMENT, RECOVERY AND RECYCLING OF THIS PRODUCT, PLEASE CONTACT YOUR LOCAL CITY OFFICE, YOUR HOUSEHOLD WASTE DISPOSAL SERVICE OR THE SHOP WHERE YOU PURCHASED THE PRODUCT. DO NOT USE APPLIANCES WHICH HAVE BEEN DAMAGED DURING TRANSIT! IF IN DOUBT, CONSULT YOUR DEALER. THE APPLIANCE MUST BE INSTALLED AND CONNECTED IN ACCORDANCE WITH THE INSTRUCTIONS PROVIDED BY THE MANUFACTURER OR BY A QUALIFIED TECHNICIAN. THIS DISHWASHER MUST BE USED BY ADULTS. USE BY PERSONS WITH REDUCED MENTAL AND/OR PHYSICAL CAPABILITIES IS ONLY PERMITTED UNDER THE SUPERVISION OF A PERSON RESPONSIBLE FOR THEIR SAFETY. KEEP CHILDREN AWAY FROM DETERGENTS AND PACKAGING MATERIALS (PLASTIC BAGS, POLYSTYRENE, ETC.), AND NEVER ALLOW THEM TO APPROACH OR PLAY WITH THE DISHWASHER, SINCE IT MIGHT CONTAIN DETERGENT RESIDUES CAPABLE OF CAUSING PERMANENT DAMAGE TO THE EYES, MOUTH AND THROAT, AND EVEN LEADING TO SUFFOCATION.

DO NOT INTRODUCE SOLVENTS SUCH AS ALCOHOL OR TURPENTINE WHICH MAY CAUSE AN EXPLOSION. DO NOT LOAD DISHES THAT ARE SOILED WITH ASH, WAX OR PAINTS. 3 Safety instructions DO NOT DRINK THE WATER RESIDUES WHICH MAY BE PRESENT INSIDE THE DISHES OR DISHWASHER AT THE END OF THE WASHING PROGRAM AND BEFORE THE DRYING CYCLE. LEANING OR SITTING ON THE DISHWASHER DOOR WHEN OPEN MAY CAUSE THE APPLIANCE TO OVERTURN, PUTTING PEOPLE AT RISK. NEVER LEAVE THE DISHWASHER DOOR OPEN; PEOPLE MIGHT TRIP OVER IT.

KNIVES OR OTHER SHARP-ENDED COOKING UTENSILS MUST BE PLACED IN THE CUTLERY BASKET BLADE-DOWN, OR LAID HORIZONTAL IN THE TOP BASKET. TAKE CARE NOT TO CUT YOURSELF AND ENSURE THAT THEY DO NOT PROJECT FROM THE BASKET. AQUASTOP MODELS THE AQUASTOP DEVICE PREVENTS FLOODING IN THE EVENT OF A WATER LEAK. WHEN THE AQUASTOP DEVICE IS TRIPPED, CALL IN A QUALIFIED TECHNICIAN TO IDENTIFY AND REPAIR THE FAULT. IN MODELS EQUIPPED WITH THE AQUASTOP DEVICE, THERE IS A SOLENOID VALVE INSIDE THE WATER INTAKE HOSE.

DO NOT CUT THE HOSE AND DO NOT ALLOW THE SOLENOID VALVE TO DROP INTO WATER. IN THE EVENT OF DAMAGE TO THE WATER INTAKE HOSE, DISCONNECT THE APPLIANCE FROM THE ELECTRICAL POWER SUPPLY AND FROM THE WATER SUPPLY. MODELS WITH INTERNAL LIGHTING THE APPLIANCE'S LIGHTING SYSTEM BELONGS TO RISK GROUP 1 UNDER THE IEC/EN 62471 STANDARD. THIS MEANS THAT THERE IS NO PHOTOBIOLOGICAL RISK IN NORMAL CONDITIONS OF USE. IMMEDIATELY AFTER INSTALLING THE DISHWASHER, PERFORM A QUICK TEST OF THE APPLIANCE FOLLOWING THE INSTRUCTIONS BELOW. IF THE DISHWASHER FAILS TO OPERATE CORRECTLY, DISCONNECT IT FROM THE ELECTRICAL POWER SUPPLY AND CALL THE NEAREST TECHNICAL SERVICE CENTRE. DO NOT ATTEMPT TO REPAIR THE APPLIANCE. THE DISHWASHER MEETS ALL THE REQUIREMENTS SET OUT BY THE REGULATIONS IN FORCE CONCERNING SAFETY AND ELECTRICAL EQUIPMENT. ANY TECHNICAL CHECKS SHOULD BE CONDUCTED EXCLUSIVELY BY A TRAINED AND AUTHORISED TECHNICIAN: REPAIRS CARRIED OUT BY UNAUTHORISED PERSONS WILL INVALIDATE THE WARRANTY, AS WELL AS POSING A POTENTIAL HAZARD TO THE USER. The manufacturer declines all responsibility for damage to persons or property resulting from failure to observe the above precautions, from tampering with even a single component of the appliance, or from the use of non original spare parts.

4 Installation instructions 2. Installation and hook-up Remove the polystyrene basket retainers. Position the appliance in the desired place of installation. The back or sides of the dishwasher may be placed up against walls or other furniture units. If the dishwasher is installed near a heat source, fit the special insulating panel to prevent overheating and malfunction of the appliance. To ensure stability, install integrated or built-under dishwashers only under continuous worktops, and screw them to the adjacent units. To facilitate the installation procedure, the intake and drain hoses can be positioned in any

direction; make sure that the hoses are not kinked, crushed or pulled too tightly.



[You're reading an excerpt. Click here to read official SMEG
DWAU315X1 user guide](#)
<http://yourpdfguides.com/dref/5612194>

Make sure to tighten the locking ring-nut once the pipes have been placed in the direction required. A hole at least 8 cm in diameter is required to allow the power supply cable and pipes to pass. Before putting the dishwasher into its definitive position, turn on the water tap and check that there are no leaks from the tap connection, the dishwasher connection or the hose.

Level the appliance on the floor using its adjustable feet. This operation is essential for ensuring correct operation of the dishwasher. Some models are equipped with only one adjustable foot at the rear, which can be adjusted by turning the screw on the lower front part of the appliance. Building-in a dishwasher underneath a hob is absolutely forbidden. Moreover, dishwashers may not be installed directly touching appliances which are not conventional built-in kitchen appliances (e.

g. fireplaces, stoves, etc.). When installing the dishwasher in a compartment next to one or more other appliances, it is essential to comply with all the recommendations provided by the appliance's manufacturer (minimum distances, installation procedures, etc.).

For free-standing models only: - Installing a hob on top of a free-standing dishwasher is absolutely forbidden. - If the appliance is not built-in and is therefore accessible on one side, the door hinge area must be covered for safety reasons (injury hazard). The covering fixtures are available as an accessory from specialist dealers or the After-Sales Service. - To build in the dishwasher, the special kit must be purchased from authorised dealers or the After-Sales Service. 5 Installation instructions 2.1 Water supply connection Preventing the risk of clogging or damage: if the water pipe is new or has not been used for a long time, before connecting to the water supply check that the water is clear and free of impurities, to prevent damage to the appliance. The dishwasher must always be connected to the water system with new hoses; old or used hoses must never be reused. **CONNECTING TO THE WATER SUPPLY** Connect the intake hose to a cold water supply with 3/4" gas thread, inserting the filter A supplied with the dishwasher. Take care to screw the hose firmly into place with your hands and then complete by tightening about 1/4 of a turn with pliers. In dishwashers equipped with the ACQUASTOP device, the filters is already fitted inside the threaded ring.

The dishwasher can also be connected to a hot water supply not exceeding 60°. Supplying the appliance with hot water cuts down the C washing time by approximately 20 minutes, but slightly reduces its effectiveness. Make the connection to the domestic hot water supply using the same procedure described for connecting to the cold water supply. 6 Installation instructions DRAIN CONNECTION Insert the dishwasher's drain hose into a drain pipe having a diameter of at least 4 cm, or alternatively, place it inside the kitchen sink using the plastic support provided, taking care not to crush or excessively bend the hose. It is important to prevent the hose from coming loose and falling. For this purpose, the plastic support is equipped with a hole for tying it to the wall or water tap. The free end should be positioned at a height of between 30 and 100 cm, and should never be submerged in water. If a horizontal drain extension hose is used (for a maximum of 3 m) the drain hose can be placed at a maximum height of 85 cm from the ground. Class of protection against moisture: IPX0 7

Installation instructions 2.2 Electrical connection and precautions CHECK THAT THE VOLTAGE AND THE FREQUENCY OF THE MAINS MATCH THE RATINGS ON THE NAME PLATE OF THE APPLIANCE POSITIONED ON THE INNER EDGE OF THE DOOR.

THE PLUG ON THE SUPPLY CORD AND THE CORRESPONDING SOCKET OUTLET MUST BE OF THE SAME TYPE AND MEET THE REGULATIONS IN FORCE. THE PLUG MUST BE ACCESSIBLE AFTER INSTALLATION. NEVER DISCONNECT THE PLUG BY PULLING ON THE POWER SUPPLY LEAD. AFTER CHANGING THE SUPPLY CORD, MAKE SURE THAT THE BRACKET WHICH SECURES THE CORD IS FIXED SECURELY IN PLACE.

DO NOT USE ADAPTORS OR SHUNT CONNECTIONS IN ORDER TO AVOID THE POSSIBILITY OF OVERHEATING OR BURNING.

In the event of damage to the supply cord, have g modes) The ENERSAVE option cannot be used with soak, or quick time programs. PROGRAMME NUMBER E SYMBOL DURATION LOAD CROCKERY AND CUTLERY PROGRAM PROGRESS CONSUMPTION WATER LITRES MINUTI (1) POWER KWh (1) 6 RAPID 27' + Dishes with light dirt, washed immediately after use Dishes with normal dirt, washed immediately after use. Wash at 38° C Rinse at 50° C Cold prewash Wash at 60° C Cold rinse Rinse at 70° C Cold prewash Wash at 70° C Cold rinse Rinse at 70° C 27 6,5 0,70 7 ECO QUICK + 80 12,5 1,25 8 NORMAL QUICK Dishes with normal dirt, washed immediately after use 95 12,5 1,35 + 9 STRONG and FAST + Mixed dishes with normal dirt without dried-on residues. Wash at 65° C Cold rinse Rinse at 70° C 55 9,5 1,35 (1) The cycle duration and power consumption may vary according to the water a day of the user's choice. The first time the PROGRAM DELAY button is pressed the option light comes on and 1:h appears on the DISPLAY.

The button can then be pressed again, to set the delay required (2:h, 3:h, ... etc.). If no button is pressed for a few seconds, the DISPLAY shows the time left (time remaining) to the end of the selected program (e.g. 5:40, duration of the washing cycle + program delay). When the user confirms the program start (read the relative section) a prewash will be carried out, after which the PROGRAM DELAY set will begin, and the time remaining on the DISPLAY will gradually be counted down. At the end of the delay set, the option light goes out and the washing cycle starts. N.B.: It is not possible to select the PROGRAM DELAY option once the cycle has begun.

Chosen the delay, proceed with the program start, press the button START/PAUSE for same seconds until the START/PAUSE symbol start to flash. The machine will perform a dish pre-washing, and when finish, the "delay program" will enter in function as it was first set. @@@@The light stops flashing and goes out. @@@@This ensures perfect drying and greater control of rinsing temperatures, which can be kept at lower levels for significant energy saving. @@@@Powder detergents are more suitable for these programs. @@@@TO SAVE ON ENERGY! @@Do not wash the dishes in running water. @@Do not carry out any preliminary rinsing. @@@@20 User instructions 4.

@@@The dishwasher is factory set for water hardness level 3 (average hardness). SALT When using water of medium hardness, the regenerating salt container should be refilled after approximately 20 washing cycles.

The salt container can hold approximately 1.7 Kg of salt in grains. The container is situated at the bottom of the dishwasher. After removing the lower basket, unscrew the salt container cap by turning it anticlockwise and pour in the salt using the funnel supplied with the dishwasher.



[You're reading an excerpt. Click here to read official SMEG](#)

[DWAU315X1 user guide](#)

<http://yourpdfguides.com/dref/5612194>

Before replacing the cap, remove any salt residues from around the opening.

••When using the dishwasher for the first time, in addition to the salt it is also necessary to add one litre of water to the container. Each time the salt container is refilled, make sure that the cap is securely closed. The mixture of water and detergent must never penetrate the salt container, as this would compromise the operation of the regeneration system. In the event of this occurring, the warranty will be invalidated. Only use regenerating salt specially formulated for domestic dishwashers.

If using salt tablets, do not fill the container completely. •21 User instructions ••Do not use table salt as it contains insoluble substances which, over time, may damage the water softening system. When necessary, refill the regenerating salt container before starting the washing program. In this way, the excess saline solution will be immediately removed by the water; the prolonged presence of salt water inside the tank may lead to corrosion. Be careful not to confuse the salt and detergent packages; adding detergent to the salt container will damage the water softening system. **ADDITIONAL FUNCTIONS** (Customizing the consumer parameters) (available in all programs except the soak program) The electronic control system allows personalizing the machine use directly through a programming procedure not directly accessible that allows: regulate water hardness level. To access the programming environment, the appliance must be turned on with the door open. Then proceed as follows: ••press the PROGRAM DELAY button until the H symbol appears on the display, followed by the number currently set (e.g. H3) press the PROGRAM DELAY button the number of times needed to select the right setting level for the hardness of the water (H0, H1, H2, H3, H4, H6); N.

B.: after few seconds the appliance exits the parameter setting menu automatically. 22 User instructions **WATER HARDNESS TABLE WATER HARDNESS**
German degrees (° dH) French Degrees (° dF) 0-6 7 - 10 11 - 15 16 - 21 22 - 28 29 - 35 36 - 50 0 - 11 12 - 18 19 - 27 28 - 37 38 - 50 51 - 62 63 - 90
SETTING H0 NO SALT H1 H2 H3 H4 H5 H6 Contact your local water board for information on the hardness of your water supply. After adjustment or display of the current setting, simply do not touch the button for a few seconds; the dishwasher will automatically return to standard mode, quitting the adjustment mode. 4.2 Using the rinse aid and detergent dispensers The detergent and rinse aid dispensers are situated on the inner part of the door: the detergent dispenser is on the left, and the rinse aid dispenser is on the right. With the exception of the SOAK program, before every washing cycle it is necessary to add the required amount of detergent to the detergent dispenser. The rinse aid, on the other hand, should only be added as required. 23 User instructions **ADDING THE RINSE AID** The rinse aid helps the dishes dry faster and prevents the formation of scale deposits and staining; it is automatically added to the water during the final rinse cycle, from the container situated on the inner side of the door. To add rinse aid: •Open the door.
•Rotate the container cap anticlockwise by ¼ of a turn and remove it. •Add the rinse aid until the container is full (approximately 140 cc). The optical level indicator on the side of the cap should be completely obscured. Refill the rinse aid when the optical level indicator becomes clear again, or when the rinse aid warning light illuminates. •Replace the cover and turn it in a clockwise direction.
•Use a cloth to remove any spillage of rinse aid which might lead to the formation of excess foam. **ADJUSTING THE RINSE AID DISPENSER SETTING** The dishwasher is factory set for medium water hardness. However it possible to change the setting by turning the dispenser's selector to the desired position: the amount of rinse aid dispensed is proportional to the selector position. •••••To adjust the rinse aid setting, rotate the dispenser cap through a quarter turn in an anticlockwise direction and remove it. @@Replace the cap, turning it clockwise.

@@@Add the detergent and close the cap carefully. @@Use only detergents specially formulated for dishwashers. @@@@Add the correct amount of detergent. @@@@C - Enzyme detergents, on the other hand, are also effective at lower temperatures (from 40 to 55°) and are more easily C biodegradable. With enzyme detergents it is possible to obtain at low temperatures comparable results to those which can only be achieved at 65° using traditional detergents. C For the safeguarding of the environment we recommend the use of phosphate- and chlorine free detergents. 25 User instructions The introduction of detergent into the rinse aid dispenser, even in liquid form, will damage the dishwasher. 4.3 General warnings and recommendations Before using the dishwasher for the first time, it is advisable to read the following recommendations concerning dish types to be washed and their loading. There are generally no constraints on the washing of domestic dishes, but in certain cases it is necessary to take their characteristics into account.

Before loading the dishes into the baskets it is necessary to: •remove coarse food remains: e.g. bones, fish-bones, etc. which may clog the filter or damage the wash pump. •soak any pots or pans with burnt-on food remains on the bottom to facilitate removal, then load them into the LOWER BASKET. There is no need to pre-wash the dishes under running water before loading them into the baskets since this only wastes water. Correct loading of the dishes helps ensure optimal washing results. 26 User instructions **WARNING!** •••••Make sure that the dishes are securely in place so that they cannot tip over or obstruct the rotation of the spray arms during the washing cycle. Do not place very small objects in the baskets as these could fall and obstruct the spray arms or the wash pump. Containers such as cups, bowls, glasses and pots should always be loaded with the opening facing downwards and with any cavities at an angle, to allow the water to drain out.

Do not stack dishes or place them in such a way that they cover one other. Do not place glasses too close together because they may knock against each other and break, or there might be staining at the point where they touch. **MAKE SURE** that the items being washed are dishwasher-safe. Items which are not dishwasher-safe: •••••Wooden dishes, pots or pans: these may be damaged by the high washing temperatures. Handcrafted items: these are rarely suitable for washing in a dishwasher.

The relatively high water temperatures and the detergents used may damage them. Plastic dishes: heat resistant plastic dishes must be washed in the upper basket. Dishes and objects in copper, tin, zinc or brass: these tend to stain.



[You're reading an excerpt. Click here to read official SMEG](#)

[DWAU315X1 user guide](#)

<http://yourpdfguides.com/dref/5612194>

Aluminium dishes: items made from anodised aluminium may lose their colour. Silverware: silver items may stain.

Glass and crystal: in general, glass and crystal objects can be washed in the dishwasher. However, certain types of glass and crystal may become dull and lose their clearness after many washings. Therefore, for these items we recommend using the least aggressive program available. Decorated items: the decorated objects available on the market are generally able to withstand washing in the dishwasher, although the colours may fade after a great many washes. If in doubt as to the fastness of the colours, it is advisable to wash just a few items at a time for approximately one month. • 27 User instructions 4.4 Using the baskets The dishwasher has a capacity of 15 place-settings, including serving dishes. LOWER BASKET The lower basket receives the full force of the lower spray arm, and should therefore be used for the "toughest" items with a heavier degree of soiling. All types and combinations of loads are permitted, provided that the dishes, pots and pans are arranged with all the soiled surfaces exposed to the water jets coming from the bottom. Depending on the models, the basket may be equipped with some or all of the following accessories: Plate racks, which can be laid flat when not in use (e.

g. to accommodate pans, bowls, etc.). To stow the racks flat, pull them upward and turn them towards the inside of the basket. Anti-drip inserts which improve the drying of dishes. They may be supplied fitted on the basket or in the accessories bag; in this case, to use them, simply fit them into place as shown. 28 User instructions Supports for cups and long objects (ladles, spoons, etc.), in the rear; can be tipped to the vertical position when not in use. Glass holder. Support for longstem glasses.

When lifted out of the stowed position (0) it snaps into three different positions (1-2-3). 2-position fold-down supports (1-2). In position 1 (vertical) they can be used to take plates, while in position 2 (slanted) they provide support for long-stem glasses which will be held in place by the glass holder. Adjustment: raise point P as shown until the support turns into position 2. 29 User instructions To lie completely flat, lift the end and turn it towards you so that the retainer F rotates into place above point S.

LOADING THE LOWER BASKET Carefully load flat plates, soup plates, dessert and serving dishes, positioning them vertically. Pots, pans and their covers must be loaded upside down. When loading soup plates and dessert bowls, be sure to leave a gap between them. Loading examples: 30 User instructions FLEXI DUO TOP RACK (on some models only) This comprises two independent sliding, pull-out tray racks for easier loading/unloading of cutlery. Various loading systems and configurations are possible.

For example, tea cups can be loaded with the right-hand rack set in the low position, while the left-hand rack or both can be removed to allow large dishes to be put in the top basket 31 User instructions CUTLERY BASKET The basket has removable top grids into which items of cutlery should be inserted to keep them properly spaced and allow water to pass between them effectively. The top grids and central lid are in the bag of accessories. The central lid functions as a lid only. The top grids can be detached and used separately. The cutlery should be arranged in an orderly manner inside the basket, with the handles pointing downwards. Take care during loading to avoid injury from the knife blades. The basket is suitable for all types of cutlery, except those long enough to interfere with the upper spray arm. Ladles, wooden spoons and cooking knives can be placed in the upper basket, making sure that the knife blades do not protrude from the basket. The cutlery basket slides across the dishwasher and can be placed in any position to allow optimal use of the space in the bottom basket. 32 User instructions UPPER BASKET It is recommended to load the upper basket with small- or medium-sized items such as glasses, small plates, tea or coffee cups, shallow bowls and light objects made from heat resistant plastic.

If the upper basket is used in the lowermost position, it can also be loaded with serving dishes, provided they are only slightly soiled. LOADING THE UPPER BASKET Load plates facing forward; cups, bowls etc. must always be facing downwards. The left side of the basket can be loaded with cups and glasses on two levels. In the centre section, plates and saucers can be loaded vertically into the supports provided. Loading examples: 33 User instructions Depending on the models, the basket may be equipped with some or all of the following accessories: Supports for cups or long objects (ladles, spoons...), on the left; can be tipped to the vertical position when not in use. Long-stemmed glass holder, on the left; to use, simply lift and fix onto the hooks provided. Cutlery racks, on the right, designed for knives and teaspoons; for teaspoons, pull out the sliding support. The racks can be tipped to the vertical position when not in use. Fixed or movable racks in the middle.

The movable supports can be fixed vertical, resting on the bottom of the basket when not in use, or set in the intermediate position, as required. 34 User instructions ADJUSTING THE UPPER BASKET The height of the top basket can be adjusted to allow large dishes or pans to be placed in the bottom basket. The adjustment procedure may be type A or B, depending on the dishwasher model purchased. Version A: pull-out with adjustment in two positions. • Pull out both the basket guides.

• Remove the stops, first releasing them as shown in the diagram. • Pull out the basket. • Fit the upper or lower pair of wheels into the guide, depending on the setting required; • Return the stops to their original position. The left hand and right hand sides of the basket must always be set at the same height. Version B: with adjustment in three positions on both sides.

The sides of the basket must always be set at the same height. • Raise the basket by pulling on the top edge (1), to the first or second catch depending on the height required. • To lower the basket, first release it by pulling the release lever (2). @@@@Clean the door gaskets with a damp sponge.

@@CLEANING THE WATER INTAKE FILTER The water intake filter A located at the outlet of the water supply tap needs to be cleaned periodically. After having closed the water supply tap, unscrew the end of the water intake hose, remove the filter A and clean it delicately under running water. Reassemble filter A in its seat and carefully screw the water intake hose back into position. CLEANING THE SPRAY ARMS The spray arms can be easily removed for periodic cleaning of the nozzles, to prevent possible clogging. @@@@Wash the arms under a jet of running water and return them carefully to their seat. After reassembly, check that the spray arms turn freely.



[You're reading an excerpt. Click here to read official SMEG DWAU315X1 user guide](http://yourpdfguides.com/dref/5612194)
<http://yourpdfguides.com/dref/5612194>

Otherwise, check that they have been installed correctly. **ORBITAL 36 User instructions CLEANING THE FILTER UNIT** ••• It is advisable to periodically inspect the centre filter C and, if necessary, to clean it. To remove the filter, grip the tabs, turn them anticlockwise and lift upwards; push the centre filter D from the underside to remove it from the micro-filter: separate the two parts which make up the plastic filter by pressing the body of the filter in the zone shown by the arrows; remove the centre filter by lifting it upwards. **GENERAL WARNINGS AND RECOMMENDATIONS FOR CORRECT MAINTENANCE:**

• The filters should be cleaned under running water using a stiff brush. • When removing the filter, take care that there are no food residues on it. If any residues fall into the washing pit they might block hydraulic components, or foul the spray arm nozzles. • It is essential to thoroughly clean the filters according to the above instructions: the dishwasher cannot function if the filters are clogged. • Carefully replace the filters in their seats, to avoid damaging the wash pump. **PROLONGED DISUSE:** • Run the soak program twice in succession. • Unplug the power cord from the socket.

• Leave the door slightly open, in order to prevent the formation of unpleasant odours inside the washing tank. • Fill the rinse aid dispenser. • Shut off the water supply tap. **37 User instructions BEFORE STARTING THE DISHWASHER AFTER PROLONGED DISUSE:** ••• Check that there are no deposits of sludge or rust inside the water pipe: if there are, allow the water to run from the water supply tap for a few minutes. Plug the power cord back into the socket. Reconnect the water intake hose and open the tap again. **TROUBLESHOOTING MINOR PROBLEMS** In some cases it is possible to remedy minor problems

by referring to the following instructions: If the program fails to start, check that: ••• the dishwasher is connected to the electrical power supply; there is no power failure; the water tap is open; the dishwasher door is properly closed. If water remains inside the dishwasher, check that: ••• the drain hose is not kinked; the drain siphon is not obstructed; the dishwasher filters are not clogged. If the dishes are not being cleaned properly, check that: •••••• the correct amount of detergent has been added; there is regenerating salt inside the special container; the dishes are being loaded correctly; the selected program is suitable for the dish types and their degree of soiling; all the filters are clean and positioned correctly; the spray arm nozzles are not obstructed; there is no object obstructing the rotation of the spray arms. **38 User instructions** If the dishes fail to dry or remain dull, check that: ••• there is rinse aid inside the special container; the rinse aid dispenser setting is correct; the detergent used is of good quality and has not lost its effectiveness (for example, through incorrect storage, with the box left open).

If the dishes show signs of streaking, staining, etc., check that: • the rinse aid dispenser setting is not too high. If there are visible traces of rust inside the tank: • the tank is made of steel, and therefore any rust marks are due to external elements (fragments of rust from the water pipes, pots, cutlery, etc.). Special products are commercially available to remove such marks; check that the amount of detergent being used is correct. Certain detergents can be more corrosive than others. check that the cap of the salt container is securely closed, and that the water softening setting is correct. •• If after following the above troubleshooting instructions the problem persists, call the nearest After-Sales Centre. **WARNING:** any operations performed on the appliance by unauthorised persons are not covered by the warranty and shall be paid for by the user. **39 User instructions** 6.

Troubleshooting The dishwasher is equipped with a self-diagnostics system that is capable of detecting and signalling a number of possible faults. **TABLE OF FAULTS DETECTED BY THE SELF-DIAGNOSTICS SYSTEM**

FAULT DESCRIPTION	The anti-flooding system (where present) has been tripped	service.
The water level limitation system has tripped.	The appliance cannot heat the water.	The temperature sensor is disconnected.
The appliance cannot take in the water.	The appliance cannot drain the water from the tank.	The dishwasher cannot measure the precise water quantity that has been loaded.
Problem on the water distribution system to the baskets.	Water intake system malfunction.	

If an alarm occurs the appliance interrupts the program in progress and signals a fault. Er 01 Er 02 Er 03 Er 04 Er 05 Er 06 Er 07 Er 08 Er 09 • Alarms E1, E2, E3, E4, E8 and E9 interrupt the current program immediately. • The E5, E6 alarms interrupts the running program once the cause is resolved, it will bring back the execution of the program. • The alarm E7 is visualized at the end of the cycle that comes, however, brought to the end since the operation of the dishwasher is not harmed. To “reset” an alarm is necessary: • Open and close the door, or turn off and on the machine.

At this point is possible to program the dishwasher again. If the malfunction persists, contact your authorised Service Centre. **40 User instructions TECHNICAL DATA** Width Depth measured flush with the outer edge of the control panel Height (depending on models) Capacity Water supply pressure Electrical characteristics 597 ÷ 599 mm Free standing: 600 mm Semi-integrated: 570 mm Free standing: from 850 mm to 870 mm from 890 mm to 910 mm Semi-integrated: from 820 mm to 890 mm from 860 mm to 930 mm 15 Standard place settings min. 0,05 - max. 0,9 MPa (min. 0,5 – max. 9 bar) See rating plate 41 .



[You're reading an excerpt. Click here to read official SMEG](http://yourpdfguides.com/dref/5612194)

[DWAU315X1 user guide](http://yourpdfguides.com/dref/5612194)

<http://yourpdfguides.com/dref/5612194>