



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SMEG DWI710E1. You'll find the answers to all your questions on the SMEG DWI710E1 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SMEG DWI710E1
User guide SMEG DWI710E1
Operating instructions SMEG DWI710E1
Instructions for use SMEG DWI710E1
Instruction manual SMEG DWI710E1

INSTRUCTION MANUAL

EN



DISHWASHER



[You're reading an excerpt. Click here to read official SMEG DWI710E1 user guide](http://yourpdfguides.com/dref/3518137)
<http://yourpdfguides.com/dref/3518137>

Manual abstract:

Safety and operating instructions _____ 24 2. @@@@ @@@@ Cleaning and maintenance _____ 38 6.

@@ We advise you to carefully read all the instructions contained in this manual, in order to understand how to operate your dishwasher safely and correctly. The manual is divided into paragraphs, which provide a step by step description of the dishwasher functions, with clear instructions accompanied by detailed illustrations. Recommendations are given for the correct use of the baskets, spray arms, containers, filters, washing programs, and for operating the controls.

Follow the recommended cleaning procedures to ensure that your dishwasher always remains in perfect working order. @@@@ @@@@ THIS APPLIANCE

IS INTENDED FOR DOMESTIC USE, AND COMPLIES WITH THE EEC DIRECTIVES 72/23, 89/336 (INCLUDING 92/31) CURRENTLY IN FORCE, INCLUDING THE PREVENTION AND ELIMINATION OF RADIO FREQUENCY INTERFERENCE. THE APPLIANCE IS DESIGNED FOR THE FOLLOWING PURPOSE: WASHING AND DRYING OF DISHES; ANY OTHER USE SHALL BE CONSIDERED IMPROPER. THE MANUFACTURER DECLINES ALL RESPONSIBILITY FOR USES OTHER THAN THOSE DESCRIBED ABOVE. THE NAME PLATE FEATURING THE TECHNICAL DATA, SERIAL NUMBER AND MARKINGS IS VISIBLY POSITIONED ON THE INNER EDGE OF THE DOOR.

THE NAME PLATE ON THE INNER EDGE OF THE DOOR MUST NEVER BE REMOVED. DO NOT LEAVE THE DISCARDED PACKAGING MATERIALS UNSUPERVISED WITHIN THE HOME. SEPARATE THE VARIOUS MATERIALS WHICH MAKE UP THE PACKAGING AND TAKE THEM TO THE NEAREST SORTED WASTE COLLECTION CENTRE. THE APPLIANCE MUST BE PROVIDED WITH AN EARTH CONNECTION IN ACCORDANCE WITH THE ELECTRICAL SAFETY REGULATIONS IN FORCE. THE MANUFACTURER DECLINES ALL RESPONSIBILITY FOR DAMAGE TO PERSONS OR PROPERTY RESULTING FROM THE FAILURE TO EARTH THE APPLIANCE OR FROM A DEFECTIVE EARTH CONNECTION.

IF THE APPLIANCE IS NOT CONNECTED TO THE ELECTRICAL POWER SUPPLY BY MEANS OF A PLUG, IT IS NECESSARY TO INSTALL AN ISOLATION SWITCH WITH A CONTACT OPENING GAP OF AT LEAST 3 MM. THE PLUG ON THE POWER CORD AND THE CORRESPONDING SOCKET OUTLET MUST BE OF THE SAME TYPE, AND MUST CONFORM TO THE REGULATIONS IN FORCE. CHECK THAT THE VOLTAGE AND FREQUENCY OF THE ELECTRICAL POWER SUPPLY MATCH THE RATINGS ON THE NAME PLATE. AVOID USING ADAPTORS OR SHUNT CONNECTIONS. NEVER UNPLUG THE APPLIANCE BY PULLING THE POWER CORD.

AFTER INSTALLATION, THE PLUG MUST REMAIN ACCESSIBLE. IN THE EVENT OF DAMAGE TO THE POWER CORD, HAVE IT REPLACED BY A QUALIFIED TECHNICIAN. IF THE APPLIANCE IS INSTALLED ON A CARPETED OR COVERED FLOOR, ENSURE THAT THE OPENINGS ON ITS UNDERSIDE ARE NOT OBSTRUCTED. ALWAYS SWITCH OFF THE DISHWASHER AFTER EACH USE TO AVOID WASTING ELECTRICITY.

OBsolete appliances must be rendered unusable. CUT OFF THE MAINS POWER CORD AFTER UNPLUGGING IT FROM THE WALL OUTLET, AND MAKE SAFE ANY COMPONENTS WHICH MIGHT BE DANGEROUS FOR CHILDREN (LOCKS, DOORS, ETC.). THE APPLIANCE MUST THEN BE TAKEN TO A SORTED WASTE COLLECTION CENTRE. IN THE EVENT OF A FAULT, DISCONNECT THE DISHWASHER FROM THE ELECTRICAL POWER SUPPLY AND SHUT OFF THE WATER TAP. THEN CALL IN A QUALIFIED TECHNICIAN.

24 Safety instructions DO NOT USE APPLIANCES WHICH HAVE BEEN DAMAGED DURING TRANSIT! IF IN DOUBT, CONSULT YOUR DEALER. THE APPLIANCE MUST BE INSTALLED AND CONNECTED IN ACCORDANCE WITH THE INSTRUCTIONS PROVIDED BY THE MANUFACTURER OR BY A QUALIFIED TECHNICIAN. THE APPLIANCE IS INTENDED FOR USE BY ADULTS. DO NOT ALLOW CHILDREN TO COME NEAR OR PLAY WITH THE DISHWASHER. KEEP CHILDREN AWAY FROM DETERGENTS AND FROM THE OPEN DISHWASHER DOOR. THE PACKAGING MATERIALS (PLASTIC BAGS, POLYSTYRENE, METAL BARS, ETC.) MUST NOT BE LEFT WITHIN THE REACH OF CHILDREN. KEEP CHILDREN AWAY FROM THE OPEN DISHWASHER. THE APPLIANCE MAY CONTAIN RESIDUES OF DETERGENT WHICH CAN CAUSE IRREVERSIBLE DAMAGE TO THE EYES, MOUTH, AND THROAT, AS WELL AS POSSIBLE DEATH BY SUFFOCATION. DO NOT INTRODUCE SOLVENTS SUCH AS ALCOHOL OR TURPENTINE WHICH MAY CAUSE AN EXPLOSION.

DO NOT LOAD DISHES THAT ARE SOILED WITH ASH, WAX OR PAINTS. LEANING OR SITTING ON THE DISHWASHER DOOR WHEN OPEN MAY CAUSE THE APPLIANCE TO OVERTURN, PUTTING PEOPLE AT RISK. DO NOT UNDER ANY CIRCUMSTANCES TOUCH THE HEATING ELEMENT IMMEDIATELY AFTER THE END OF A WASHING PROGRAM. OVER TIME, THE DISHWASHER HEATING ELEMENTS MAY CHANGE COLOUR, IN PART OR OVERALL. THIS IS PERFECTLY NORMAL AND DOES NOT IN ANY WAY AFFECT THE OPERATION OF THE APPLIANCE.

DO NOT DRINK THE WATER RESIDUES WHICH MAY BE PRESENT INSIDE THE DISHES OR DISHWASHER AT THE END OF THE WASHING PROGRAM AND BEFORE THE DRYING CYCLE. AQUASTOP MODELS THE AQUASTOP DEVICE PREVENTS FLOODING IN THE EVENT OF A WATER LEAK. WHEN THE AQUASTOP DEVICE IS TRIPPED, CALL IN A QUALIFIED TECHNICIAN TO IDENTIFY AND REPAIR THE FAULT. IN MODELS EQUIPPED WITH THE AQUASTOP DEVICE, THERE IS A SOLENOID VALVE INSIDE THE WATER INTAKE HOSE. DO NOT CUT THE HOSE AND DO NOT ALLOW THE SOLENOID VALVE TO DROP INTO WATER.

IN THE EVENT OF DAMAGE TO THE WATER INTAKE HOSE, DISCONNECT THE APPLIANCE FROM THE ELECTRICAL POWER SUPPLY AND FROM THE WATER SUPPLY. IMMEDIATELY AFTER INSTALLING THE DISHWASHER, PERFORM A QUICK TEST OF THE APPLIANCE FOLLOWING THE INSTRUCTIONS BELOW. IF THE DISHWASHER FAILS TO OPERATE CORRECTLY, DISCONNECT IT FROM THE ELECTRICAL POWER SUPPLY AND CALL THE NEAREST TECHNICAL SERVICE CENTRE. DO NOT ATTEMPT TO REPAIR THE APPLIANCE. THE DISHWASHER MEETS ALL THE REQUIREMENTS SET OUT BY THE REGULATIONS IN FORCE CONCERNING SAFETY AND ELECTRICAL EQUIPMENT. ANY TECHNICAL CHECKS SHOULD BE CONDUCTED EXCLUSIVELY BY A TRAINED AND AUTHORISED TECHNICIAN: REPAIRS CARRIED OUT BY UNAUTHORISED PERSONS WILL INVALIDATE THE WARRANTY, AS WELL AS POSING A POTENTIAL HAZARD TO THE USER. The manufacturer declines all responsibility for damage to persons or property resulting from failure to observe the above precautions, from tampering with even a single component of the appliance, or from the use of non original spare parts. 25 Installation instructions 2. Installation and hook-up Remove the polystyrene basket retainers. Position the appliance in the desired place of installation.

The back or sides of the dishwasher may be placed up against walls or other furniture units. If the dishwasher is installed near a heat source, fit the special insulating panel to prevent overheating and malfunction of the appliance. To ensure stability, install integrated or built-under dishwashers only under continuous worktops, and screw them to the adjacent units. To facilitate the installation procedure, the intake and drain hoses can be positioned in any direction; make sure that the hoses are not kinked, crushed or pulled too tightly. A hole at least 8 cm in diameter is required to allow the power supply cable and pipes to pass. Level the appliance on the floor using its adjustable feet. This operation is essential for ensuring correct operation of the dishwasher. Some models are equipped with only one adjustable foot at the rear, which can be adjusted by turning the screw on the lower front part of the appliance.

[You're reading an excerpt. Click here to read official SMEG](#)



[DWI710E1 user guide](#)

<http://yourpdfguides.com/dref/3518137>

2.1 Water supply connection Preventing the risk of clogging or damage: if the water pipe is new or has not been used for a long time, before connecting to the water supply check that the water is clear and free of impurities, to prevent damage to the appliance.

The dishwasher must always be connected to the water system with new hoses; old or used hoses must never be reused. **CONNECTING TO THE WATER SUPPLY** Connect the intake hose to a cold water supply with 3/4" gas thread, inserting the filter A supplied with the dishwasher. It is important to prevent the hose from coming loose and falling. After approximately 1 minute the dishwasher will advance to the end of cycle. **CHANGING THE PROGRAM** To change the program in progress, simply open the door and select a new program.

When the door is closed the dishwasher will automatically select the new program. **END OF CYCLE** At the end of the washing cycle, a brief acoustic device is sounded and the indicator light for the program which has just ended blinks. To switch off the dishwasher, open the door and press the ON/OFF button (a hot water supply up to 60°C). When possible, disable the drying cycle and leave the door open at the end of the washing cycle: the residual air and heat will dry the dishes perfectly. **TO CUT DOWN ON DETERGENT CONSUMPTION!**

.. AND PROTECT THE ENVIRONMENT The phosphates contained in dishwasher detergents are harmful to the environment. To avoid using excessive amounts of detergent and to save on electricity, observe the following: separate the more delicate items from dishes that are more resistant to aggressive detergents and high temperatures; do not pour the detergent directly on the dishes. **REMOVING THE DISHES** At the end of the washing program, wait at least 20 minutes before removing the dishes, to allow them to cool down. To prevent any water droplets on the upper basket from falling on the dishes in the lower basket, it is advisable to unload the lower basket first, and then the upper basket. **29 User instructions 4. Operating instructions** Once the dishwasher has been correctly installed, prepare for the system becomes fully efficient again, so traces of white coating may still be found on the tank and dishes. If the problem persists for too long, contact the After-Sales Service. The introduction of detergent into the rinse aid dispenser, even in liquid form, will damage the dishwasher.

33 User instructions 4.3 General warnings and recommendations Before using the dishwasher for the first time, it is advisable to read the following recommendations concerning dish types to be washed and their loading. There are generally no constraints on the washing of domestic dishes, but in certain cases it is necessary to take their characteristics into account. Before loading the dishes into the baskets it is necessary to: remove coarse food remains: e.g. bones, fish-bones, etc. which may clog the filter or damage the wash pump. soak any pots or pans with burnt-on food remains on the bottom to facilitate removal, then load them into the **LOWER BASKET**. If a small quantity of dishes has to be washed, use the "1/2 load wash" option; this saves electricity and water. Remember to load the upper basket only; the lower basket must be left empty.

There is no need to pre-wash the dishes under running water before loading them into the baskets since this only wastes water. Correct loading of the dishes helps ensure optimal washing results. **WARNING!** Make sure that the dishes are securely in place so that they cannot tip over or obstruct the rotation of the spray arms during the washing cycle. Do not place very small objects in the baskets as these could fall and obstruct the spray arms or the wash pump. Containers such as cups, bowls, glasses and pots should always be loaded with the opening facing downwards and with any cavities at an angle, to allow the water to drain out.

Do not stack dishes or place them in such a way that they cover one other. Do not place glasses too close together because they may knock against each other and break, or there might be staining at the point where they touch. **MAKE SURE** that the items being washed are dishwasher-safe. Items which are not dishwasher-safe: Wooden dishes, pots or pans: these may be damaged by the high washing temperatures. Handcrafted items: these are rarely suitable for washing in a dishwasher.

Heat resistant plastic dishes must be washed in the upper basket. **Silverware:** silver items may stain. **Pots, pans and their covers** must be loaded upside down. When loading soup plates and dessert bowls, be sure to leave a gap between them. Loading examples: **35 User instructions CUTLERY BASKET** This varies in shape according to the model and features either a single compartment or separate compartments. The cutlery should be arranged in an orderly manner inside the basket, with the handles pointing downwards. Take care during loading to avoid injury from the knife blades. The basket is suitable for all types of cutlery, except those long enough to interfere with the upper spray arm. Ladles, wooden spoons and cooking knives can be placed in the upper basket, making sure that the knife blades do not protrude from the basket. **UPPER BASKET** It is recommended to load the upper basket with small- or medium-sized items such as glasses, small plates, tea or coffee cups, shallow bowls and light objects made from heat resistant plastic.

If the upper basket is used in the lowermost position, it can also be loaded with serving dishes, provided they are only slightly soiled. To make full use of the space available, the top basket has two plastic grids that can be lifted to make room for tall glasses such as stem glasses. **LOADING THE UPPER BASKET** Load the dishes with the top side facing forwards; cups and concave containers should always be loaded with the opening facing down. The left side of the basket can be loaded with cups and glasses on two levels. In the centre section, plates and saucers can be loaded vertically into the supports provided. Loading examples: **36 User instructions ADJUSTING THE UPPER BASKET** The upper basket can be adjusted in two positions, according to the user's needs and according to the height of the dishes in the lower basket. Proceed as follows **Pull-out version:** pull out the right-hand basket guide; remove the stop, first releasing it as shown in the diagram; push the guide to free the wheels; fit the upper or lower pair of wheels into the guide, depending on the setting required; return the stop to its original position. **Push-button version:** pull out the basket to its limit position and pull the right side upwards.



[You're reading an excerpt. Click here to read official SMEG
DWI710E1 user guide
http://yourpdfguides.com/dref/3518137](http://yourpdfguides.com/dref/3518137)

· At this point it is possible to load larger sized plates into the lower basket. To return to the original position, pull out the upper basket again and press the release lever.

· 37 User instructions 5. @@@@Clean the door gaskets with a damp sponge. @@@@After having closed the water supply tap, unscrew the end of the water intake hose, remove the filter A and clean it delicately under running water. Reassemble filter A in its seat and carefully screw the water intake hose back into position. CLEANING THE SPRAY ARMS The spray arms can be easily removed for periodic cleaning of the nozzles, to prevent possible clogging.

Wash them under running water and carefully replace them in their seats, checking that their rotary movement is in no way impeded. To remove the upper spray arm, unscrew locking ring R. · To remove the lower spray arm, simply lift it up, pulling by the central part. @@@@After reassembly, check that the spray arms turn freely. @@@@ · GENERAL WARNINGS AND RECOMMENDATIONS FOR CORRECT MAINTENANCE: · · · The filters should be cleaned under running water using a stiff brush.

It is essential to thoroughly clean the filters according to the above instructions: the dishwasher cannot function if the filters are clogged. Carefully replace the filters in their seats, to avoid damaging the wash pump. PROLONGED DISUSE: · · · · Run the soak program twice in succession. Unplug the power cord from the socket. Leave the door slightly open, in order to prevent the formation of unpleasant odours inside the washing tank. Fill the rinse aid dispenser. Shut off the water supply tap. BEFORE STARTING THE DISHWASHER AFTER PROLONGED DISUSE: · · · Check that there are no deposits of sludge or rust inside the water pipe: if there are, allow the water to run from the water supply tap for a few minutes. Plug the power cord back into the socket. Reconnect the water intake hose and open the tap again.

39 User instructions TROUBLESHOOTING MINOR PROBLEMS In some cases it is possible to remedy minor problems by referring to the following instructions: If the program fails to start, check that: · · · the dishwasher is connected to the electrical power supply; there is no power failure; the water tap is open; the dishwasher door is properly closed. If water remains inside the dishwasher, check that: · · the drain hose is not kinked; the drain siphon is not obstructed; the dishwasher filters are not clogged. If the dishes are not being cleaned properly, check that: · · · · the correct amount of detergent has been added; there is regenerating salt inside the special container; the dishes are being loaded correctly; the selected program is suitable for the dish types and their degree of soiling; all the filters are clean and positioned correctly; the spray arm nozzles are not obstructed; there is no object obstructing the rotation of the spray arms. If the dishes fail to dry or remain dull, check that: · · there is rinse aid inside the special container; the rinse aid dispenser setting is correct; the detergent used is of good quality and has not lost its effectiveness (for example, through incorrect storage, with the box left open). If the dishes show signs of streaking, staining, etc., check that: · the rinse aid dispenser setting is not too high. If there are visible traces of rust inside the tank: · · the tank is made of steel, and therefore any rust marks are due to external elements (fragments of rust from the water pipes, pots, cutlery, etc.). Special products are commercially available to remove such marks; check that the amount of detergent being used is correct. Certain detergents can be more corrosive than others.

check that the cap of the salt container is securely closed, and that the water softening setting is correct. If after following the above troubleshooting instructions the problem persists, call the nearest AfterSales Centre. WARNING: any operations performed on the appliance by unauthorised persons are not covered by the warranty and shall be paid for by the user. 40 User instructions 6. Troubleshooting The dishwasher is capable of signalling a number of faults through the simultaneous illumination of several indicator lights, with the following meanings: FAULT DESCRIPTION The dishwasher's anti-flooding system has been activated (only for models equipped with the "TOTAL ACQUASTOP" device).

This alarm is triggered in the event of a water leak in the dishwasher. In such circumstances the technical service centre must be called. The dishwasher fails to heat the water. E1 E3 Repeat the wash program. If the problem persists, contact the customer technical service centre.

The temperature monitoring system has failed. E4 Switch the dishwasher off, switch it back on and restart the washing program. If the alarm recurs, call the After Sales Service. The dishwasher fails to draw water. E5 Ensure the plumbing connections are in order and that the water supply tap is open. The dishwasher fails to drain. E6 Check that the drain hose is not kinked, the siphon is not obstructed and the filters are not clogged. Light off Light on Light flashing If an alarm occurs the appliance interrupts the program in progress and signals a fault. · · In case of E1, E3 and E4, the washing program must be set again to continue. In case of E5 and E6, simply open and close the door to continue (once the cause of the fault has been illuminated).

41 User instructions TECHNICAL DATA Width Depth measured flush with the outer edge of the control panel Height Capacity Water supply pressure Electrical characteristics 597 ÷ 599 mm 570 mm from 820 mm to 870 mm 12 Standard place settings min. 0,05 max. 0,9 MPa See rating plate 42 1 820 - 870 567 598 2 60 2 1 min. 567 52 0 60 130 1 75 - 165 90 3 3 4 Solo su alcuni modelli Certain models only Seulement sur certains modèles nur bei einige Modellen Sólo en algunos modelos alleen indien van toepassing 820870 2 816-870 4 5 max. 1,10 m 6 1/2" S N SF 3/4" 0,3-10 bar 0,3-10 bar min. 0,5 m 3x16 5 min. 0,4 m min. 0,4 m 7 1,14 m 1,23 m 1,78 m 1,25 m 1,50 m 1,66 m 6 min. 0,00 m 820870 7 SUPERFICIE INTERNA SURFACE INTERNE INNER SURFACE INNENFLACHE LATO SUPERIORE BORD SUPERIEURE UPPER EDGE OBERKANTE 8 8 9 9 10 Solo su alcuni modelli - Certain models only Seulement sur certains modèles - nur bei einige Modellen Sólo en algunos modelos - alleen indien van toepassing 11 12 10 Regolazione vite tensione molle (11) - Copertura foto con tappo in dotazione (12) Door spring Adjustment device (11) - Covering of hole using cap provided (12) Réglage des ressorts de la porte (11) - Couverture du trou avec le bouchon fourni (12) Vorrichtung für die Einstellung der Spannung der Türfedern (11) Abdecken des Lochs mit dem mitgelieferten Stopfen (12) 11 14 13 12 1 10 12 15 8 14 13 9.



[You're reading an excerpt. Click here to read official SMEG](http://yourpdfguides.com/dref/3518137)

[DWI710E1 user guide](http://yourpdfguides.com/dref/3518137)

<http://yourpdfguides.com/dref/3518137>