



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SMEG FME24X-2. You'll find the answers to all your questions on the SMEG FME24X-2 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SMEG FME24X-2
User guide SMEG FME24X-2
Operating instructions SMEG FME24X-2
Instructions for use SMEG FME24X-2
Instruction manual SMEG FME24X-2



- ① **Forno a microonde**
Istruzioni per l'uso
- Ⓣ **Four à micro-ondes**
Notice d'utilisation
- Ⓝ **Magnetron**
Gebruiksaanwijzing
- Ⓢ **Mikrowellengerät**
Gebrauchsanweisung
- Ⓜ **Microwave oven**
Instruction manual
- Ⓛ **Horno microondas**
Guía de instrucciones
- Ⓟ **Forno micro-ondas**
Manual de instruções



[You're reading an excerpt. Click here to read official SMEG FME24X-2 user guide](http://yourpdfguides.com/dref/3505153)
<http://yourpdfguides.com/dref/3505153>

Manual abstract:

.....
.....
.....
.....

. 3 F FRANÇAIS Notice d'utilisation
.....
.....
.....

... 23 NEDERLANDS Gebruiksaanwijzing
.....
.....
.....

... 43 D DEUTSCH Gebrauchsanweisung
.....
.....
.....

... 63 ENGLISH Operating instructions
.....
.....
.....

.. 83 E ESPAÑOL Guía de instrucciones
.....
.....
.....

. 103 P PORTUGUÊS Manual de instruções
.....
.....
.....

123 2 Contents Installation
.....
.....
.....

.84
.....
.....
..... .87 Warning
.....
.....
.....

..... .86 General description The control Panel .
.....
.....
.....

..... .88 Setting the clock / Microwave power settings
.....
..... 8 9 The display ...
.....
.....
.....

..... .90 ..
.....
.....
.....

.. .91 The selector knobs / Programming Microwave programming
.....

.....
.....
92 The grilling rack / The grill function
..... 93 Programming the grill / the microwave + grill function .
. . . 94 The pizza function
.....
.....
..... 95 The pizza dish .
.....
.....
.....
..... 97 Linked programmes . .
.....
.....
.....
. . . 98 Recommendations
.....
.....
.....
. 99 Care & cleaning
.....
.....
. . . 100 Troubleshooting guide After Sales Service . .
.....
.....
.....
101
.....
.....

. . . . 102 Important safety instructions. Read carefully and keep for future reference. 83 Installation BEFORE CONNECTION · Check whether your oven has suffered any damage during transport (deformed door or door seal, etc.). If you see any signs of damage, contact your dealer before use.

In order to easily locate the reference information for your appliance, we recommend that you note these data on the "After-Sales Service Department and Customer Relations" page. · Verify the power voltage. If there is a PERMANENT undervoltage (200-210 volts), consult your electrical installer. ELECTRICAL CONNECTION · Your installation must be protected by a 16 Amp thermal fuse. · It is mandatory to use a power point with a ground terminal, connected in accordance with current safety regulations.

@@@ In case of damage, call in a specialised technician trained by the manufacturer. Ensure that: -The electrical installation has sufficient voltage. -The electrical wires are in good condition. -The diameter of the wires complies with the installation requirements. The electrical connections are made before the appliance is installed in its housing.

@@@@@ They travel through all other materials. They are absorbed by water, fat and sugar molecules. @@ The penetration depth of waves into the food is approximately 2.5 cm; if the food is thicker, the core of the food will be cooked by conduction, as in traditional cooking. It is valuable to note that the microwaves trigger within the food a simple thermal phenomenon and that they are not harmful to one's health. Fig.01 PROTECTING THE ENVIRONMENT This appliance's packing materials are recyclable. Recycle them and play a role in protecting the environment by disposing of them in municipal containers provided for this purpose. Your appliance also contains various recyclable materials. Thus it is stamped with this logo to indicate to you that used appliances should be mixed with other waste.

The recycling of appliances organised by your manufacturer will take place under the best conditions, in compliance with European directive 2002/96/CE concerning electrical and electronic equipment waste. Consult your city hall or your retailer to find the drop-off points for used appliances that is nearest to your home. We thank you for your help in protecting the environment. 85 Warning · Warning: Ensure that your appliance has not suffered any damage during transport (deformed seal or door, etc...). If you see any kind of damage, before doing anything else, contact your retailer. @@@@ @@@@ @@@@ · The contents of baby bottles and baby food jars should be shaken or stirred and their temperature checked before consumption to avoid burns. Never heat a baby bottle with the nipple on (risk of explosion).

· Make sure children do not play with the appliance. Do not allow children to use the microwave oven without supervision, unless appropriate instructions have been given so that the child can use the oven safely and understands the dangers of incorrect operation. · Liquids and other foods should not be heated in sealed containers because they may explode. It is recommended that you avoid heating eggs in their shells and whole hard-boiled eggs in the microwave oven because they run the risk of explosion, even after cooking is complete. · Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.

· In the case of small quantities (a sausage, croissant, etc.) place a glass of water next to the food. Excessive cooking times may dry out foods and carbonise them. To avoid such incidents, never use the same times recommended for cooking in a traditional oven. · If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.

· In order to evacuate moisture, your appliance is fitted with a delayed ventilation function. Depending on the applied cooking mode (solo/grill/combination), the oven ventilation will continue to operate after the cooking end. · The appliance is not intended to be used by persons (including children) with reduced

· Do not place the PIZZA dish in a traditional oven, on gas, electric or other stoves or on any very hot surface. - The PIZZA dish may be preheated for certain purposes but never preheat for longer than 2 minutes. @@@Example : Using linked programming to defrost ten minutes followed by simmer level microwave + grill programme for 20 minutes Proceed as if setting only a defrost programme : - press the key and select the defrost function - set the programme time (ex.

10 min). 10:00 Instead of pressing START, programme the next operation : - press the grill key to the defrost time. 4 times to select the microwave + grill function - set the programme length by adding the microwave + grill time (ex. 20 min) 30:00 Press START programme. .

The linked microwave + grill programme will automatically begin at the end of the defrost 98 Recommendations WHILE THE OVEN IS OPERATING : · You may stop or start the turntable revolving during a programme by pressing the TURNTABLE STOP key . · To change the food type or function selection, press the CANCEL key programme again. C twice and pro- · If you open the door before the end of the programme, shut the door and press the START key to continue the programme. , a beep indicates the mid-point of the proto continue the second half of · When using the defrost function programme (the oven continues to o.



[You're reading an excerpt. Click here to read official SMEG](#)

[FME24X-2 user guide](#)

<http://yourpdfguides.com/dref/3505153>